



KSLR260

Basket adapter

INSTRUCTIONS LEAFLET



This document refers to the Smeg accessory “KSLR260”. The accessory can only be installed and used on Smeg devices.

In order for the accessory to be used properly and safely, this manual must be used in conjunction with the manual of the professional use washing machines in which it is installed.

Failure to read, understand or correctly interpret the instructions contained in this manual may cause damage to the appliance, and as well as being a source of danger for the operator, this may considerably reduce the performance of the machine.

The manufacturer declines all liability for uses other than those indicated in this leaflet.

This manual is for informational purposes only. The contents of this leaflet and the equipment described herein may be subject to modification without prior notice.

19 390 6021 02	29/01/2018
Rev.	Date

**INFORMATION AND ASSISTANCE FOR PRODUCTS FROM THE
SMEG FOODSERVICE DIVISION**

Our Sales Office staff will be happy to provide you with all the information you may require regarding prices and offers.

Our Technical Assistance Department can provide you with instructions about how to operate your appliance correctly or if necessary, put you in contact with your nearest Authorised Assistance Centre.





Internet: www.smegfoodservice.com, email : foodservice@smeg.it


Models (machine groups) on which the KSLR260 can be used

SWT260..	SWT262..	SW262..
----------	----------	---------

Be careful when inserting the basket (see notes and diagrams).

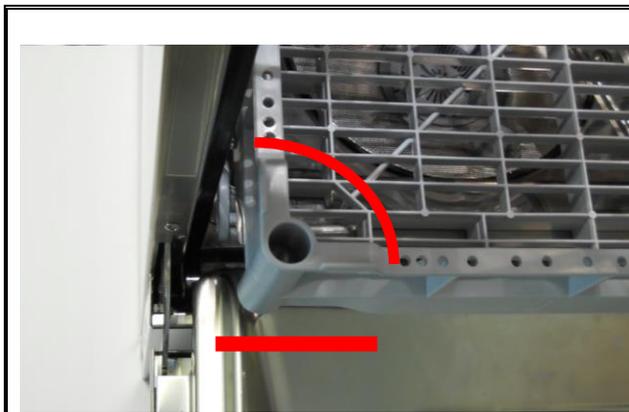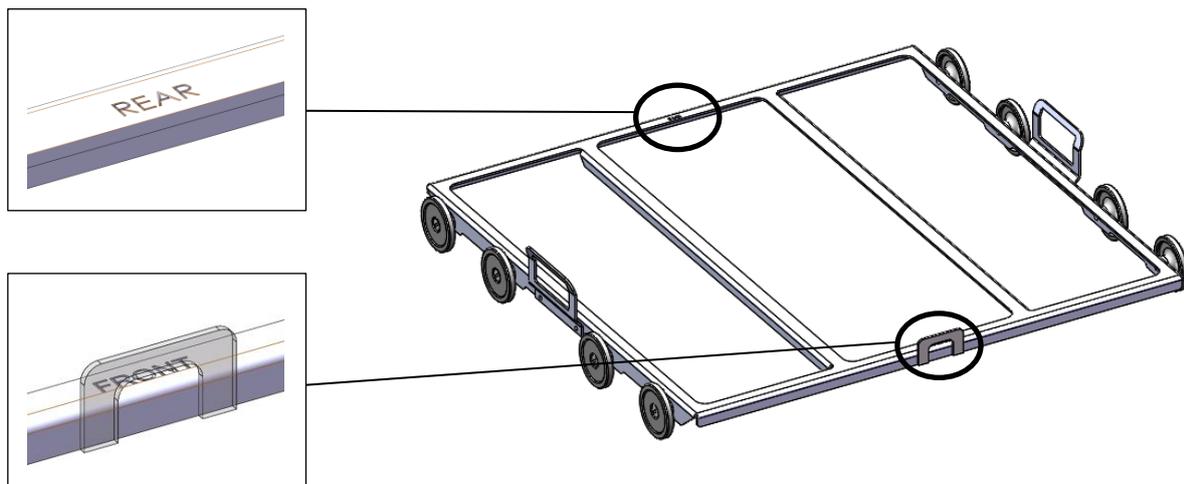

INCORRECT

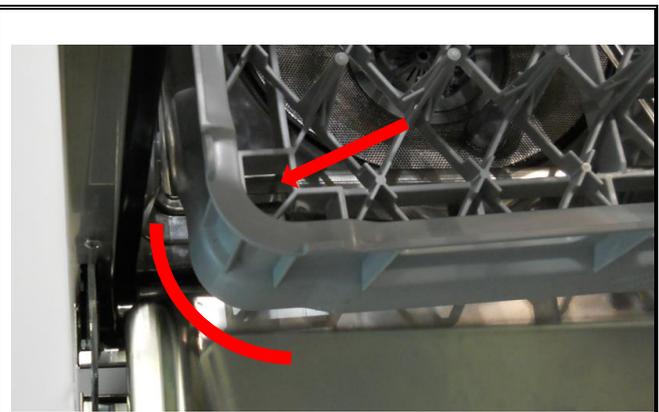

CORRECT

