

# Contents

<b>1 Instructions</b>	<b>34</b>
1.1 General safety instructions	34
1.2 Manufacturer liability	35
1.3 Appliance purpose	35
1.4 Disposal	35
1.5 Identification plate	36
1.6 This user manual	36
1.7 How to read the user manual	36
<b>2 Description</b>	<b>37</b>
2.1 General Description	37
<b>3 AUse</b>	<b>39</b>
3.1 Instructions	39
3.2 Preliminary operations	40
3.3 Using the hob	40
<b>4 Cleaning and maintenance</b>	<b>53</b>
4.1 Instructions	53
4.2 Cleaning the surfaces	53
4.3 Ordinary weekly cleaning	53
4.4 Food stains or residues	53
4.5 What to do if...	54
<b>5 Installation</b>	<b>55</b>
5.1 Electrical connection	55
5.2 Safety instructions	57
5.3 Section cut from the countertop	58
5.4 Mounting	60

We advise you to read this manual carefully, which contains all the instructions for maintaining the appliance's aesthetic and functional qualities.

For further information on the product: [www.smeg.com](http://www.smeg.com)



## 1 Instructions

### 1.1 General safety instructions

#### Risk of personal injury

- During use the appliance and its accessible parts become very hot.
- Never touch the heating elements during use.
- Keep children under eight years of age at a safe distance if they are not constantly supervised.
- Children must never play with the appliance.
- Never rest metallic objects such as knives, forks, spoons and lids on the appliance during use.
- Switch off the appliance immediately after use.
- Never try to put out a fire or flames with water: Turn off the appliance and smother the flames with a fire blanket or other appropriate cover.
- Cleaning and maintenance must not be carried out by unsupervised children.
- Have qualified personnel carry out installation and assistance interventions according to the standards in force.
- CAUTION – The cooking process has to be supervised. A short term cooking process has to be supervised continuously.

- Warning – Unattended cooking on a hob with fat or oil can be dangerous and may result in a fire
- Do not modify this appliance.
- Do not insert pointed metal objects (cutlery or utensils) into the slots in the appliance.
- Do not try to repair the appliance yourself or without the intervention of a qualified technician.
- The power cable must only be installed or replaced by a qualified technician.
- If the power cable becomes damaged, contact technical support immediately to arrange for it to be replaced in order to avoid possible hazards.

#### Risk of damaging the appliance

- Do not use abrasive or corrosive detergents (e.g. scouring powders, stain removers and pan scourers) on glass parts.
- Use wooden or plastic utensils.
- Do not seat on the appliance.
- Do not use steam jets to clean the appliance.
- Do not obstruct ventilation openings and heat dispersal slots.
- Never leave the appliance unattended during cooking operations where fats or oils could be released.
- Never leave objects on the cooking surface.



## Instructions

- Do not use the appliance to heat rooms for any reason.

### For this appliance

- If your hob has a cookware detector, do not rely on it exclusively.
- Remove any traces of liquid from the lid (if fitted) before opening.
- Let the cooking surface cool down before closing the lid.
- If cracks or fissures form, or if the glass ceramic cooking surface breaks, turn off the appliance immediately. Disconnect the power supply and call Technical Support.
- People who have pacemakers or other similar devices fitted must make sure that the operation of these devices is not jeopardised by the inductive field, whose frequency range is between 20 and 50 kHz.
- In conformity with the provisions regarding electromagnetic compatibility, the electromagnetic induction cooking hob comes under group 2 and class B (EN 55011).

### 1.2 Manufacturer liability

The manufacturer declines all liability for damage to persons or property caused by:

- Use of the appliance other than that specified;
- Failure to observe the provisions of the user manual;
- Tampering with any part of the appliance;
- Use of non-original spare parts.

### 1.3 Appliance purpose

- This appliance is intended for cooking food in the home environment. Every other use is considered improper.
- This appliance may be used by children aged at least 8 and by people of reduced physical, sensory or mental capacity, or lacking in experience in the use of electrical appliances, provided that they are supervised or instructed by adults who are responsible for their safety.
- The appliance is not designed to operate with external timers or with remote-control systems.

### 1.4 Disposal



This appliance must be disposed of separately from other waste (Directives 2002/95/EC, 2002/96/EC, 2003/108/EC). The appliance does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives.

To dispose of the appliance:

- Cut the power supply cable and remove it along with the plug.



**Power voltage**

**Danger of electrocution**

- Disconnect the mains power supply.
- Unplug the appliance.



- Deliver the appliance to the appropriate recycling centre for electrical and electronic equipment waste, or return it to the retailer when purchasing an equivalent product, on a one for one basis.

Our appliances are packed in non-polluting and recyclable materials.

- Deliver the packing materials to the appropriate recycling centre.



## Plastic packaging Danger of suffocation

- Do not leave the packaging or any part of it unattended.
- Do not let children play with the plastic bags.

## 1.5 Identification plate

The identification plate bears the technical data, serial number and brand name of the appliance. Do not remove the identification plate for any reason.

## 1.6 This user manual

This user manual is an integral part of the appliance and must therefore be kept in its entirety and within the user's reach for the whole working life of the appliance.

Read this user manual carefully before using the appliance.

## 1.7 How to read the user manual

This user manual uses the following reading conventions:

### Instructions



General information on this user manual, on safety and final disposal.

### Description



Description of the appliance and its accessories.

### Use



Information on the use of the appliance and its accessories, cooking advice.

### Cleaning and maintenance



Information for proper cleaning and maintenance of the appliance.

### Installation



Information for the qualified technician: Installation, operation and inspection.



Safety instructions



Information



Advice

1. Sequence of instructions for use.


- Standalone instruction.




# Description

## 2 Description



### 2.1 General Description

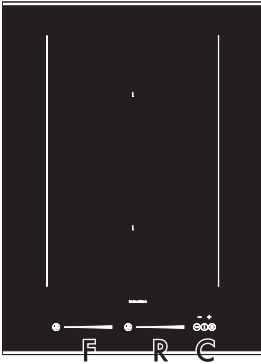

38 cm

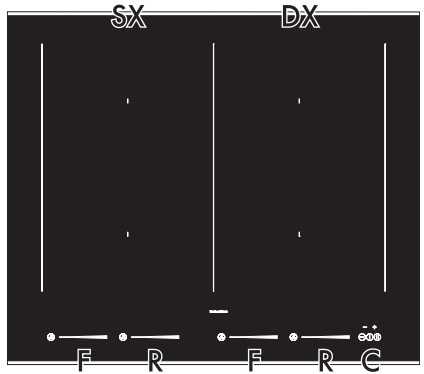

60 cm

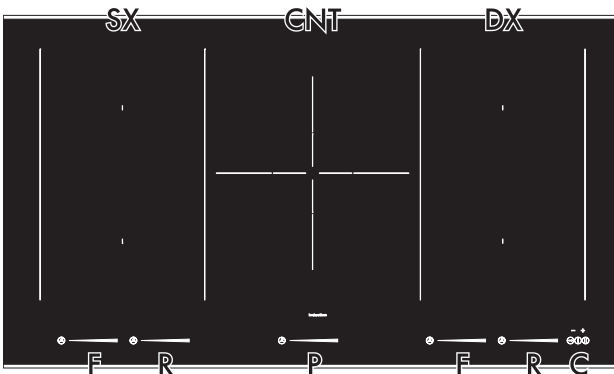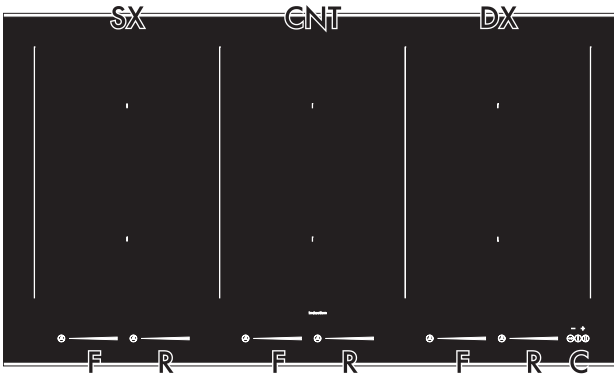

90 cm

# Description



**SX** = Left cooking zone

**CNT** = Centre cooking zone

**DX** = Right cooking zone

**F** = Front plate controls

**R** = Rear plate controls

**P** = Paella plate control

**C** = General controls zone

**NE**

## Table of power draws

Large	Plate measurements (mm)	Max. power absorbed (W)*	Power absorbed in Power function (W)*
<b>F - R</b>	230 x 180	2100	3700
<b>P</b>	280 x 280	3700	5500

\* power levels are approximate and may vary according to the pan used or the settings made.

## Advantages of induction cooking



The appliance is equipped with an induction generator for each cooking zone. Each generator located under the glass ceramic cooking surface creates an electromagnetic field which induces a thermal current in the base of the pan. This means the heat is no longer transmitted from the hob to the pan but created directly inside the pan by the inductive current.

- Reduced danger of burns as the cooking surface is only heated under the base of the pan; foods which overflow do not stick.

- Energy saving thanks to the direct transmission of energy to the pan (suitable magnetisable cookware is required) compared to traditional electric cooking.
- Improved safety as the energy is only transmitted to the pan placed on the hob.
- High level of energy transmitted from the induction cooking zone to the base of the pan.
- Rapid heating speed.



## 3 Use

### 3.1 Instructions



#### High temperature Danger of burns

- Protect your hands wearing heat-proof gloves during use.
- Do not touch or clean the hob surface during operation or when the residual heat indicator lights are still on.
- Do not put empty pans or frying pans on switched on cooking zones.
- Do not allow children younger than 8 years old to come near the appliance when in operation.
- Activate the key lock when you have children or pets which could reach the hob.
- After use the cooking zones remain hot for a certain period of time after they have been turned off. Do not touch the hob surfaces.



#### High temperature Danger of fire or explosion

- Do not use or leave flammable materials near the appliance or directly underneath the hob.
- Do not cook using closed tins or containers, plastic kitchenware or containers.
- Do not leave the appliance unattended during cooking operations where fats or oils could be released.
- In case you notice cracks or fissures or you cannot turn off the appliance, disconnect the power supply and contact the Assistance Centre.



#### Improper use Risk of damage to surfaces

- Do not use the hob if the pyrolytic cycle is taking place inside any oven installed below.
- Never place pans with bases which are not perfectly flat and smooth.
- Avoid hard, solid objects falling on the cooking surface.
- Do not use the hob as a support surface.



## 3.2 Preliminary operations

In order to remove any moisture that could have accumulated during the manufacturing process and for the electronic circuits and control keypad to work properly:

1. Remove the protective films from the external surfaces of the appliance and accessories.
2. Remove any labels (apart from the technical data plate).

## 3.3 Using the hob



On first connection to the electrical mains, an automatic check will be carried out that will switch on all indicator lights for a few seconds.

All the appliance's control and monitoring devices are located together on the front panel. The induction hob is controlled by means of the Touch control sensor keys. Lightly touch a symbol on the glass ceramic surface. A beep will sound to confirm every effective touch.

## List of symbols



On/Off key: turns the hob on or off.



Pause key: pauses cooking.



Control lock key: prevents accidental operation of controls.



Increase key: increases the cooking time or timer.



Decrease key: decreases the cooking time or timer.



Scroll bar: increases or decreases the power level.



Special functions key: activates the appliance's special functions.

## Cookware suitable for use in induction cooking

Cookware used on the induction cooking surface must be made of metal, with magnetic properties and a sufficiently large base.

### Suitable cookware:

- Enamelled steel cookware with thick bases.
- Cast iron cookware with an enamelled base.
- Cookware in multilayer stainless steel, ferritic stainless steel and aluminium with a special base.

### Unsuitable cookware:

- Copper, stainless steel, aluminium, fireproof glass, wood, ceramic and terracotta cookware.






## Use

To see whether the pan is suitable, bring a magnet close to the bottom: if it is attracted, the pan is suitable for induction cooking.

If you do not have a magnet, you can put a small amount of water in the pan, place it on a cooking zone and start the cooking

zone. If the symbol  appears on the display, it means the pan is not suitable.

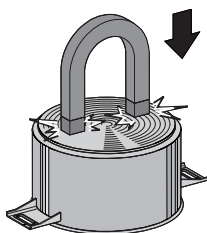

Use only cookware with a perfectly flat bottom which is suitable for induction hobs. Using cookware with an irregular bottom could jeopardise the efficiency of the heating system and prevent cookware from being detected on the cooking zone.

### Minimum pan diameter

Hot plate	minimum $\varnothing$ (cm)	recommended $\varnothing$ (cm)
<b>F - R</b>	9	11,5
<b>Multizone</b>	2 x 11 1 x 22	2 x 13,5 1 x 24,5
<b>P</b>	16	18

### Limiting the cooking duration

The hob has an automatic device which limits the duration of use.

If the cooking zone settings are not changed, the maximum duration of operation for each zone depends on the power level selected.

When the device for limiting the duration of use is activated, the cooking zone turns off, a short alert sounds and, if the zone is hot,

the symbol  appears on the display.

Set power level	Maximum cooking duration in hours
1	8 ½
2	6 ½
3	5 ½
4	4 ½
5	3 ½
6	2 ½
7	2 ½
8	2
9	1 ½

### Protection from overheating

If the hob is used on full power for a long period, the electronics will have trouble cooling down if the room temperature is high.

To avoid excessively high temperatures forming in the electronics, the power to the cooking zone is reduced automatically.



### Advice on energy-saving

- The diameter of the base of the pan must not exceed the width of the printed cooking zone.
- Pans must not be positioned beyond the perimeter of the hob or above the controls on the front.
- When buying a pan, check whether the diameter indicated is that of the base or the top of the pan, as the top is almost always larger than the base.
- When preparing dishes with long cooking times, you can save time and energy by using a pressure cooker, which also makes it possible to preserve the vitamins in the food.
- Make sure that the pressure cooker contains enough liquid as, if there is not enough and it overheats, this may cause damage to both the pressure cooker and the cooking zone.
- If possible, always cover pans with a suitable lid.
- Choose a pan suitable for the quantity of food to be cooked. A large, half-empty pan leads to a waste of energy.



Under certain circumstances, if the hob and the oven are being used at the same time, the maximum power limit that can be used by the electrical system might be exceeded.



### Power levels

The power in the cooking zone can be adjusted to various levels. The table shows the levels suitable for various types of cooking.

Power level	Suitable for:
0	OFF setting
1 - 2	Cooking small amounts of food (minimum power)
3 - 4	Cooking
5 - 6	Cooking large quantities of food, roasting larger portions
7 - 8	Roasting, slow frying with flour
9	Roasting
p *	Roasting / browning, cooking (maximum power)

\* see Power function

### Switching the hob on and off

To activate the hob keep the On/Off key  pressed for at least 1 second. To deactivate the hob keep the On/Off key  pressed for at least 2 seconds.



If no power value is selected within a few seconds, the hob is automatically deactivated.




## Use

### Switching on the cooking zone automatically

After switching on the hob:

- Position a pan (suitable for induction cooking and not empty) on the cooking zone you wish to use.




The display of the cooking zone used will turn on: the power value indicated is .



### Adjusting the cooking zone


After switching on the hob:

1. Place a finger on the left-hand side of the scroll bar of the cooking zone to be used.



The display of the cooking zone used will turn on: the power value indicated is .

2. Move your finger to the left or right on the scroll bar to select the cooking power, between  and , or else activate the Power function (see "Power Function").

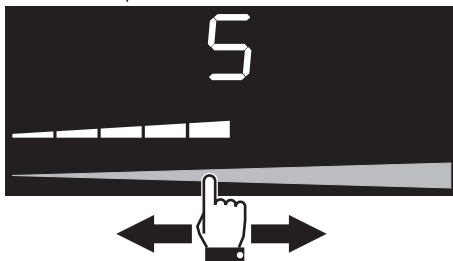

The display of the cooking zone used will show the set cooking power.


### Switching off the cooking zone

1. Move your finger all the way to the left on the scroll bar of the cooking zone you wish to turn off.



The display for the cooking zone will turn off.



Hold the On/Off key  down for at least 2 seconds to switch off all cooking zones at the same time.




## Quick selection

**i** This function allows you to quickly set the cooking zones to the required power.

After switching on the hob:

1. Place a finger on the scroll bar of the cooking zone to be used, at approximately the required power level.

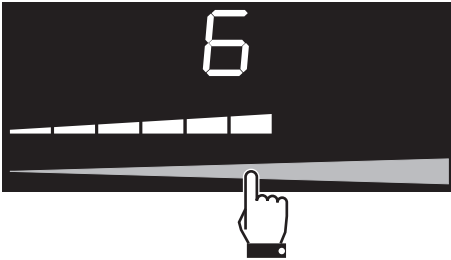

2. Move your finger to the left or right to select the required cooking power.

## Power Function

**i** This function allows you to use the maximum possible power for the cooking zone.

After switching on the hob:

1. Place a finger on the left-hand side of the scroll bar of the cooking zone to be used.



The display of the cooking zone used will turn on: the power value indicated is **1**.

2. Move your finger all the way to the right of the scroll bar to select the Power function.




The display of the cooking zone used will show **P**.

It is possible to perform quick activation of the power function.

- After turning the hob on, place your finger all the way to the right on the scroll bar of the cooking zone you wish to use.



 The Power function is available for 10 minutes, after which the power level drops automatically to 9.




## Use

### Multizone function

**i** This function allows you to run two cooking zones (front and rear) in parallel at the same time.

After switching on the hob:

1. Simultaneously place one finger on the left scroll bar and another finger on the right scroll bar of the cooking zones you wish to use.

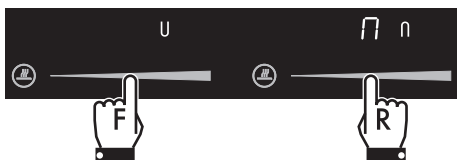

The displays of the cooking zones will turn on: the display shows the "master" **U** symbol while the right-hand display shows **n n** followed by the "slave" **n n** symbol.


2. Use the left-hand scroll bar to set the required cooking power.



The same parameters are set on both cooking zones.



It is only possible to use the Multizone function on vertically connected zones (F and R).

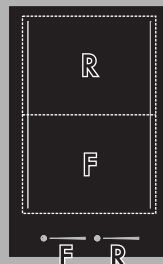

This function can be used to simultaneously control two cooking zones (front and rear) to use pans cookware such as fish kettles or rectangular cookware.




It is not possible to activate the Multizone function in the paella cooking zone.




This function manages the even distribution of power to both plates involved automatically.



If a large pan is used, oval or oblong, ensure that it is positioned at the centre of the cooking zone.

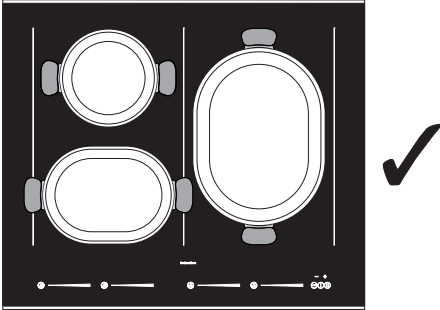


Example of correct pan position

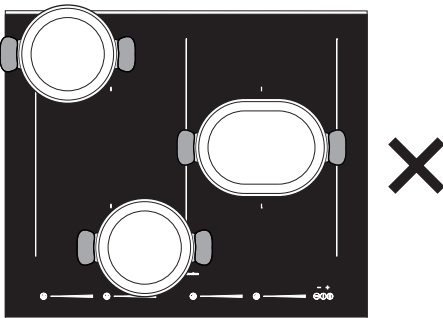

Example of INcorrect pan position

To deactivate the Multizone function:

- Simultaneously place one finger on the left scroll bar and another finger on the right scroll bar of the cooking zones you wish to turn off.

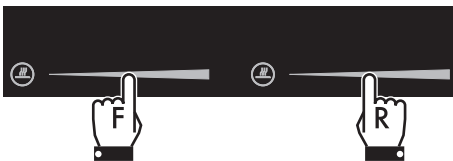

## Cooking guidelines

The table below shows the power values which can be set, together with the corresponding type of food. Settings may vary depending on the amount of food and consumer taste.

Power level	Suitable for:
1 - 2	Reheating food, keeping small amounts of water on the boil, and whipping up sauces with egg yolk or butter.
3 - 4	Cooking solid or liquid food, keeping water on the boil, defrosting deep-frozen food, cooking 2- or 3-egg omelettes, fruit and vegetables, various cooking processes.
5 - 7	Stewing meat, fish and vegetables, simmering food, making jams etc.
8-9	Cooking or frying meat, fish, steaks and liver; browning meat, fish, eggs, etc.
P	Deep-frying potatoes, etc., or bringing water to the boil rapidly.




# Use

## Residual heat



**Improper use  
Danger of burns**

- Supervise children carefully as they cannot readily see the residual heat indicator. The cooking zones remain hot for a certain period of time even after they have been turned off. Make sure that children never touch the hob.




If the cooking zone is still hot after being switched off, the symbol  will be displayed on the display. The symbol clears once the temperature drops below 40°C.

## Melting function




This function allows you to melt foods.

To activate the Melting function, first turn on the hob, then:

- Press the special functions key  for the required cooking zone once. The display shows  followed by the symbol .

To deactivate the Melting function:




- Press the special functions key  three times.

## Keep Warm Function



The Keep warm function allows you to keep cooked food hot.

To activate the Keep Warm function, first turn on the hob, then:

- Press the special functions key  for the required cooking zone twice. The display shows  followed by the symbol .

To deactivate the Keep Warm function:

- Press the special functions key  twice.

## Simmering function



This function allows you to keep the liquid in the pan simmering.

To activate the Simmering function, first turn on the hob, then:

- Press the special functions key  for the required cooking zone three times. The display shows  followed by the symbol .

To deactivate the Simmering function:




- Press the special functions key  once.




## Pause function

**i** This function pauses the operation of all cooking zones.

The Pause function can be activated when at least one cooking zone is switched on:

- Hold down the pause key . The display shows an LED above the pause key  and the message  on the displays of all the cooking zones.


 All the hob's keys will be disabled, except for the control lock key. All cooking zones will switch off.


To deactivate the Pause function:

1. Press the key .

The rightmost cooking zone display will show an animation for a few seconds.

2. Place a finger on the left-hand side of the scroll bar and slide it to the right.

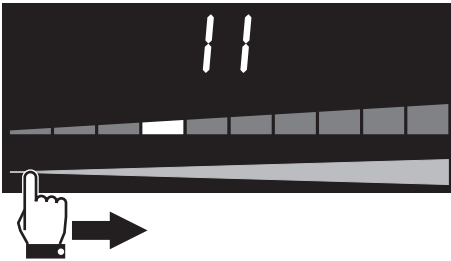




 If no key is pressed within 5 seconds, the hob will turn off automatically.

## Control lock



**i** This function disables all keys of the display to prevent against operation by children or accidental selection.

To activate the Control lock, first turn on the hob, then:

- Hold down the control lock key  for 3 seconds. The display will show an LED above the control lock key .

 The control lock will not be deactivated in the event of a power cut.

To deactivate the Control lock:

- Hold down the control lock key  for 3 seconds. The LED above the control lock key  will turn off.





## Use

### Timer



This function is used to set a timer which will sound a buzzer at the end of the preset time.

To activate the timer, first turn on the hob, then:

1. Press the timer keys and at the same time.

The display will show the time indicator

. The timer symbol below the time indicator shows that the function has been activated.

2. Press the timer keys and to set the timer (hold down to advance quickly).

The display is set to "minutes.seconds". On the first press of the timer key , 1 minute

is set. It is possible to set a time shorter than one minute:

- Press the timer key between 1 and 5 times to select a timer of less than one minute (from to seconds).

With each press of the timer key , the time decreases by 10 seconds.

If the setting exceeds 9 minutes , the message will be shown under the time indicator and the display will be set to "hours.minutes" (up to a maximum of 1 hour, 59 minutes)

3. The timer will start a few seconds after the last selection.



Using the minute minder does not stop the operation of the cooking zones but rather informs the user when the set minutes have run out.



The timer can be activated while the cooking zones are on or off.

At the end of the set time, a buzzer tells the user that the Minute minder has finished.

4. To deactivate the buzzer, press the timer key or .

### Deactivating the timer

To deactivate the timer during the countdown:

1. Press the On/Off key .

The LED above the On/Off key will turn on.

2. Press the timer keys and at the same time.

The countdown will be interrupted.

3. Hold down the timer key until the countdown is reset.



## Timed cooking



This function is used to program the automatic switch-off of each cooking zone at the end of a period of time.

The timed cooking function can be activated when at least one cooking zone is switched on:

1. Press the timer keys and at the same time.

The display will show the time indicator

The timer symbol next to the power level value of the plate indicates that the function is activated.

2. Press the timer keys and to set timed cooking (hold down to advance quickly).

The display is set to "minutes.seconds". If the setting exceeds 9 minutes

the message will be shown under the time indicator and the display will be set to "hours.minutes" (up to a maximum of 1 hour, 59 minutes).

3. Timed cooking will start a few seconds after the last selection.

At the end of the set time, a buzzer tells the user that the Minute minder has finished.

4. To deactivate the buzzer, press the timer key or .



This function can be activated on multiple cooking zones at the same time. The flashing LED and time indicator refer to the next cooking zone to be switched off.

EN

## Modifying or deactivating timed cooking

To modify timed cooking during the countdown:

1. Press the On/Off key .

The LED above the On/Off key will turn on.

2. Press the timer keys and at the same time.

The countdown will be interrupted.

3. Press the timer keys and to modify the timed cooking settings.

To deactivate timed cooking during the countdown:

1. Press the On/Off key .

The LED above the On/Off key will turn on.

2. Press the timer keys and at the same time.

The countdown will be interrupted.

3. Hold down the timer key until the countdown is reset.





# Use


## Demo mode (for exhibitors only)



This mode allows the appliance to deactivate all heating elements, while keeping the control panel active.



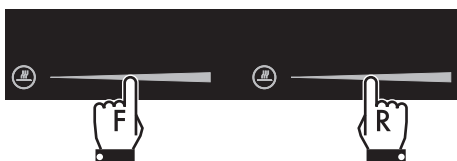

### To activate the demo mode:


1. Ensure that the device was disconnected from the electrical mains at least 10-15 seconds before.
2. Connect the device to the electrical mains.
3. Within two minutes, simultaneously press the control lock button  and the pause button  for a few seconds, until a buzzer sounds.
4. Simultaneously place one finger on the slider on the left and one finger on the slider on the right with respect to the cooking zones closer to the general control zone.






A buzzer will sound and the display above the general control zone will show



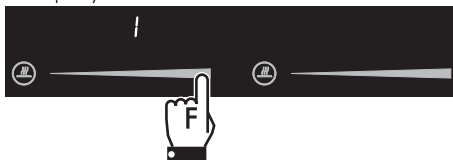

5. Press the pause button  until  is displayed above the general control zone. The slider on the left will show .
6. Place one finger on the top of the slider on the left, until the following  is displayed.



7. Simultaneously press the control lock button  and the pause button  for a few seconds.
8. Hold the On/Off button  pressed for at least one second, to switch the device on in demo mode.






When the demo mode is activated and the device is switched on, above the general control zone

 will be displayed for a few seconds and the sliders will show .






### To deactivate the demo mode:

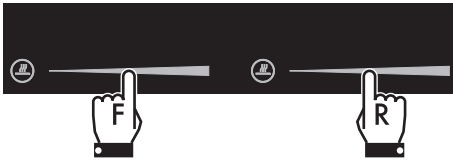1. Ensure that the device was disconnected from the electrical mains at least 10-15 seconds before.
2. Connect the device to the electrical mains.
3. Within two minutes, simultaneously press the control lock button  and the pause button  for a few seconds, until a buzzer sounds.
4. Simultaneously place one finger on the slider on the left and one finger on the slider on the right with respect to the cooking zones closer to the general control zone.





A buzzer will sound and the display above the general control zone will show

**CFG**

5. Press the pause button  until **0** is displayed above the general control zone. The control slider on the left will show .
6. Place one finger on the bottom of the slider on the left, until  is displayed.



7. Simultaneously press the control lock button  and the pause button  for a few seconds.

Now, the demo mode is deactivated.



## 4 Cleaning and maintenance

### 4.1 Instructions



Improper use

**Risk of damage to surfaces**

- Do not use steam jets to clean the appliance.
- Do not spill sugar or sweet mixtures on the hob during cooking.
- Do not place materials or substances that could melt (plastic or aluminium foil).
- Keep sensor keys clean at all times and do not rest any object on them.
- Do not use cleaning products containing chlorine, ammonia or bleach on parts made of steel or that have metallic surface finishes (e.g. anodizing, nickel or chrome plating).
- Do not use abrasive or corrosive detergents (e.g. scouring powders, stain removers and metallic sponges) on glass parts. Use wooden or plastic utensils.

### 4.2 Cleaning the surfaces

To keep the surfaces in good condition, they should be cleaned regularly after use. Let them cool first.

### 4.3 Ordinary weekly cleaning

Clean and maintain the hob once a week using an ordinary glass cleaning product. Always follow the manufacturer's instructions. The silicon in these products creates a protective, water-repellent membrane which also resists dirt. All marks stay on the membrane and can therefore be removed easily. After cleaning, dry the surface with a clean cloth. Make sure that there is no detergent left on the cooking surface as it will undergo a corrosive reaction when heated up and could modify the structure of the cooking surface.

### 4.4 Food stains or residues

Smudges from aluminium-based pans can be easily cleaned off with a cloth dampened in vinegar.

After cooking, remove any burnt-on residue after cooking; rinse with water and dry thoroughly with a clean cloth.

**Dirt** which may have fallen on the hob while cleaning lettuce or potatoes can scratch the hob when moving pans.

Consequently, remove any dirt from the cooking surface immediately.



**Changes in colour** do not affect the operation and stability of the glass. These are not alterations to the material of the hob but just residues which have not been removed and have then carbonised.

**Shiny surfaces** can form due to the bases of pans, especially aluminium ones, rubbing on the surface, and due to the use of unsuitable detergents. They are difficult to remove using conventional cleaning products. It may be necessary to repeat the cleaning process several times. Use of corrosive detergents or rubbing of pan bases can wear away the decoration on the hob over time and contribute to the formation of stains.

## 4.5 What to do if...

The hob does not work:

- Make sure that the hob is connected and that the main switch is turned on.
- Make sure that there is no power failure.
- Make sure that the fuse has not blown. In this case replace the fuse.
- Make sure that the circuit breaker of the residential electrical system has not tripped. In this case, re-activate the circuit breaker.

The cooking results are unsatisfactory:

- Make sure that the cooking temperature is not too high or too low.

The hob smokes:

- Let the hob cool down and clean it once cooking is complete.
- Make sure that the food has not spilled out of the pan and use a larger cooking vessel, if needed.

The fuses blow or the circuit breaker of the residential electrical system trips repeatedly.

- Call Technical Support or an electrician.

There are cracks or fissures in the hob:

- Turn off the appliance immediately, disconnect the power supply and contact Technical Support.



# Installation

## 5 Installation

### 5.1 Electrical connection



**Power voltage  
Danger of electrocution**

- Have the electrical connection performed by authorised technical personnel.
- Use personal protective equipment.
- The appliance must be connected to earth in compliance with electrical system safety standards.
- Disconnect the mains supply.
- Do not pull the cable to remove the plug.
- Use cables withstanding a temperature of at least 90°C.
- The tightening torque of the screws of the terminal supply wires must be 1.5 - 2 Nm.

### General information

Check the grid characteristics against the data indicated on the plate.

The identification plate bearing the technical data, serial number and brand name is visibly positioned on the appliance.

 
Do not remove this plate for any reason.

Perform the ground connection using a wire that is 20 mm longer than the other wires.

The appliance is connected as follows:

90 cm models:

- 380-415 V 3N~ (default)




5 x 1.5 mm<sup>2</sup> five-core cable.

If the cable is replaced, the appliance can also function in the following modes:


\*use the jumper provided

 - 380-415 V 2N~ / 220-240 V 3~



4 x 4 mm<sup>2</sup> four-core\* cable.


The diagram below illustrates the power supply terminal from below, with no cables connected. Terminals 4 and 5 must be connected at all times.

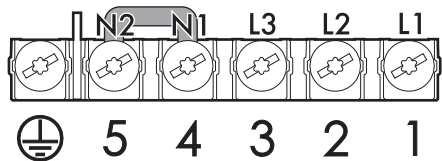



60 cm models:

 - 220-240 V 3N~ (default)




6 x 1.5 mm<sup>2</sup> six-core cable.

If the cable is replaced, the appliance can also function in the following modes:


\*use the jumpers provided

 - 380-415 V 2N~




4 x 2.5 mm<sup>2</sup> four-core\* cable.

 - 220-240 V 1N~




3 x 4 mm<sup>2</sup> three-core\* cable.

The diagram below illustrates the power supply terminal from below, with no cables connected.

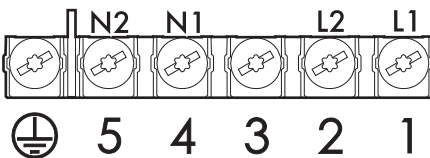

38 cm models:

 - 220-240 V 1N~ (default)



3 x 1.5 mm<sup>2</sup> three-core cable.

## Fixed connection

Fit the power line with an omnipolar circuit breaker in compliance with installation regulations.

The circuit breaker should be located near the appliance and in an easily reachable position.

## Connection with plug and socket

Make sure that the plug and socket are of the same type.

Avoid using adapters and shunts as these could cause overheating and a risk of burns.



Run the power cable in the rear part of the unit. Take care that it does not come into contact with the lower part of the hob or any oven built-in underneath it.



Be careful when connecting additional electrical appliances. Connection cables must not come into contact with hot cooking zones.





# Installation

## Testing

At the end of installation, carry out a brief inspection test. If the hob fails to operate, after checking that you have carried out the instructions correctly, unplug the appliance and contact Technical Support.

## 5.2 Safety instructions



**Heat production during appliance operation**  
**Risk of fire**

- Check that the carcass material is heat resistant.
- Check that the carcass has the required openings.
- Do not obstruct the ventilation grille in front of the product during mounting.

Veneers, adhesives or plastic coatings on adjacent furniture should be temperature-resistant (>90°C), otherwise they might warp over time.

The minimum clearance between a ventilation hood and the cooking surface must be at least the distance indicated in the ventilation hood installation instructions.

The minimum clearances must also be respected for the edges of the hob on the back as indicated in the mounting illustrations.

## 5.3 Section cut from the countertop




The following operation requires building and/or carpentry work and must therefore be carried out by a competent tradesman.


Installation can be carried out on various materials such as masonry, metal, solid wood or plastic laminated wood as long as they are heat resistant (>90°C).

Create an opening with the dimensions shown in the figure in the countertop of the piece of furniture.

### Dimensions for flush mounting

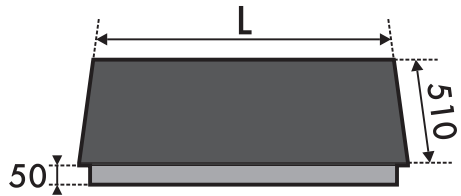

L (mm)	X (mm)	Y (mm)
380	310	490
600	560	490
900	880	490

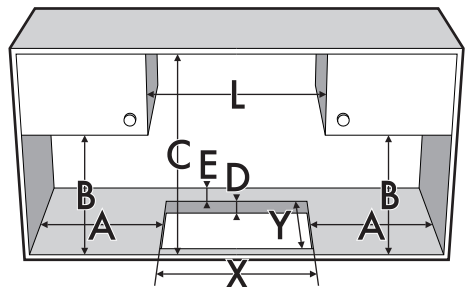


A (mm)	B (mm)	C (mm)	D (mm)	E (mm)
min 50	min 460	min 750	20 - 60	min 50



## Hob seal


To prevent leakage of liquid between the frame of the hob and the countertop, place the adhesive seal provided along the entire outer edge of the hob before assembly.

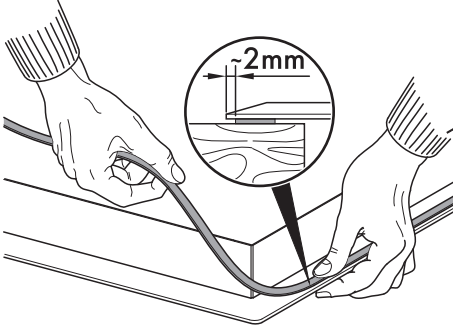

Do not use silicone to secure the hob. This would make it impossible to remove the hob, if necessary, without damaging it.

## Flush mounting (only for hobs with straight edge)

For this kind of hobs additional milling is needed in the recessed hole if you wish to install the hob flush with the work surface.

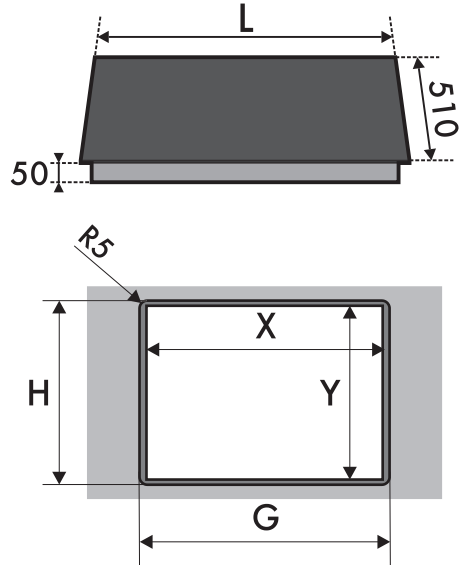

L	X	Y	G	H
380	310	490	384	514
600	560	490	604	514
900	880	490	904	514




# Installation

## 5.4 Mounting

### Over built-in oven



The clearance between the hob and the kitchen furniture or other installed appliances must be enough to ensure sufficient ventilation and air discharge. If installed above an oven, a space must be left between the bottom of the hob and the top of the appliance installed below.

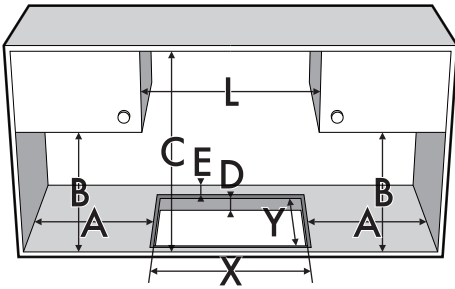


A	B	C	D	E
min. 50	min. 460	min. 750	20-60	min. 50

After laying the adhesive seal (A) on the glass surface and after positioning and securing the hob, fill the edges with insulating silicone (B) and wipe away any excess.

In the event the hob needs to be removed, cut the silicone using a cutter before attempting to remove it (C).

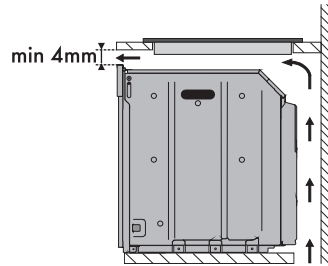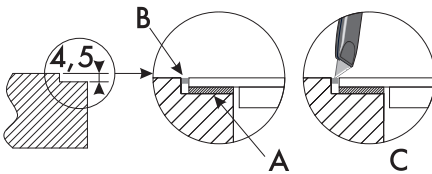

opens on bottom

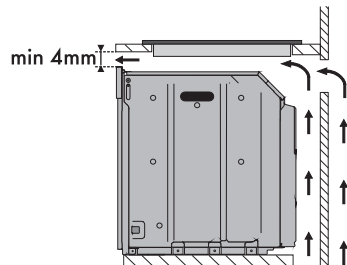

opens on bottom and on rear





If installed on top of an oven, the latter must be equipped with a cooling fan.




## Over empty kitchen unit or drawers

If there are other pieces of furniture (lateral walls, drawers, etc.), dishwashers or fridges under the hob, a double-layer wooden base must be installed at least **20 mm** from the bottom of the hob to avoid any accidental contact. It must only be possible to remove the double-layer base using suitable equipment.

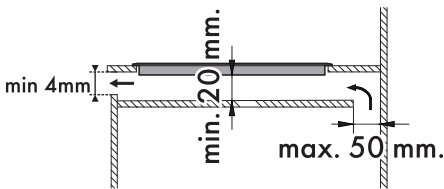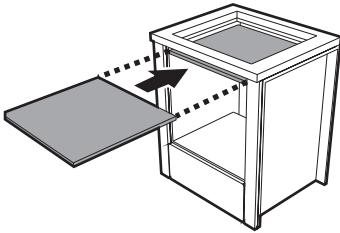




opens on bottom

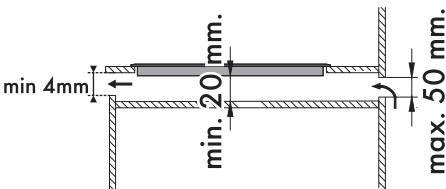

opens on rear

## Ventilation

The illustrations below show two examples of installation suitable for proper ventilation and one example of incorrect installation to be avoided.

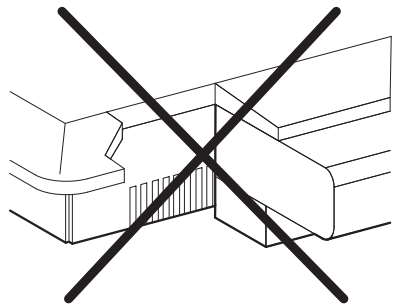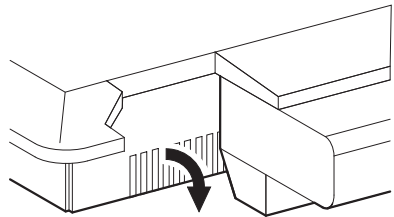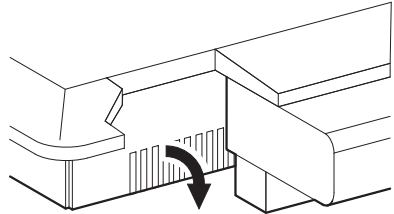

Failure to install the double-layer wooden base exposes the user to possible accidental contact with sharp or hot parts.




# Installation


## Spring clips

To ensure the hob is fixed and centred as accurately as possible, the clips provided must be positioned as described below:


1. Fit the clips by gently pressing them horizontally into the appropriate space.

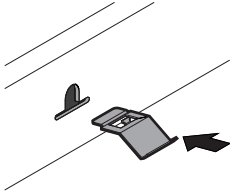

2. Then turn them upwards to fix them in place.


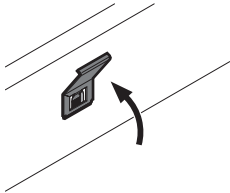


## Position of slot for clips

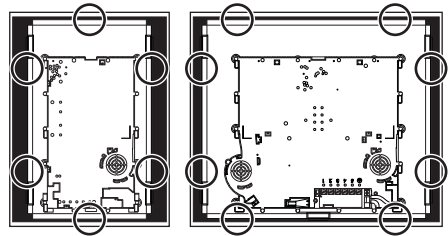

38 cm

60 cm

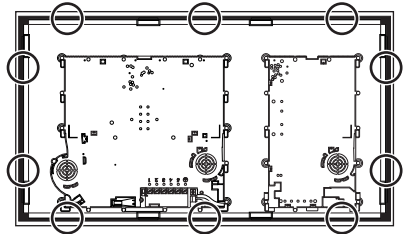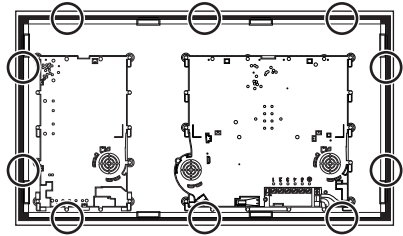

90 cm