

EN	FR
1) ON/OFF button and TURBO button	1) Bouton MARCHE/ARRÊT et bouton TURBO
2) Speed selector	2) Sélecteur de vitesse
3) Corpo motore	3) Corps du moteur
4) Stainless steel blender shaft and stainless steel blade unit	4) Arbre mélangeur en acier inoxydable et groupe lame en acier inoxydable

ES
1) Botón ON/OFF y botón TURBO
2) Selector de velocidad
3) Cuerpo motor
4) Eje de la licuadora de acero inoxidable y cuchillas de acero inoxidable

EN

Dear Customer,
 Thank you for purchasing this Smeg 50's Style hand blender.
 We hope you enjoy using your new appliance!
 Kind regards,
 Smeg S.p.A.

THIS USER MANUAL
 This user manual is an integral part of the appliance and must therefore be kept in its entirety in an accessible place for the whole working life of the appliance.

- INTENDED USE**
- Only use the appliance indoors.
 - The appliance is designed exclusively for home use.
 - The appliance may be used to blend, chop, mix and emulsify various ingredients. Moreover, in combination with its accessories, it can mince/grind meat, cheese, bread, mash potatoes and other vegetables or whip and whisk eggs and cream for various preparations. Every other use is considered improper. Do not use the appliance for anything other than its intended use.
 - The appliance may be used:
 - In staff canteen areas in shops, offices and other working environments;
 - Farm houses;
 - By guests in hotels, motels and other residential-type environments;
 - Bed-and-breakfast-type environments.
 - The appliance is not designed to operate with external timers or with remote control systems.
 - This appliance must not be used by people (including children) of reduced physical, sensory or mental capacity, or lacking in experience in the use of electrical appliances, unless they are supervised or instructed by adults who are responsible for their safety.

- IMPORTANT SAFEGUARDS**
- If the instructions contained in this manual are not followed precisely, fire or explosion may result causing property damage, personal injury or death.
 - READ AND SAVE THESE INSTRUCTIONS** - Your safety and the safety of others are very important. We have provided many important safety messages throughout this manual and on the appliance. Read all the instructions before using the appliance and always obey all safety messages.
 - RECOGNIZE SAFETY INFORMATION** - This is a safety alert symbol. This symbol alerts you to potential hazards that can result in severe personal injury or death.
 - UNDERSTAND SIGNAL WORDS** - A signal word - DANGER, WARNING or CAUTION - is used with the safety alert symbol. DANGER denotes the most serious hazards. It means you could be killed or seriously injured if you do not immediately follow the instructions. WARNING means you could be killed or seriously injured if the instructions are not followed. CAUTION indicates a potentially hazardous situation, which, if not avoided, could result in minor to moderate injury.
 - This appliance is intended for use in the home only.
 - Use this appliance only for its intended purpose. The manufacturer cannot be held liable for damage caused by improper use of this appliance.
 - This appliance complies with current safety regulations. Improper use of this appliance can result in personal injury and material damage.
 - Read all the instructions before installing or using the appliance for the first time.
 - Keep these operating instructions in a safe place and pass them on to any future user.

The safety messages will inform you of potential hazards, on how to avoid the risk of injury and what can occur if the instructions are not followed.

IMPORTANT: Observe all codes and ordinances in force.

- For your safety, the instructions contained in this manual must be followed to minimize the risk of fire or explosion and to prevent property damage, personal injury or death.

Do not store or use gasoline or other flammable vapors, liquids or materials near this or any other appliance.
 NOTE: This appliance is NOT designed for installation in manufactured (mobile) homes or in recreational vehicles (RVs).
 DO NOT install this appliance outdoors.

The California Safe Drinking Water and Toxic Enforcement Act requires the Governor of California to publish a list of substances known to the State of California to cause cancer, birth defects or other reproductive harm, and requires businesses to warn customers of potential exposure to such substances.

- This product contains a chemical known by the State of California to cause cancer, birth defects or other reproductive harm.
 - This appliance can cause low-level exposure to some of the substances listed, including benzene, formaldehyde, carbon monoxide, toluene, and soot.
- To reduce the risk of fire, electrical shock, personal injury, or damage when using the appliance, follow basic safety precautions, including the following:

- Follow all safety instructions for using the appliance safely.
- Read this user manual carefully before using the appliance.
- This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.
- Unplug the appliance immediately after use.
- Do not leave the appliance unattended while it is operating.
- Unplug the appliance as soon as you have finished using it and before cleaning it.
- Do not immerse the appliance, the power cord or the plug in water or any other liquid.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or electrical or mechanical adjustment.
- Keep the power cord away from sharp edges.
- Do not pull on the cord to unplug it from the power socket.
- Do not place the appliance above or near lit gas or electric burners, inside an oven or near other heat sources.
- Do not try to repair the appliance yourself or without the assistance of a qualified technician.
- In the event of a fault, repairs should only be carried out by a qualified technician.
- Do not modify the appliance.
- Never try to put out a fire or flames with water: turn off the appliance, remove the plug from the socket and smother the flames with a fire blanket or other appropriate cover.
- Unplug the appliance from the power socket before assembly, disassembly and cleaning, and as soon as you have finished using it.
- This appliance should not be used by children and care should be taken when used near children.
- Children must never play with the appliance. Keep the appliance out of reach of children.

For this appliance

- Do not use outdoors.

- The use of attachments, parts or accessories not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- The hand blender is portable: Do not let the cord hang over the edge of a table or counter.
- Keep the cord away from hot surfaces, including the stove.
- Keep hands and utensils out of the chopper bowl while blending to prevent the possibility of severe injury to persons and damage to the appliance. A scraper may be used but only when the appliance is not running.
- Always unplug the hand blender from the power socket if it is left unattended and before assembly, disassembly or cleaning.
- Unplug the hand blender when it is not being used, before cleaning it and if you notice any fault.
- The appliance has important markings on the plug blade, the attachment plug or entire cordset is not suitable for replacement. If damaged, the appliance shall be replaced.
- Blades are sharp. Handle with care: Avoid touching the blades of the blender attachment. Handle very carefully when removing, inserting or cleaning the blades.
- Do not blend hot oil or fat.
- Use tall containers when mixing liquids, particularly if hot, to reduce spilling, splattering and burn injuries.
- To avoid splashing, always insert the blender attachment in the food before switching the hand blender on.
- Do not leave the hand blender in a hot pot on a lit stove while not in use.
- Avoid using the blender attachment to chop fruit pits, bones or other hard food as doing so can damage the blades.
- Avoid getting liquids above the shaft joint.
- Only use original spare parts. The use of spare parts not approved by the manufacturer could lead to fires, electric shocks or personal injury.
- Avoid spraying liquid on the motor body or cord of the hand blender or getting them wet. In the event of contact with liquid, immediately unplug the hand blender and dry it thoroughly: Electric shock hazard!
- Let the hand blender cool down before cleaning.
- Do not use harsh detergents or sharp objects to clean the hand blender, its attachments or accessories.
- Deactivate the main power supply.
- Unplug the cord from the wall outlet.
- Do not leave the packaging or any part of it unattended.
- Do not allow children to play with the plastic packaging bags.
- Plug into a grounded 3-prong outlet.
- Do not remove the ground prong.
- Do not use an adapter.
- Do not use an extension cord.
- Failure to follow these instructions can result in death, fire, or electric shock.
- Your hand blender has a 3-prong grounded plug. To reduce the risk of electrical shock, this plug will fit into an outlet only one way. If the plug does not fit in the outlet, contact a qualified electrician. Do not modify the plug in any way.
- This appliance has important markings on the plug blade.
- The attachment plug or entire cordset is not suitable for replacement. If damaged, the appliance should be replaced.
- Do not insert fingers, forks or spoons into the hand blender attachments. This could cause personal injury or damage the blades.
- Keep hands, hair, loose jewelry, ties or clothing, spatulas and other objects away from the hand blender attachments to avoid personal injury or damage to the appliance.
- To protect against the risk of electrical shock, do not immerse the motor body in water or other liquids.
- Unplug from outlet before putting on or taking off parts.
- Avoid touching moving parts.
- Never touch the blades with your hands. Use a spatula if you need to remove food.
- Handle blades very carefully.

MANUFACTURER'S LIABILITY
 The manufacturer shall not be liable for injuries or property damage caused by:

- Any use of the appliance other than the one it was designed for.
- Not having read the user manual.
- Tampering with any part of the appliance.
- The use of non-original spare parts.
- Not following the safety instructions.

DISPOSAL

- Old electrical equipment must not be disposed of with household waste! In accordance with the law in force, electrical appliances at the end of their life should be taken to separate collection facilities for electrical and electronic waste. This way, valuable materials from old appliances can be recycled and the environment can be protected. For more information, please contact your local authorities or recycling center employees.

Note that non-polluting and recyclable materials are used for packaging the appliance.

- Dispose of the packaging materials at appropriate differentiated waste collection centers.

- USE**
- Before first use (FIG. 1)
 - Assembling the hand blender (FIG. 2)
 - Use (FIG. 3)
 - Tips for using your hand blender (FIG. 4)
 - Cleaning (FIG. 5)

RECIPES:

Mayonnaise

Ingredients:

- 1¼ cup (8.8 oz) oil (e.g. sunflower oil)
- 1 egg and 1 extra egg yolk
- 2 tablespoons vinegar
- Salt and pepper to taste

Method:

- Put all the ingredients (at room temperature) into the beaker following the above order.
- Gently insert the hand blender until touching the bottom of the beaker.
- Keeping the blender in the same position, operate it at TURBO speed. When the oil starts emulsifying, slowly raise the shaft to the top of the mixture and then back down, making sure to incorporate all the oil.

Processing time: 1 minute for a dressing-like result; 2 minutes for a dip-like result.

FR

Cher Client,
 Nous vous remercions vivement d'avoir acheté le mixeur à immersion de la Ligne Années 50 Smeg.
 Nous espérons que vous pourrez apprécier pleinement votre nouvel appareil électroménager.
 Nous vous présentons nos salutations les plus cordiales,
 Smeg S.p.A.

CE MANUEL D'UTILISATION
 Ce manuel d'utilisation fait partie intégrante de l'appareil et doit être conservé en parfait état et à portée de main pendant tout le cycle de vie de l'appareil.

UTILISATION PRÉVUE

- Utilisez l'appareil seulement à l'intérieur.
- L'appareil est conçu exclusivement pour une utilisation domestique.
- L'appareil peut être utilisé pour trancher, hacher, mélanger et émulsionner divers ingrédients. De plus, combiné à ses accessoires, il peut broyer la viande, le fromage, le pain, faire une purée de pommes

