

- IT** LIBRETTO DI USO
- EN** USER MANUAL
- FR** MANUEL D'UTILISATION
- DE** BEDIENUNGSANLEITUNG
- NL** GEBRUIKSAANWIJZING
- ES** MANUAL DE USO
- PT** LIVRO DE INSTRUÇÕES PARA UTILIZAÇÃO
- RU** РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ
- SV** BRUKSANVISNING
- DA** BRUGSVEJLEDNING
- PL** INSTRUKCJA UŻYTKOWANIA
- NO** BRUKSVEILEDNING
- FI** KÄYTTÖOHJEET
- AR** كِتَاب تَعْلِيمَاتِ الْاِسْتِعْمَالِ

KDH12WLD

IT	3
EN	8
FR	13
DE	19
NL	24
ES	29
PT	34
RU	39
SV	45
DA	50
PL	55
NO	61
FI	66
AR	71


EN 1. SAFETY INFORMATION

i For your safety and correct operation of the appliance, read this manual carefully before installation and use. Always keep these instructions with the appliance even if you move or sell it. Users must fully know the operation and safety features of the appliance.


! The wire connection has to be done by specialized technician.

- The manufacturer will not be held liable for any damages resulting from incorrect or improper installation.
- The minimum safety distance between the cooker top and the extractor hood is 650 mm (some models can be installed at a lower height, please refer to the paragraphs on working dimensions and installation).
- If the instructions for installation for the gas hob specify a greater distance, this must be respected.
- Check that the mains voltage corresponds to that indicated on the rating plate fixed to the inside of the hood.
- Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
- For Class I appliances, check that the domestic power supply guarantees adequate earthing.

 
- Connect the extractor to the exhaust flue through a pipe of minimum diameter 120 mm. The route of the flue must be as short as possible.
- Regulations concerning the discharge of air have to be fulfilled.
- Do not connect the extractor hood to exhaust ducts carrying combustion fumes (boilers, fireplaces, etc.).
- If the extractor is used in conjunction with non-electrical appliances (e.g. gas burning appliances), a sufficient degree of aeration must be guaranteed in the room in order to prevent the backflow of exhaust gas. When the cooker hood is used in conjunction with appliances supplied with energy other than electric, the negative pressure in the room must not exceed 0,04 mbar to prevent fumes being drawn back into the room by the cooker hood.
- This suction Hood can be used in combination with a Gas hob with the following characteristics:
- Total maximum power 12.4kW.
- 5 burners as shown in the figure.

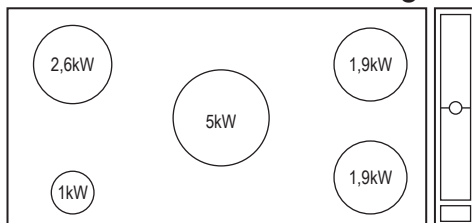

 
- Total maximum power 7.7kW.
- 4 burners as shown in the figure.

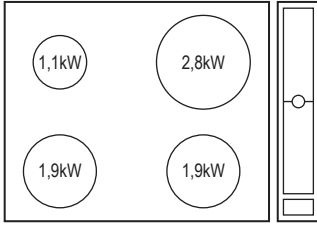

 
- Total maximum power 4.7kW.
- 2 burners as shown in the figure.

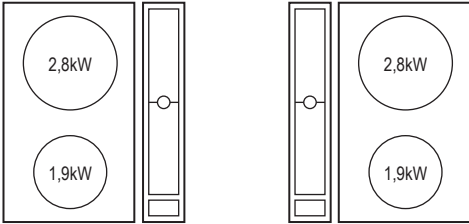

 
- Total maximum power 9.4kW.
- 4 burners as shown in the figure.

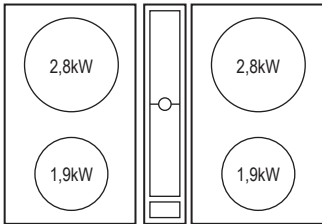

 
- Total maximum power 7.5kW.
- 4 burners as shown in the figure.

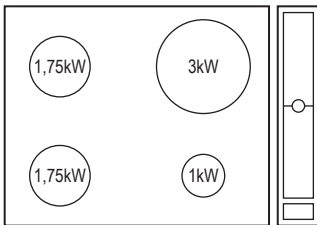

 - Total maximum power 7.5kW.
- 4 burners as shown in the figure.

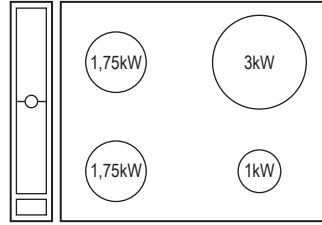

 - Total maximum power 4.75kW.
- 2 burners as shown in the figure.

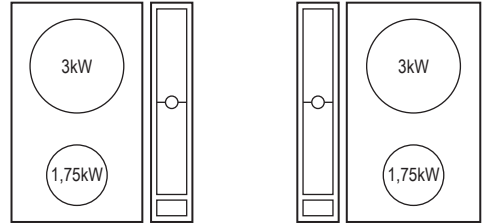


- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels.
- If the supply cord is damaged, it must be replaced from the manufacturer or its service agent.
- Connect the plug to a socket complying with current regulations, located in an accessible place.
- With regards to the technical and safety measures to be adopted for fume discharging it is important to closely follow the regulations provided by the local authorities.


⚠ WARNING: Before installing the Hood, remove the protective films.


- Use only screws and small parts


in support of the hood.

 **WARNING:** Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.

- Do not look directly at the light through optical devices (binoculars, magnifying glasses...).
- Do not flambè under the range hood; risk of fire.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

 Accessible parts may become hot when used with cooking appliances.

- Clean and/or replace the Filters after the specified time period (Fire hazard). See paragraph Care and Cleaning.
- There shall be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels (not applicable to appliances that only discharge the air back into the room).
- The symbol  on the product or on its packaging indicates that this product may not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

 The connection cables must be positioned and anchored in such a way that the connections are not under any strain during cleaning and

maintenance, in compliance with standard 60335-2-31.

 
- In the event of any obstruction to the flap, press On/Off for 2 seconds to open it.
- Do not use multi-plug adapters and/or extension leads.
- Do not modify the characteristics of the appliance.

2. USE

- The extractor hood has been designed exclusively for domestic use to eliminate kitchen smells.
- Never use the hood for purposes other than for which it has been designed.
- Never leave high naked flames under the hood when it is in operation.
- Adjust the flame intensity to direct it onto the bottom of the pan only, making sure that it does not engulf the sides.
- Deep fat fryers must be continuously monitored during use: overheated oil can burst into flames.

3. CARE AND CLEANING


- The Activated Charcoal odour filter can be regenerated. Follow the instructions provided on the Kit itself both for the regeneration method and for the replacement times.
- The grease filters must be cleaned every 2 months of operation, or more frequently in the case of particularly intensive use. They can be washed in a dishwasher (**Z**).

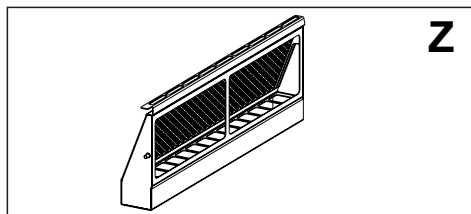



- Control lights, if present.

 - Clean the hood using a damp cloth and neutral liquid detergent.

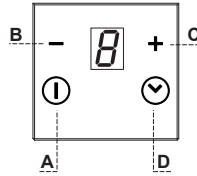4. CONTROLS



Button	Function	Display
A	Press briefly: opens the door and turns the motor on at speed one.	Displays 1
	Press and hold for approximately 2 seconds: - Opens/closes the door. - If the door is open, turns the motor off and closes the door. - When the panel is moving the display shows the following animation:  NOTES: If the door encounters an obstacle during movement it will stop and the display will show:  To restore movement simply press button A again and hold it for approximately 2 seconds.	Displays 1 -
B	Reduces the speed of the motor in 4 steps: P - 3 - 2 - 1 . P = Intensive speed is timed to run for 6 minutes.	Displays P, 3, 2, or 1
	With the motor turned off: with the filter alarm active, it is possible to perform a Reset by pressing and holding this button for approximately 3 seconds. Filter alarm: - Saturation of the Metal Grease Filter is indicated after 100 hours in operation. - Saturation of the Activated Charcoal Filter is indicated after 200 hours in operation.	Displays 8 three times. Displays F fixed. Displays F flashing.
C	Increases the speed of the motor in 4 steps: 1 - 2 - 3 - P . P = Intensive speed set to run for 6 minutes.	Displays 1, 2, 3, or P
	With the motor turned off: press and hold for approximately 2 seconds to activate/deactivate the activated charcoal filter alarm.	Displays C twice = Activated Displays C once = Deactivated
D	Delay function Press briefly: activates / deactivates the Delay Function, switching the motor off after 15 minutes. This function cannot be activated if Intensive Speed is active. The function can be deactivated by pressing button D or button A .	Flashing LED = function activated. Fixed LED = function deactivated.