

Contents

1	General safety instructions	36
1.1	Appliance purpose	40
1.5	Disposal	41
1.6	How to read the user manual	42
2	Description	43
2.1	General Description	43
2.2	Control panel	44
3	Use	46
3.1	Instructions	46
3.2	Preliminary operations	47
3.3	Using the hob	47
3.4	Special functions	54
3.5	Additional functions	56
3.6	Error notifications	58
4	Cleaning and maintenance	59
4.1	Instructions	59
4.2	Cleaning the surfaces	59
4.3	Ordinary weekly cleaning	59
4.4	Food stains or residues	59
4.5	What to do if...	60
5	Installation	61
5.1	Electrical connection	61
5.2	Instructions for the installer	62
5.3	Power control menu (for installer only)	62
5.4	Safety instructions	63
5.5	Section cut from the countertop	63
5.6	Mounting	65

TRANSLATION OF THE ORIGINAL INSTRUCTIONS

We advise you to read this manual carefully, which contains all the instructions for maintaining the appliance's aesthetic and functional qualities.

For further information on the product: www.smeg.com



Instructions

1 General safety instructions

Risk of personal injury

- During use the appliance and its accessible parts become very hot.
- Never touch the heating elements during use.
- Never try to put out a fire or flames with water: Turn off the appliance and smother the flames with a fire blanket or other appropriate cover.
- This appliance may be used by children aged at least 8 and by people of reduced physical, sensory or mental capacity, or lacking in experience in the use of electrical appliances, provided that they are supervised or instructed by adults who are responsible for their safety.
- Children must not play with the appliance.
- Keep children under the age of eight at a safe distance unless they are constantly supervised.
- Keep children under the age of 8 away from the appliance when it is in use.
- Cleaning and maintenance must not be carried out by unsupervised children.
- Be aware of how rapidly the cooking zones heat up. Do not let pans heat up when dry, as there is a danger of them overheating.
- Fats and oils can catch fire if they overheat. Do not leave the appliance unattended while preparing foods containing oils or fats. If fats or oils catch fire, never put water on them. Place the lid on the pan and turn off the relevant cooking zone.
- Do not use the Booster and Double Booster functions to heat fats or oils. Fire hazard.
- The cooking process must always be monitored. A short cooking process must be continuously monitored.



- Do not place metal objects, such as dishes or cutlery, on the hob surface during use as they may overheat.
- Do not insert pointed metal objects (cutlery or utensils) into the slots in the appliance.
- Do not use or store flammable materials near the appliance or directly underneath the hob.
- DO NOT USE AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILST IT IS IN USE.
- Switch off the appliance immediately after use.
- DO NOT MODIFY THIS APPLIANCE.
- Always use any necessary/required personal protective equipment (PPE) before performing any work on the appliance (installation, maintenance, positioning or movement).
- Before performing any work on the appliance, switch off the power supply.
- Installation and servicing should be carried out by qualified personnel in accordance with current standards.
- Do not try to repair the appliance yourself or without the assistance of a qualified technician.
- If the power supply cable is damaged, contact technical support immediately and they will replace it.

Risk of damaging the appliance

- Do not use abrasive or corrosive detergents (e.g. scouring powders, stain removers and metallic sponges) on glass parts.
- Use wooden or plastic utensils.
- Do not sit on the appliance.
- Do not use the hob as a support surface.
- Do not obstruct ventilation openings and heat dispersal slots.
- Do not use steam jets to clean the appliance.
- Never leave the appliance unattended during cooking operations where fats or oils could be released, as these could then heat up and catch fire. Be very careful.



Instructions

- Fire hazard: Never leave objects on the cooking surfaces.
- DO NOT FOR ANY REASON USE THE APPLIANCE AS A SPACE HEATER.
- Cooking vessels or griddle plates should be placed inside the perimeter of the hob.
- All pans must have smooth, flat bottoms.
- If any liquid does boil over or spill, remove the excess from the hob.
- Take care not to spill acid substances such as lemon juice or vinegar on the hob.
- Do not spill sugar or sweet mixtures on the hob during cooking.
- Do not place materials or substances that could melt or catch fire (paper, plastic or aluminium foil) on the appliance while it is in use.
- Place the cookware directly on the glass ceramic surface.
- Do not put empty pans or frying pans on switched on cooking zones.
- Do not use rough or abrasive materials or sharp metal scrapers.
- Do not use cleaning products containing chlorine, ammonia or bleach on parts made of steel or that have metallic surface finishes (e.g. anodizing, nickel- or chromium-plating).

Installation

- THIS APPLIANCE **MUST NOT BE INSTALLED** IN BOATS OR CARAVANS.
- Position the appliance into the cabinet cut-out with the help of a second person.
- Check that the carcass material is heat resistant.
- Check that the carcass has the required openings.
- To avoid potential overheating, the appliance must not be installed behind a decorative door or a panel.
- Have the electrical connection performed by authorised technical personnel.
- The appliance must be connected to earth in compliance with electrical system safety standards.



- Use cables that can withstand temperatures of at least 90 °C.
- The tightening torque of the screws of the terminal supply wires must be 1.5 - 2 Nm.
- The power cable must only be installed or replaced by a qualified technician.
- Activate the controls lock when you have children or pets which could reach the hob.
- After use the cooking zones remain hot for a certain period of time after they have been turned off. Do not touch the hob surfaces.
- After use, switch off the plates. Never rely solely on the cookware detector.

For this appliance

- If cracks or fissures form, or if the glass ceramic cooking surface breaks, turn off the appliance immediately. Disconnect the power supply and call Technical Support.
- Avoid hard, solid objects falling on the cooking surface.
- Do not use the hob if the pyrolytic cycle is taking place inside any oven installed below.
- Do not touch or clean the hob surface during operation or when the residual heat indicator lights are still on.
- Supervise children carefully as they cannot readily see the residual heat indication. After use the cooking zones remain hot for a certain period of time even if they have been turned off. Keep children away from the cooking zones.
- The glass ceramic surface is highly resistant to impact. However, prevent hard, solid objects from falling on the cooking surface as they may cause it to break if they are sharp.
- Do not use the glass ceramic cooking surface as a support surface.
- Remove any traces of liquid from the cover (if fitted) before opening.



Instructions

- Let the cooking surface cool down before closing the cover.
- People who have pacemakers or other similar devices fitted must make sure that the operation of these devices is not affected by the induction field, the frequency range of which is between 20 and 50 kHz.
- In conformity with the provisions regarding electromagnetic compatibility, the electromagnetic induction cooking hob comes under group 2 and class B (EN 55011).

1.1 Appliance purpose

- This appliance is intended for cooking food in the home environment. Every other use is considered improper.
- The appliance is not designed to operate with external timers or with remote-control systems.

1.2 Manufacturer's liability

- The manufacturer declines all liability for damage to persons or property caused by:
 - Use of the appliance other than that specified
 - Failure to comply with the instructions in the user manual
 - Tampering with any part of the appliance
 - The use of non-original spare parts.

1.3 Identification plate

The identification plate bears the technical data, serial number and brand name of the appliance. Do not remove the identification plate for any reason.

1.4 This user manual

This user manual is an integral part of the appliance and must therefore be kept in its entirety and within the user's reach for the whole working life of the appliance.

- Read this user manual carefully before using the appliance.



1.5 Disposal



This appliance conforms to the WEEE European directive (2012/19/EU) and must be disposed of separately from other waste at the end of its service life.

The appliance does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives.

To dispose of the appliance:

- Cut the power supply cable and remove it along with the plug.



Power voltage

Danger of electrocution

- Disconnect the mains power supply.
- Unplug the appliance.

- Deliver the appliance to the appropriate recycling centre for electrical and electronic equipment waste, or return it to the retailer when purchasing an equivalent product, on a one for one basis.

Our appliances are packaged in non-polluting and recyclable materials.

- Deliver the packing materials to the appropriate recycling centre.



Plastic packaging

Danger of suffocation

- Do not leave the packaging or any part of it unattended.
- Do not let children play with the plastic bags.



Instructions

1.6 How to read the user manual

This user manual uses the following reading conventions:

Instructions



General information on this user manual, on safety and final disposal.

Description



Description of the appliance and its accessories.

Use



Information on the use of the appliance and its accessories, cooking advice.

Cleaning and maintenance



Information for proper cleaning and maintenance of the appliance.

Installation



Information for the qualified technician: Installation, operation and inspection.



Safety instructions



Information



Advice


1. Sequence of instructions for use.

- Standalone instruction.



2 Description

2.1 General Description

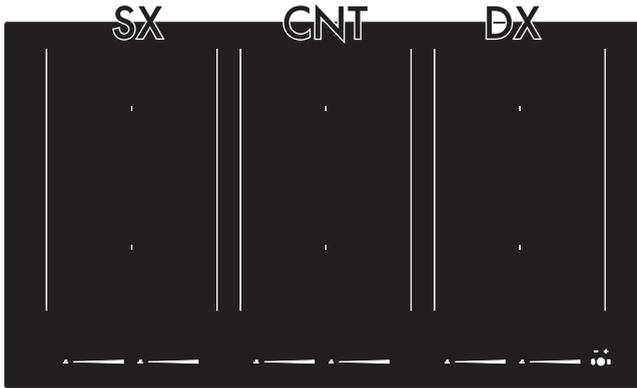

90 cm

SX = Left cooking zones

CNT = Centre cooking zones

DX = Right cooking zones

Maximum absorbed power table (Watt)

	Dimensions H x L (mm)	Level 9	Booster	Double Booster
Single zone	180 x 240	2100 W	2500 W	3000 W
Multizone	360 x 240	3000 W	3700 W	-

* power levels are approximate and may vary according to the pan used or the settings made.



Description

2.2 Control panel

Cooking zones area



List of buttons



Scroll bar: increases or decreases the power level of a cooking zone.



Warming function button: activates the keep warm function.

List of icons



Scroll bar and number icon: indicate the power level that has been selected for a cooking zone.



Warming function icon: indicates the activation of the keep warm function.



Key icon: indicates the activation of the controls lock function.



Clock icon: indicates the timing of a cooking zone.



Multizone function icons: indicate the activation of the Multizone function.

Main controls area



On/Off button: turns the hob on or off.



Pause Button: pauses the appliance functions.



Grill button: activates the Grill function.



Increase and decrease buttons.



Minute minder timer icons.



Timer display.



Advantages of induction cooking



The appliance is equipped with an induction generator for each cooking zone. Each generator located under the glass ceramic cooking surface creates an electromagnetic field which induces a thermal current in the base of the pan. This means the heat is no longer transmitted from the hob to the pan but created directly inside the pan by the inductive current.

- Energy saving thanks to the direct transmission of energy to the pan (suitable magnetisable cookware is required) compared to traditional electric cooking.
- Improved safety as the energy is only transmitted to the pan placed on the hob.
- High level of energy transmitted from the induction cooking zone to the base of the pan.
- Rapid heating speed.
- Reduced danger of burns as the cooking surface is only heated under the base of the pan; foods which overflow do not stick.

Power control

The hob is fitted with a power control module that optimises/limits consumption. If the overall set power level exceeds the maximum limit permitted, the electronic circuit board will automatically manage the power supplied by the hot plates.

The module tries to maintain the maximum deliverable power levels. Levels set by the automatic control will appear on the display.



Priority is given to the last zone set.



The power control module does not affect the total power consumption of the appliance.



Use

3 Use

3.1 Instructions



High temperature Danger of burns

- Protect your hands by wearing heat-proof gloves during use.
- Do not touch or clean the hob surface during operation or when the residual heat indicator lights are still on.
- Do not put empty pans or frying pans on switched on cooking zones.
- Keep children under the age of 8 away from the appliance when it is in use.
- Activate the controls lock when you have children or pets which could reach the hob.
- After use the cooking zones remain hot for a certain period of time after they have been turned off. Do not touch the hob surfaces.



High temperature Danger of fire or explosion

- Do not use or leave flammable materials near the appliance or directly underneath the hob.
- Do not cook in closed tins or containers, plastic kitchenware or containers.
- Do not leave the appliance unattended during cooking operations where fats or oils could be released.
- In case you notice cracks or fissures or you cannot turn off the appliance, disconnect the power supply and contact the Assistance Centre.



Improper use Risk of damage to surfaces

- Do not use the hob if the pyrolytic cycle is taking place inside any oven installed below.
- Never place pans with bases which are not perfectly flat and smooth.
- Avoid hard, solid objects falling on the cooking surface.
- Do not use the hob as a support surface.



3.2 Preliminary operations

In order to remove any moisture that could have accumulated during the manufacturing process and for the electronic circuits and control keypad to work properly:

1. Remove the protective films from the external surfaces of the appliance and accessories.
2. Remove any labels (apart from the technical data plate).

3.3 Using the hob



When the appliance is connected to the mains electricity supply for the first time, or when power is restored after a power failure, an automatic check will be carried out that will switch on all the indicator lights for a few moments.

All the appliance's control and monitoring devices are located together on the front panel. The induction hob is controlled by means of the Touch control sensor buttons. Lightly touch a symbol on the glass ceramic surface. A beep will sound to confirm every effective touch.

Minimum cookware diameter

Make sure that the minimum diameter of the pans are those indicated in the following table, for both configurations.

Configuration	Ø minimum (cm)
Single plate	9-11
Multizone	21-23

Bear in mind the following:

- Do not allow the pans to extend beyond the vertical lines.
- Do not cover the control panel.
- Do not place the pans next to the edges of the glass.
- If you use a griddle, it must be a maximum size of 36 x 24 cm and must anyway not be larger than the zones marked on the hob (see "Advantages of induction cooking")

Cookware suitable for use in induction cooking

Cookware used on the induction cooking surface must be made of metal, with magnetic properties and a sufficiently large base.

Suitable cookware:

- Enamelled steel cookware with thick bases.
- Cast iron cookware with an enamelled base.
- Cookware in multilayer stainless steel, ferritic stainless steel and aluminium with a special base.

Unsuitable cookware:

- Copper, stainless steel, aluminium, fireproof glass, wood, ceramic and terracotta cookware.




Use

To see whether the pan is suitable, bring a magnet close to the bottom: if it is attracted, the pan is suitable for induction cooking.

If you do not have a magnet, you can put a small amount of water in the pan, place it on a cooking zone and start the hot plate.

If the  symbol appears on the display, it means the pan is not suitable.

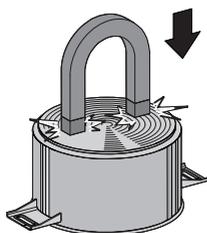

Use only cookware with a perfectly flat bottom which is suitable for induction hot plates. Using cookware with an irregular bottom could jeopardise the efficiency of the heating system and prevent cookware from being detected on the hot plate.



Make sure that the pans do not cover the control panel.

Limiting the cooking duration

The hob has an automatic device which limits the duration of use.

If the cooking zone settings are not changed, the maximum duration of operation for each zone depends on the power level selected.

When the device for limiting the duration of use is activated, the cooking zone turns off, a short alert sounds and, if the zone is hot,

the  symbol appears on the display.

Set power level	Maximum cooking duration in hours
1	8 ½
2	6 ½
3	5 ½
4	4 ½
5	3 ½
6	3
7	2 ½
8	2
9	1 ½

Protection from overheating

If the hob is used on full power for a long period, the electronics will have trouble cooling down if the room temperature is high.

If the temperature of the internal electronic components exceeds the safety threshold, the appliance will switch off automatically and "E2" will be displayed (see "Error notifications").



Advice on energy-saving

- The diameter of the base of the pan must not exceed the width of the silk-screened cooking zone.
- Pans must not be placed outside the perimeter of the hob or above the front control panel.
- When buying a pan, check whether the diameter indicated is that of the base or the top of the pan, as the top is almost always larger than the base.
- When preparing dishes with long cooking times, you can save time and energy by using a pressure cooker, which also helps to retain vitamins contained in the food.
- Make sure that the pressure cooker contains enough liquid as, if there is not enough and it overheats, this may cause damage to both the pressure cooker and the cooking zone.
- If possible, always cover pans with a suitable lid.
- Choose a pan suitable for the quantity of food to be cooked. A large, half-empty saucepan leads to a waste of energy.



Under certain circumstances, if the hob and the oven are being used at the same time, the maximum power limit that can be used by the electrical system might be exceeded.

Power levels

The power in the cooking zone can be adjusted to various levels. The table shows the levels suitable for various types of cooking.

Power level	Suitable for:
0	OFF setting
1 - 2	Cooking small amounts of food (minimum power)
3 - 4	Cooking
5 - 6	Cooking large quantities of food, roasting larger portions
7 - 8	Roasting, slow frying with flour
9	Roasting
P / 	Roasting / Browning, cooking (maximum power)*

* see Booster and Double Booster function

Switching the hob on and off

Keep the On/Off button  pressed in for at least 1 second to activate the hob. Press it again for at least one second to deactivate it.



If no power value is selected within a few seconds, the hob is automatically deactivated.



Use

Switching on the cooking zone automatically



The hob is provided with an automatic pan sensing system.

After switching on the hob:

1. Position a pan (suitable for induction cooking and not empty) on the cooking zone you wish to use.
2. The display corresponding to the zone on which the container has been placed turns on automatically and displays .

Adjusting the cooking zone

After having placed a pan on the cooking zone and made sure that the zone has been activated:

1. Place a finger on the left-hand side of the scroll bar of the cooking zone to be used.



The power level is now .

2. Move your finger to the left or right on the scroll bar to select the power level, from  to  or activate the Booster function (see "Booster Function").



The display of the zone being used will indicate the selected power level.

Switching off the cooking zone

1. Move your finger all the way to the left on the scroll bar of the cooking zone you wish to turn off.



The display of the zone being used indicates .



Hold the On/Off button  down for at least 2 seconds to switch off all cooking zones at the same time.

 


Quick selection

i This function allows you to quickly set the cooking zones to the required power.

After having switched on the hob and placed a pan on it:

1. Place a finger on the scroll bar at approximately the required power level.



2. The cooking zone automatically switches on at the selected power level.

Booster Function



**Improper use
Danger of burns**

- Do not use the Booster and Double Booster functions to heat fats or oils as they could catch fire.



This function allows you to use the maximum available power of the cooking zone in order to bring a large amount of water to the boil rapidly.

 
After switching on the hob and having selected a cooking zone:

1. Place a finger on the left-hand side of the scroll bar.



The display of the cooking zone used will turn on: the power value indicated is **!**.

2. Move your finger all the way to the right of the scroll bar to select the Booster function.



The display of the cooking zone used will show **P**.

The Booster function can be activated quickly.

- After switching on the hob, place your finger at the far right of the scroll bar of the cooking zone you wish to use.





Use



The Booster function remains active for a maximum of 10 minutes, after which the power is reduced automatically to level 9.

Double Booster Function

The Double Booster function allows more power to be supplied compared to the Booster function.

After having activated the Booster function for a cooking zone, press the far right of the scroll bar again. The symbols



and  will be displayed in sequence.

Multizone function



This function can be used to operate two cooking zones (front and rear) when using pans such as fish kettles or long pans.



This function automatically divides the power equally between both of the hot plates in use.

After switching on the hob:

1. Place two small pans or one long pan on vertically connected zones.
2. The number icons relative to the cooking zones involved show .

3. The flashing  and  symbols appear at the side of the number icons. These symbols indicate that the Multizone function can be activated.




After having arranged the pans (when switching on or with the hob already on), if you wish to use two cooking zones independently, wait 5 seconds until the Multizone function symbols disappear.

To activate the Multizone function:

1. Touch the scroll bars of the relevant zones at the same time. The  and  symbols stop flashing.
2. Once the function has been activated, only the left hand side number icon remains active.
3. Use the left-hand side scroll bar to set the required cooking power for both zones.




It is only possible to activate the Multizone function between cooking zones that are vertically connected (**F** and **R**).

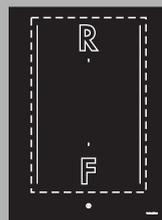


It is not possible to activate the Double Booster function for the cooking zones on which the Multizone function is active.




If a large, oval or oblong pan is being used, make sure that it is placed in the centre of the cooking zone.

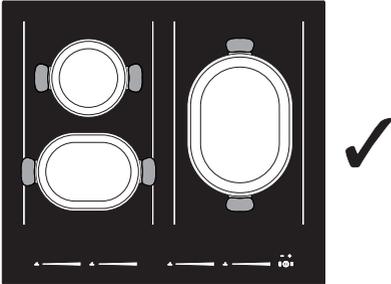

Example of correct pan position

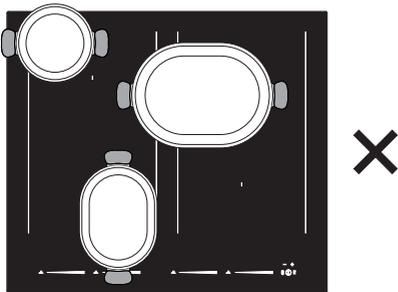

Example of incorrect pan position

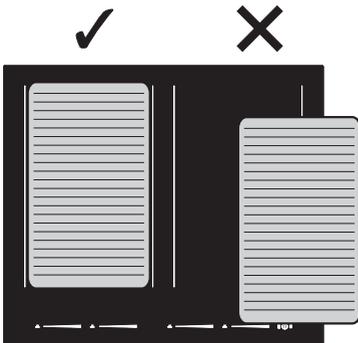

Examples of griddle position

To deactivate the Multizone function:

1. Touch the scroll bar of the relevant zones at the same time.
2. The **U** and **n** symbols disappear and the function is deactivated.

Cooking guidelines

The table below shows the power values which can be set, together with the corresponding type of food. Settings may vary depending on the amount of food and consumer taste.

Power level	Suitable for:
1 - 2	Reheating food, keeping small amounts of water on the boil, and whipping up sauces with egg yolk or butter.
3 - 4	Cooking solid or liquid food, keeping water on the boil, defrosting deep-frozen food, cooking 2- or 3-egg omelettes, fruit and vegetables, various cooking processes.
5 - 7	Stewing meat, fish and vegetables, simmering food, making jams etc.
8-9	Cooking or frying meat, fish, steaks and liver; browning meat, fish, eggs, etc.
P	Deep-frying potatoes, etc., or bringing water to the boil rapidly.



Residual heat



Improper use Danger of burns

- Supervise children carefully as they cannot easily see the residual heat indicator. The cooking zones remain hot for a certain period of time even after they have been turned off. Make sure that children never touch the hob.

If the cooking zone is still hot after being switched off, the  symbol will be displayed on the display. The symbol clears once the temperature drops below 65°C.

3.4 Special functions

Warming Function



This function allows you to keep cooked food warm or to keep water on the boil.

To activate the Warming function, first turn on the hob, then:

- Place a pan on a cooking zone.
- Press the  button to activate the function. The  symbol appears on the display of the selected cooking zone and the  symbol appears at the side of the scroll bar.

To turn off the Warming function for a zone, simply press the  button of the relative zone again.

Pause function



This function pauses the operation of all the cooking zones.

To activate the Pause function:

- Switch on at least one cooking zone.
- Press the pause button   appears on the displays of all the cooking zones.



The pause function can be maintained for a maximum of 10 minutes, after which the appliance switches off.

To deactivate the Pause function:

- Press the  button. An animation appears on the rear right zone scroll bar.
- Move your finger from left to right on the scroll bar.
- The pause function has now been deactivated and the previously set functions are restored.



The cooking time limitation, the residual heat indicators and the control lock function remain enabled during the Pause function.



When the power comes back on after a power failure, the pause function will be deactivated.



Grill Function

i This function is used to activate the Multizone function automatically for the right zones only. It is used when using a griddle or cooking with long pans.

To activate the Grill function:

1. Place a griddle or a long pan on the right zones.

2. Press the  button. The LED above it will flash.

The  symbol appears on the front zone display and the  symbol appears on the rear zone display. The scroll bar will be set automatically to level **8** (preheating phase).



After two minutes of operation, the power will be reduced to level **6**. The LED above the Grill button will stop flashing.

Use the scroll bar to modify the power level at any time.

Press the  button to deactivate the Grill function.

Controls lock

 At least one cooking zone must be active in order for this function to be used.

This function locks all the buttons except for the  button. It is useful when cleaning the appliance and to prevent unintended operations during use.

To activate the control lock:

- Press the  and  buttons at the same time for at least one second.

The  symbol is shown for each cooking zone.

To deactivate the control lock:

- Press the  and  buttons again for at least one second.

Child-proof lock

 To activate this function, the appliance must be switched off.

This function locks all the buttons except for the  button. It is useful to prevent the appliance being switched on accidentally. To activate the child-proof lock:

- Press the  and  buttons at the same time for at least three seconds.

The  symbol is shown for each cooking zone.

To deactivate the control lock:

- Press the  and  buttons again for at least three seconds.



3.5 Additional functions

Rapid heating



This function is not available for the Booster, Double booster and Warming functions.

The rapid heating function heats one cooking zone at maximum power for a limited time, after which it continues cooking at the set power level.

After selecting a cooking zone:

- Press and hold a power level (from 1 to 9) for at least 3 seconds.
- The  symbol appears on the display of the cooking zone alternating with the selected power level.
- After the heating time has elapsed, the cooking zone reverts to the previously selected power level.

This function can be deactivated by selecting and holding a different power level or by switching the appliance off.

Timer



- This function is used to set a timer that will emit a sound at the end of the pre-set time.
- A maximum of 1 hour and 59 minutes can be set.

After having switched on the hob, without having activated a cooking zone:

1. Press the  and  buttons at the same time. The  icon will appear between them.

2. The timer display shows .

3. Use the  and  buttons to select the required time; hold the buttons down to advance more quickly.
4. After a few moments, the timer will start the countdown.
5. When the time elapses, a series of beeps will sound. Press the - or + button to deactivate the buzzer.



Using the minute minder does not stop the operation of the cooking zones but rather informs the user when the set minutes have run out.

Modifying and deactivating the minute minder timer

To modify or deactivate the timer during the countdown:

1. Press the On/Off button  to activate the hob (if it is in stand-by).
2. Press the  and  buttons together.
3. Use the  and  buttons to modify the countdown or reset the timer.

Increasing and decreasing the minute minder timer (touch by touch)

	-	+
from 0 to 5 minutes	10 sec.	1 minute
from 5 to 9 minutes	30 sec.	1 minute
9 minutes and upwards	1 minute	1 minute



Increasing and decreasing the minute minder timer (fast advance).

	-	+
from 0 to 10 minutes	1 minute	1 minute
from 10 min. to 1 hour	5 minutes	5 minutes
from 1 hour to 1 hour and 59 minutes	5 minutes	5 minutes

i If you select a time of 10 minutes or more, the **min** icon appears below the timer display.

Timed cooking

- i**
- This function is used to program the automatic switch-off of each cooking zone at the end of a period of time.
 - A maximum of 1 hour and 59 minutes can be set.

To activate the timed cooking function, first turn on the hob, then:

- Place a pan on the cooking zone and select a power level.
- Press the **-** and **+** buttons at the same time. The  icon appears at the side of the number icon of the zone.
- Use the **-** and **+** buttons to select the required time; hold the buttons down to advance more quickly.
- Timed cooking will start a few seconds after the last selection.

- When the time elapses, a series of beeps will sound. Press the **-** or **+** button to deactivate the buzzer.

- i**
- This function can be activated on multiple cooking zones at the same time.
 - When the timer of another cooking zone is activated, the clock icon of the previously selected zone will dim slightly.

Modifying or deactivating timed cooking

To modify or reset timed cooking, simply follow the same instructions for modifying or resetting the minute minder timer.

If several timed cooking functions have been set, press the **-** and **+** buttons at the same time to move to the timer of each cooking zone and modify them individually. Each selected timer is indicated by the  icon at full brightness, while the other icons are partially dimmed.

- i** An independent timer can be set during one or several timed cooking functions.



Recall Function



This is used to restore some functions that have already been started after the appliance has been switched off unintentionally.

If the appliance is switched off unintentionally, carry out the following procedure within 6 seconds:

1. Switch on the appliance.
 - The LED above the  button will start to flash.
2. Press the pause button  immediately to restore the functions that were previously active.

The Recall function only allows the following functions to be restored:

- 1 Functions and power levels of the cooking zones.
- 2 Timed cooking.
- 3 Multizone function.
- 4 Rapid heating.
- 5 Booster functions.
- 6 Controls lock.



Any functions that do not appear in the list will not be restored.

3.6 Error notifications

If the appliance malfunctions or operates incorrectly, the associated error code appears on the cooking zones display. The error codes always begin with "E.." or "Er..", followed by a number.

The following error codes can be corrected without having to contact the Technical Support Service.

- **E2**: Switch off the appliance and allow it to cool down.
- **E3**: Make sure that the pans are suitable for induction cooking and that they are not empty.



If these error codes appear frequently or codes other than the ones shown in the list appear, contact Technical Support.

- The  icon, accompanied by an acoustic signal, indicates that a command has been activated for a long time. Switch the appliance off and on again to remove the error message.



4 Cleaning and maintenance

4.1 Instructions



Improper use
Risk of damage to surfaces

- Do not use steam jets to clean the appliance.
- Do not spill sugar or sweet mixtures on the hob during cooking.
- Do not place materials or substances that could melt (plastic or aluminium foil).
- Keep sensor buttons clean at all times and do not rest any object on them.
- Do not use cleaning products containing chlorine, ammonia or bleach on parts made of steel or that have metallic surface finishes (e.g. anodizing, nickel- or chromium-plating).
- Do not use abrasive or corrosive detergents (e.g. scouring powders, stain removers and metallic sponges) on glass parts. Use wooden or plastic utensils.

4.2 Cleaning the surfaces

To keep the surfaces in good condition, they should be cleaned regularly after use. Let them cool first.

4.3 Ordinary weekly cleaning

Clean and maintain the hob once a week using an ordinary glass cleaning product. Always follow the manufacturer's instructions. The silicon in these products creates a protective, water-repellent membrane which also resists dirt. All marks stay on the membrane and can therefore be removed easily. After cleaning, dry the surface with a clean cloth. Make sure that there is no detergent left on the cooking surface as it will undergo a corrosive reaction when heated up and could modify the structure of the cooking surface.

4.4 Food stains or residues

Light coloured marks from pans with aluminium bases can be easily cleaned off with a cloth moistened in vinegar.

Remove any burnt-on residues after cooking; then rinse with water and dry thoroughly with a clean cloth.

Dirt which may have fallen on the hob while cleaning lettuce or potatoes can scratch the hob when moving pans. Consequently, remove any dirt from the cooking surface immediately.



Cleaning and maintenance

Changes in colour do not affect the operation and stability of the glass. These are not alterations to the material of the hob but just residues which have not been removed and have then carbonised.

Shiny surfaces can form due to the bases of pans, especially aluminium ones, rubbing on the surface, and due to the use of unsuitable detergents. They are difficult to remove using conventional cleaning products. It may be necessary to repeat the cleaning process several times. Use of corrosive detergents or rubbing of pan bases can wear away the decoration on the hob over time and contribute to the formation of stains.

4.5 What to do if...

The hob does not work:

- Make sure that the hob is connected and that the main switch is turned on.
- Make sure that there is no power failure.
- Make sure that the fuse has not blown. In this case replace the fuse.
- Make sure that the circuit breaker of the residential electrical system has not tripped. In this case, reset the circuit breaker.

The cooking results are unsatisfactory:

- Make sure that the cooking temperature is not too high or too low.

The hob smokes:

- Let the hob cool down and clean it once cooking is complete.
- Make sure that the food has not spilled out of the pan and use a larger cooking vessel, if needed.

The fuses blow or the circuit breaker of the residential electrical system trips repeatedly.

- Call Technical Support or an electrician.

There are cracks or fissures in the hob:

- Turn off the appliance immediately, disconnect the power supply and contact Technical Support.



5 Installation

5.1 Electrical connection



**Power voltage
Danger of electrocution**

- Have the electrical connection performed by authorised technical personnel.
- Use personal protective equipment.
- The appliance must be connected to earth in compliance with electrical system safety standards.
- Disconnect the mains supply.
- Do not pull the cable to unplug the appliance.
- Use cables withstanding a temperature of at least 90°C.
- The tightening torque of the screws of the terminal supply wires must be 1.5 - 2 Nm.

General information

Check the grid characteristics against the data indicated on the plate.


The identification plate bearing the technical data, serial number and brand name is visibly positioned on the appliance. Do not remove this plate for any reason.

Perform the ground connection using a wire that is 20 mm longer than the other wires.

The appliance, depending on the model, can be connected as follows:


90 cm models:

- 380-415 V 3N~

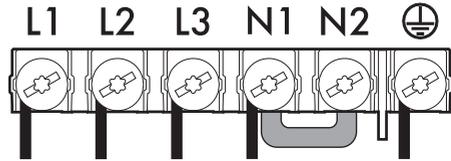


5 x 2.5 mm² five-core cable.

- 220-240 V 3~ / 380-415 V 2N~

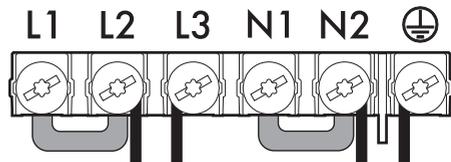

4 x 4 mm² four-core cable.

- 220-240 V 1N~

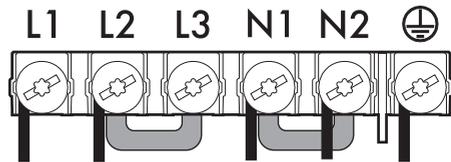

5 x 4 mm² five-core cable.



For all types of connection, use the jumper provided.



Installation

Fixed connection

Fit the power line with an all-pole circuit breaker in compliance with installation regulations. The circuit breaker should be located near the appliance and in an easily reachable position.



Run the power cable in the rear part of the unit. Make sure that it does not come into contact with the lower part of the hob or a built-in oven below it.



Be careful when connecting additional electrical appliances. Connection cables must not come into contact with hot cooking zones.

Testing

At the end of installation, carry out a brief inspection test. If the hob fails to operate, after checking that you have carried out the instructions correctly, unplug the appliance and contact Technical Support.

5.2 Instructions for the installer

- Do not bend or trap the power cable.
- The appliance must be installed according to the installation diagrams.
- If the appliance does not work correctly after having carried out all the checks, contact your local Authorised Service Centre.
- Once the appliance has been installed, please explain to the user how to use it correctly.


5.3 Power control menu (for installer only)

The power control menu allows you to set the maximum power supplied by the appliance. Complete the following within 2 minutes of switching off the appliance:

1. Press and hold the  and  buttons until you hear the buzzer.
2. Press the middle of the two scroll bars of the right zones until you hear the buzzer.

3. The timer display shows .

4. Use the left-hand scroll bar to increase or decrease the power level (associated with a progressive number, shown in the number icon).

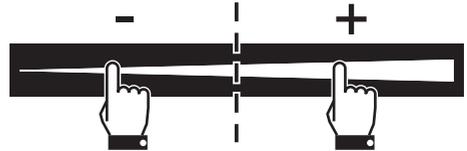

5. Press and hold the  button to save the modifications.
6. Press and hold the  button to discard the modifications.

Power level table

	Mod. 90 cm
Level 0 (P0 - default)	11050 W
Level 1 (P1)	6000 W
Level 2 (P2)	5000 W
Level 3 (P3)	4200 W



5.4 Safety instructions



Heat production during appliance operation
Risk of fire

- Check that the carcass material is heat resistant.
- Check that the carcass has the required openings.
- Do not obstruct the ventilation grille in front of the product during mounting.

Veneers, adhesives or plastic coatings on adjacent furniture should be temperature-resistant (>90°C), otherwise they might warp over time.

The minimum clearance between exhaust hoods and the cooking surface must be at least the distance indicated in the exhaust hood installation instructions.

The minimum clearances must also be respected for the edges of the hob on the back as indicated in the mounting illustrations.

5.5 Section cut from the countertop




The following operation requires building and/or carpentry work and must therefore be carried out by a competent tradesman.


Installation can be carried out on various materials such as masonry, metal, solid wood or plastic laminated wood as long as they are heat resistant (>90°C).

Make a hole in the countertop of the unit according to the dimensions shown in the figure (mm).

Dimensions for flush mounting

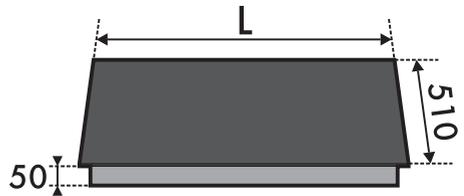

L	X	Y
900	880	490

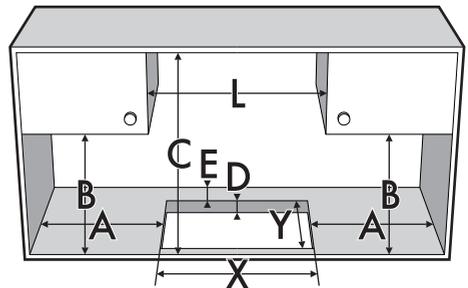


A	B	C	D	E
min. 50	min. 460	min. 750	20-60	min. 50





Installation

Hob seal

To prevent leakage of liquid between the frame of the hob and the countertop, place the adhesive seal provided along the entire outer edge of the hob before assembly.

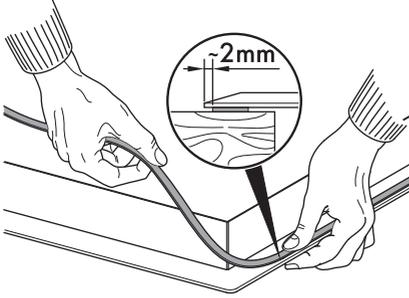


Do not use silicone to secure the hob. This would make it impossible to remove the hob, if necessary, without damaging it.

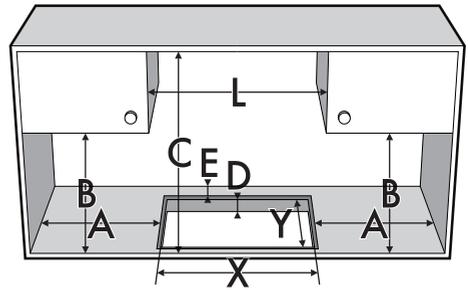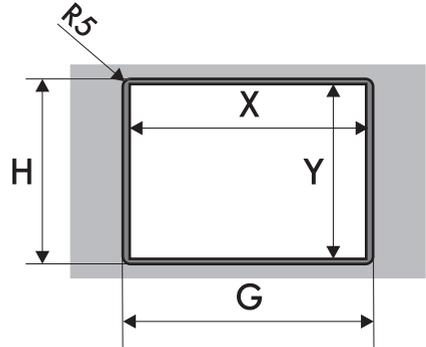

Flush built-in model


For this kind of hobs additional milling is needed in the recessed hole if you wish to install the hob flush with the work surface.

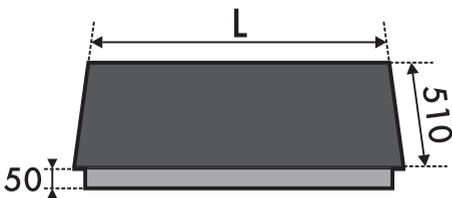

L	X	Y	G	H
900	880	490	904	514
A	B	C	D	E
min. 50	min. 460	min. 750	20-60	min. 50

After laying the adhesive seal (A) on the glass surface and after positioning and securing the hob, fill the edges with insulating silicone (B) and wipe away any excess.

In the event the hob needs to be removed, cut the silicone using a cutter before attempting to remove it (C).

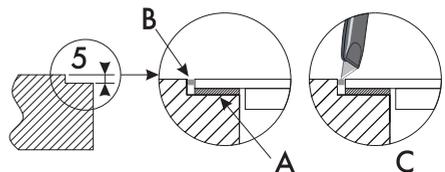




5.6 Mounting

Over built-in oven unit




If installed on top of an oven, the latter must be equipped with a cooling fan.

The clearance between the hob and the kitchen units or other built-in appliances must be enough to ensure sufficient ventilation and air discharge. If installed above an oven, a space must be left between the bottom of the hob and the top of the appliance installed below.

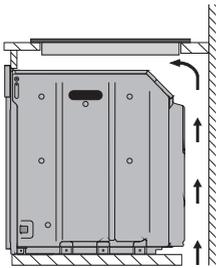



opens on bottom

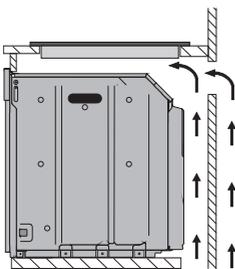


opens on bottom and on rear

On top of an empty kitchen unit or drawers

If there are other pieces of furniture (lateral walls, drawers, etc.), dishwashers or fridges under the hob, a double-layer wooden base must be installed at least **20 mm** from the bottom of the hob to avoid any accidental contact. It must only be possible to remove the double-layer base using suitable equipment.

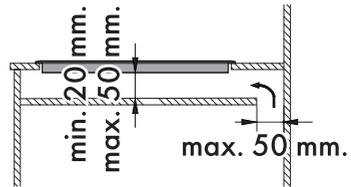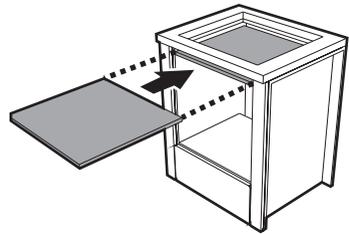

opens on bottom

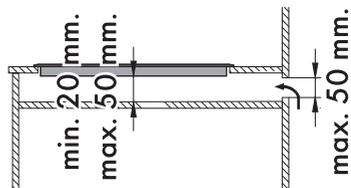

opens on rear






Failure to install the double-layer wooden base exposes the user to possible accidental contact with sharp or hot parts.



Installation

Ventilation


The illustrations below show two examples of installation suitable for proper ventilation and one example of incorrect installation to be avoided.

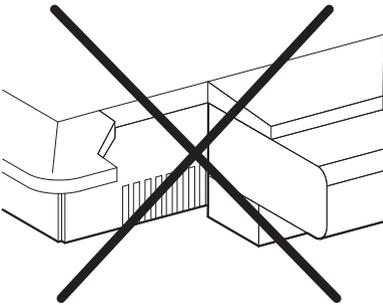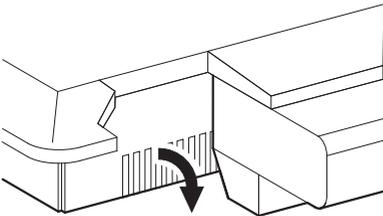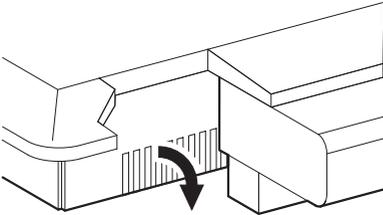


Spring clips

To ensure the hob is fixed and centred as accurately as possible, the clips provided must be positioned as described below:


1. Fit the clips by gently pressing them horizontally into the appropriate space.

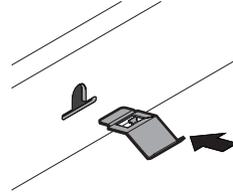

2. Then turn them upwards to fix them in place.

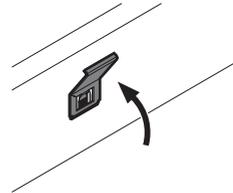

Position of slot for clips

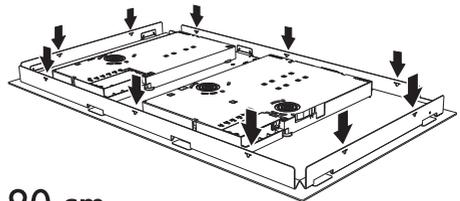

90 cm