

<b>PRECAUTIONS</b>	<b>33</b>
General safety instructions	33
Installation	37
Appliance purpose	38
This user manual	38
Manufacturer's liability	39
Identification plate	39
Disposal	39
Energy efficiency information	39
To save energy	39
Information on power consumption in off/stand-by mode	39
How to read the user manual	40
<b>DESCRIPTION</b>	<b>40</b>
General description	40
Control panel	41
Accessories	42
<b>USE</b>	<b>42</b>
Precautions	42
Preliminary operations	43
Using the accessories	43

Basic functions	43
Using the hob	43
Additional functions	46
Special functions	48
User menu	49
Safety features	50
Error notifications	51
<b>CLEANING AND MAINTENANCE</b>	<b>51</b>
Cleaning the hob	51
Cleaning the glass ceramic hob	52
What to do if...	52
<b>INSTALLATION</b>	<b>53</b>
Gas connection	53
Gas types and Countries	56
Burner and nozzle characteristics tables	56
Electrical connection	57
Power limitation procedure	58
Section cut from the countertop	58
Mounting	59
Fastening to the built-in cabinet	59
Instructions for the installer	60

We advise you to read this manual carefully, which contains all the instructions for maintaining the appliance's aesthetic and functional qualities. For further information on the product: [www.smeg.com](http://www.smeg.com)

These instructions apply only to the destination countries listed on the appliance's data plate.

This is a class 3 built-in hob.

# PRECAUTIONS

## General safety instructions

### Risk of personal injury

- During use the appliance and its accessible parts become very hot. Keep children well away from the appliance.
- Protect hands with heat resistant gloves during use.
- Never try to put out a fire or flames with water: Turn off the appliance and smother the flames with a fire blanket or other appropriate cover.
- This appliance may only be

- used by children aged 8 years and over, and by people of reduced physical, sensory or mental capacity, or lacking in experience in the use of electrical appliances, provided that they are supervised or have been given instructions on the safe use of the appliance and of the hazards associated with it.
- Children must not play with the appliance.
- Keep children under the age of

eight at a safe distance unless they are constantly supervised.

- Keep children under the age of 8 away from the appliance when it is in use.
- Cleaning and maintenance must not be carried out by unsupervised children.
- Make sure that the flame-spreader crowns are correctly positioned in their housings with their respective burner caps.
- Be aware of how rapidly the cooking zones heat up. Do not place empty pans on the heat. Danger of overheating.
- Activate the controls lock when you have children or pets which could reach the hob.
- Do not touch or clean the hob surface during operation or when the residual heat indicator lights are still on.
- After use, switch off the plates. Never rely solely on the cookware detector.
- Supervise children carefully as they cannot readily see the residual heat indication. After use the cooking zones remain hot for a certain period of time even if they have been turned off. Keep children away from the cooking zones.
- The cooking process must always kept under control. A short cooking process must be continuously monitored.
- **WARNING:** Cooking foods

containing fat and/or oil without monitoring them can be dangerous and can cause a fire.

- Fats and oils can catch fire if they overheat. Do not leave the appliance unattended while preparing foods containing oils or fats. If fats or oils catch fire, never put water on them. Place the lid on the pan and turn off the relevant cooking zone.
- Do not use the Booster and/or the Double Booster functions (if present) to heat fats or oils. Fire hazard.
- Do not place metal objects, such as dishes or cutlery, on the surface of the hob during cooking as they may overheat.
- **WARNING:** leaving food unattended when cooking using fat or oil can be dangerous and can cause a fire. **DO NOT** attempt to extinguish a fire with water. Turn off the appliance and smother the flames, for example with a lid or a blanket.
- Do not cook foods in closed tins or containers or plastic containers.
- Do not use magnetic tins.
- Do not use trivets or other items between the bottom of the pan and the glass ceramic surface. Danger of burns.
- Do not insert pointed metal objects (cutlery or utensils) into

the slots in the appliance.

- Do not use or store flammable materials near the appliance or directly underneath the hob.
- Switch off the appliance immediately after use.
- Do not pull the cable to unplug the appliance (if present).
- **DO NOT USE AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILST IT IS IN USE.**
- **DO NOT MODIFY THIS APPLIANCE.**
- Always wear personal protective equipment (PPE) before carrying out any work on the appliance (installation, maintenance, positioning or moving).
- Do not clean the appliance if it is still hot or in operation.
- After use the cooking zones remain hot for a certain period of time after they have been turned off. Do not touch the hob surfaces.
- Before performing any work on the appliance, switch off the power supply.
- Do not try to repair the appliance yourself or without the assistance of a qualified technician.
- If the power cable becomes damaged, contact technical support immediately to arrange for it to be replaced in order to avoid possible hazards.
- If cracks or fissures form, or if the glass ceramic cooking surface breaks, turn off the appliance immediately. Disconnect the power supply and call Technical Support.
- People who have pacemakers or other similar devices fitted must make sure that the operation of these devices is not affected by the induction field, the frequency range of which is between 20 and 50 kHz.
- In conformity with the provisions regarding electromagnetic compatibility, the electromagnetic induction cooking hob comes under group 2 and class B (EN 55011).
- **WARNING:** A gas cooking appliance produces heat, humidity and combustion products in the room where it is installed. Make sure there is good ventilation, especially when the appliance is in use: keep the natural ventilation openings open or install a mechanical ventilation device.
- Intensive and prolonged use of the appliance may require additional ventilation, for example opening a window or more effective ventilation; for example by increasing the power of any mechanical suction devices.

## **Risk of damaging the appliance**

- Do not use abrasive or corrosive detergents (e.g. scouring powders, stain removers and metallic sponges) on glass parts.
- Use wooden or plastic utensils.
- Do not sit on the appliance.
- Do not use the glass ceramic cooking surface as a support surface.
- Do not use the appliance as a support surface.
- Do not obstruct ventilation openings and heat dispersal slots.
- Do not use the hob if the pyrolytic cycle is taking place inside any oven installed below.
- Do not use steam jets to clean the appliance.
- Never leave the appliance unattended during cooking operations where fats or oils could be released, as these could then heat up and catch fire. Be very careful.
- Fire hazard: Never leave objects on the cooking surfaces.
- **DO NOT FOR ANY REASON USE THE APPLIANCE AS A SPACE HEATER.**
- Cooking vessels or griddle plates should be placed inside the perimeter of the hob.
- All pans must have smooth, flat bottoms.
- If any liquid does boil over or spill, remove the excess from the hob.
- Take care not to spill acid substances such as lemon juice or vinegar on the hob.
- Do not spill sugar or sweet mixtures on the hob during cooking.
- Do not place materials or substances that could melt or catch fire (paper, plastic or aluminium foil) on the appliance while it is in use.
- Place the cookware directly on the glass ceramic surface and on the burners.
- Do not put empty pans or frying pans cooking zones or burners that are switched on.
- Do not use rough or abrasive materials or sharp metal scrapers.
- The glass ceramic surface is highly resistant to impact. However, prevent hard, solid objects from falling on the cooking surface as they may cause it to break.
- Do not use cleaning products containing chlorine, ammonia or bleach on parts made of steel or that have metallic surface finishes (e.g. anodizing, nickel- or chromium-plating).
- Do not wash removable parts such as the hob pan support grids, flame-spreader crowns and burner caps in the

dishwasher.

- This appliance is not designed to operate with external timers or with remote-control systems.
- To avoid damaging the racks, do not drag the pans; lift and reposition them instead.

## Installation

• THIS APPLIANCE **MUST NOT BE INSTALLED** IN BOATS OR CARAVANS.

- This appliance must not be installed on a dishwasher.
- Position the appliance into the cabinet cut-out with the help of a second person.
- Before installation, make sure that the local distribution conditions (type and pressure of the gas) and the regulation of the appliance are compatible.
- This appliance is not connected to a system for extracting combustion products. It should be installed and connected in compliance with current installation regulations. Pay particular attention to the requirements regarding ventilation.
- The settings for this appliance are shown on the gas settings label.
- Have the gas connection performed by authorised personnel.
- Have the electrical connection performed by authorised

technical personnel.

- Installation using a hose must be carried out so that the length of the hose does not exceed 2 metres when fully extended for steel hoses and 1.5 metres for rubber hoses.
- The gas connection hoses must not come into contact with moving parts of the built-in module (for example a drawer) and must not be routed through a space that could cause it to be pinched.
- If required, use a pressure regulator that complies with current regulations.
- After carrying out any operation, check that the tightening torque of gas connections is between 10 Nm and 15 Nm.
- At the end of the installation, check for any leaks with a soapy solution, never with a flame.
- Check that the carcass has the required openings.
- Check that the carcass material is heat resistant.
- Installation and servicing should be carried out by qualified personnel in accordance with current standards.
- The appliance must be connected to earth in compliance with electrical system safety standards.
- Use cables that can withstand

temperatures of at least 90°C.

- Run the power cable in the rear part of the unit. Make sure that it does not come into contact with the lower part of the hob or a built-in oven below it.
- Be careful when connecting additional electrical appliances. Connection cables must not come into contact with hot cooking zones.
- The tightening torque of the screws of the terminal supply wires must be 1.5 - 2 Nm.
- The power cable must only be installed or replaced by a qualified technician.
- If the power cable becomes damaged, contact technical support immediately to arrange for it to be replaced in order to avoid possible hazards.
- Always use any necessary/required personal protective equipment (PPE) before performing any work on the appliance (installation, maintenance, positioning or movement).
- Before performing any work on the appliance, switch off the power supply.
- Allow the appliance to be disconnected after installation, via an accessible plug or a switch in the case of a fixed connection.
- Fit the power line with an all-pole circuit breaker with a

contact separation distance sufficient to provide complete disconnection in category III overvoltage conditions, pursuant to installation regulations.

- You should make sure that the appliance is working correctly (rotation of knobs, positioning of the pan supports etc.) only once it has been installed and secured to the unit.
- This appliance can be used up to a maximum altitude of 2,000 metres above sea level.

### **For this appliance**

- The induction cooking zones are independent from the gas burners. The gas burners can be used while the induction zones are switched off and vice versa.

### **Appliance purpose**

This appliance is intended for cooking food in the home environment. Every other use is considered inappropriate. It cannot be used:

- in employee kitchens, shops, offices and other working environments.
- in farms/farmhouses.
- by guests in hotels, motels and residential environments.
- In bed and breakfast accommodation.

### **This user manual**

- This user manual is an integral part of the

appliance and must therefore be kept in its entirety and within the user's reach for the whole working life of the appliance.

- Read this user manual carefully before using the appliance.
- The explanations in this manual include images, which describe all that regularly appears on the display. However, it should be kept in mind that the appliance may be equipped with an updated version of the system, and as such, all that appears on the display may differ from those in the manual.

## Manufacturer's liability

The manufacturer declines all liability for damage to persons or property caused by:

- use of the appliance other than that specified;
- failure to comply with the instructions in the user manual;
- tampering with any part of the appliance;
- use of non-original spare parts.

## Identification plate

The identification plate bears the technical data, serial number and brand name of the appliance. Do not remove the identification plate for any reason.

## Disposal



This appliance conforms to the WEEE European directive (2012/19/EU) and must be disposed of separately from other waste at the end of its service life.

The appliance does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives.



### Power voltage Danger of electrocution

- Disconnect the mains power supply.
- Unplug the appliance.

To dispose of the appliance:

- Cut the power cable and remove it.
- Deliver the appliance to the appropriate recycling centre for electrical and electronic equipment waste, or return it to the retailer when purchasing an equivalent product, on a one for one basis.

Our appliances are packaged in non-polluting and recyclable materials.

- Deliver the packing materials to the appropriate recycling centre.



### Plastic packaging Danger of suffocation

- Do not leave the packaging or any part of it unattended.
- Do not let children play with the plastic bags.

## Energy efficiency information

The information according to the European ecodesign directive can be found in a separate document together with the product instructions. This information can be found in the "Product information sheet" that can be downloaded from the page for the specific product on the website.

## To save energy

- The diameter of the base of the pan must not extend beyond the lines printed on the glass ceramic surface.
- Pans must not be placed outside the perimeter of the hob or on the display.
- When buying a pan, check whether the diameter indicated is that of the base or the top of the pan, as the top is almost always larger than the base.
- When preparing dishes with long cooking times, you can save time and energy by using a pressure cooker, which also helps to retain vitamins contained in the food.
- Make sure that the pressure cooker contains enough liquid as, if there is not enough and it overheats, this may cause damage to both the pressure cooker and the cooking zone.
- If possible, always cover pans with a suitable lid.
- Choose a pan suitable for the quantity of food to be cooked. A large, half-empty saucepan leads to a waste of energy.



Under certain circumstances, if the hob and the oven are used at the same time, the maximum power limit of the electrical system might be exceeded.

## Information on power consumption in off/stand-by mode


Technical data on the appliance's power consumption in off/stand-by mode can be found at [www.smeg.com](http://www.smeg.com) under the page


corresponding to the product in question.

How to read the user manual

This user manual uses the following reading


conventions:

Warning/ Caution

Information/ Advice

DESCRIPTION

General description

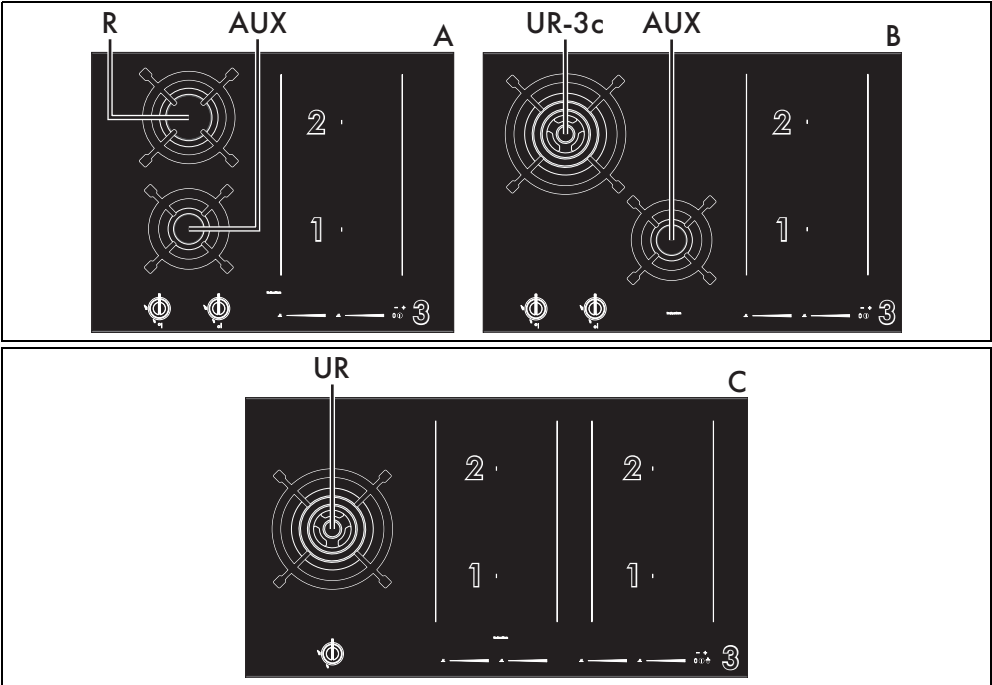

- 1, 2: Induction cooking zones
  - 3: Control panel
  - AUX: Auxiliary burner
  - R: Rapid burner
  - UR-3c: Ultra-rapid triple crown burner
- UR: Ultra-rapid burner
  - A: 65 cm models.
  - B: 75 cm models.
  - C: 90 cm models.


Zone	Dimensions H x L (mm)	Max. power draw (W)*	Power draw in booster function (W)*	Power draw in Double Booster function (W)*
1 - 2 Single zones	182 x 218	2100	2500	3000
1 + 2 Bridge function	365 x 218	3000	3700	-

\*Power levels are approximate and may vary according to the pan used or the settings made.



# Control panel

## Cooking zones area

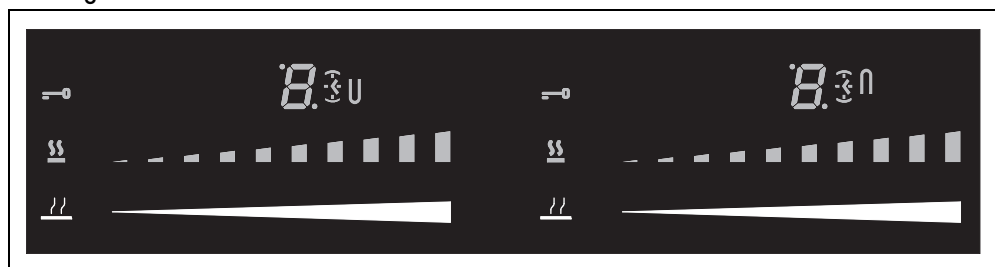


### List of buttons



Scroll bar: increases or decreases the power level of a cooking zone.

Warming function button: activates the keep warm function.

### List of icons

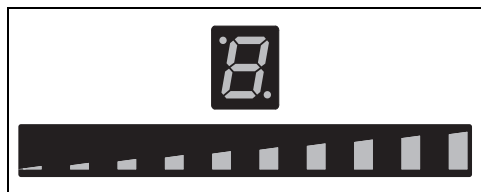

Scroll bar and cooking: zone display: indicate the power level that has been selected for a cooking zone.

Warming function icon: indicates the activation of the keep warm function.

Key icon: indicates the activation of the controls lock function.

Clock icon: indicates the timing of a cooking zone.

Bridge function icons: indicate the activation of the Bridge function.

### Main controls area



On/Off button: turns the hob on or off.

Auto-Vent 2.0 function button: activates communication between the hob and the extractor hood (on some models only).

Grill function button: activates the Grill function.

Increase and decrease buttons.

Minute minder timer icon: indicates the activation of the independent minute minder timer.

Timer display.



If there is no symbol, it means that the appliance is not designed for wireless communication with the hood.

### Gas cooking zone






Rear zone



Front zone

### Burner knobs

For lighting and adjusting the hob burners. Press and turn the knobs anti-clockwise to in

order to light the relative burners. Turn the knobs to the zone between the maximum  and minimum  setting to adjust the flame. Return the knobs to the  position to turn off the burners.

### Advantages of induction cooking



The appliance is equipped with an induction generator for each cooking zone. Each generator located under the glass ceramic cooking surface creates an electromagnetic field which induces a thermal current in the base of the pan. This means the heat is no longer transmitted from the hob to the pan but created directly inside the pan by the inductive current.

- Energy saving thanks to the direct transmission of energy to the pan (suitable magnetisable cookware is required) compared to traditional electric cooking.
- Improved safety as the energy is only transmitted to the pan placed on the hob.
- High level of energy transmitted from the induction cooking zone to the base of the pan.
- Rapid heating speed.
- Reduced danger of burns as the cooking surface is only heated under the base of the pan; foods which overflow do not stick.

### Power control

The hob is fitted with a power control module that optimises/limits consumption. If the overall

set power level exceeds the maximum limit permitted, the electronic circuit board will automatically manage the power supplied by the hot plates. The module tries to maintain the maximum deliverable power levels. Levels set by the automatic control will appear on the display.



Priority is given to the last zone set.




The power control module does not affect the total power consumption of the appliance.

### Accessories

- Not all accessories are available on some models.
- The accessories intended to come into contact with food are made of materials that comply with the provisions of current legislation.
- Original supplied and optional accessories can be requested to Authorised Assistance Centres. Use only original accessories supplied by the manufacturer.

### Wok support

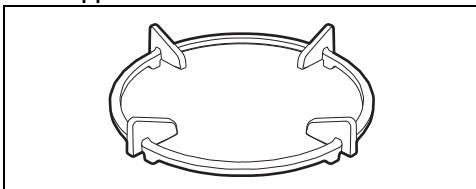

Useful when using a wok.

## USE

### Precautions



See General safety instructions.

### A gas leak can cause an explosion.

If you smell gas or there are faults in the gas system:

- Immediately turn off the gas supply or close the valve on the gas cylinder.
- Extinguish all naked flames and cigarettes.
- Do not turn on power switches or appliances and do not remove plugs from power sockets. Do not use phones or

mobile phones inside the building.

- Open the window in order to ventilate the room.
- Call customer assistance services or your gas supplier.

### Malfunctions

Any of the following indicate a malfunction and you should contact a service centre.

- The burners do not ignite properly.
- It is difficult to keep the burners lit.
- The burners go out when the appliance is in use.
- It is difficult to turn the gas cocks.

## Preliminary operations



See General safety instructions.


- Remove any protective film from the outside or inside of the appliance, including any accessories (if present).
- Remove any labels (apart from the technical data plate).

## Using the accessories

### Trivet

The trivets and reduction pan supports must be placed on the hob pan supports. Make sure they are placed properly.

The trivet should only be used on the UR burner.

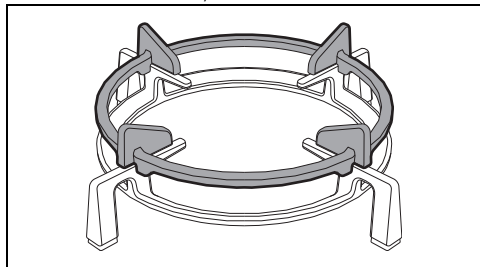

### Cookware suitable for use in induction cooking

Cookware used on the induction cooking surface must be made of metal, with magnetic properties and a sufficiently large base.

#### Suitable cookware:

- Enamelled steel cookware with thick bases.
- Cast iron cookware with an enamelled base.
- Cookware in multilayer stainless steel, ferritic stainless steel and aluminium with a special base.

#### Unsuitable cookware:

- Copper, stainless steel, aluminium, fireproof glass, wood, ceramic and terracotta cookware.

### Cookware diameters

To ensure that the appliance detects the containers correctly and for best results, use the

pan sizes indicated in the following table.

Cooking zones	Minimum diameter (mm)	Recommended diameter (mm)
1 - 2 (Single)	90 - 110	170 - 190
1 - 2 (Bridge)	190 - 230	240

Bear in mind the following:

- Pans should not extend beyond the lines marked on the surface of the appliance.
- Do not place pans near to the edges of the glass ceramic surface or close to the control panel.
- If you use a griddle, it must have a maximum size of and 36 x 20 cm for zones 1 - 2.

### Practical tips for using the hob

For better burner efficiency, to minimise gas consumption and prevent damage to the cooking hob, use pans with lids and of suitable size for the burner, so that the flames do not reach up the sides of the pan. Once the contents come to the boil, turn down the flame far enough to ensure that the liquid does not boil over.

Burner	Pan diameter
AUX	8 - 18 cm
R	20 - 26 cm
UR	20 - 30 cm
UR-3c	20 - 30 cm

## Basic functions

### First power connection


When connected to the power supply for the first time, or after power has been switched back on after a power failure, an automatic check is carried out that control turns on the indicator lights and the displays for a few seconds. Afterwards, the appliance can be used normally.

### Switching on and off


Press and hold the **I** button for at least one second to switch on the appliance. To turn off the appliance, press the **I** button until a sound is emitted. The appliance will switch off automatically after about 10 seconds of inactivity.

## Using the hob


All the appliance's control and monitoring

devices are located together on the front panel. The burner controlled by each knob is shown next to the knob. The appliance is equipped with an electronic ignition device. Simply press the knob and turn it anti-clockwise to the maximum flame symbol, until the burner ignites. If the burner does not light in the first 15 seconds, turn the knob to  and wait 60 seconds before trying again. After lighting, keep the knob pressed in for a few seconds to allow the thermocouple to heat up. The burner may go out when the knob is released: In this case, the thermocouple has not heated up sufficiently. Wait a few moments and repeat the operation. Keep the knob pressed in longer.



In case of an accidental switching off, a safety device will be tripped, cutting off the gas supply, even if the gas cock is open. Return the knob to  and wait at least 60 seconds before lighting it again.

### Correct positioning of the flame-spreader crowns and burner caps

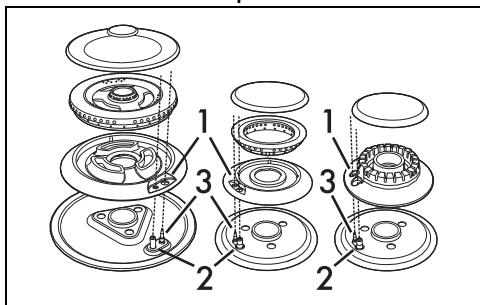


Before lighting the hob burners, make sure that the flame-spreader crowns are correctly positioned in their housings with their respective burner caps. Make sure that the holes 1 in the flame-spreader crowns are aligned with the igniters 3 and thermocouples 2. Also ensure that the flame-spreader crowns are correctly engaged in the burner holes.

### Correct positioning of the pan supports

Under the pan supports there are silicone rests with a hole that must be centred onto the

matching fixing pins on the surface.

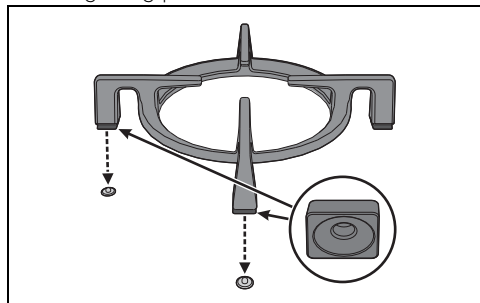

Make sure that the pan supports are simply centred on their respective burners, without forcing them to be raised or tilted. If they are, repeat the positioning procedure.


If you find that a pan is particularly unstable, make sure that the grids have not been positioned incorrectly.

### Switching on the cooking zones



The appliance is fitted with an automatic pan sensing system.

After switching on the display:

1. Position a pan (suitable for induction cooking and not empty) on the cooking zone you wish to use.
2. The display corresponding to the zone on which the container has been placed turns on automatically and displays .

### Adjusting cooking zones

After having placed a pan on the cooking zone and made sure that the zone has been activated:


1. Place a finger on the left-hand side of the scroll bar of the cooking zone to be used.



The power level is now .

2. Move your finger to the left or right to select the power level from 1 to 9 or enable the

Booster or Double Booster function (see specific sections).

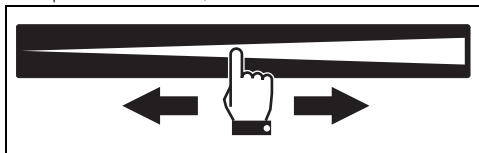


The display of the zone being used will indicate the selected power level.



The power level can also be selected by pressing the scroll bar at the point that corresponds to the required power level.

### Switching off the cooking zones

1. Move your finger to the far left of the scroll bar of the cooking zone you wish to turn off.

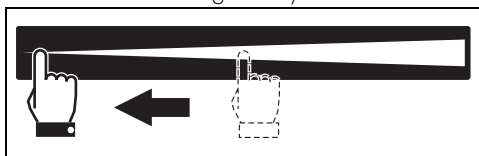


1. The display of the zone selected indicates



To switch off more than one cooking zone at the same time, simply switch off the appliance using the **1** button.

### Summary table of power levels

The power can be adjusted to various levels. The table below shows the levels suitable for various types of cooking.

Power level	Suitable for:
0	OFF setting
1 to 2	Cooking small quantities of food (minimum power)
3 to 4	Cooking
5 to 6	Cooking large quantities of food, roasting larger portions
7 to 8	Roasting, slow frying with flour
9	Roasting
 Bringing large quantities of water to a boil (maximum power, see "Booster function")	

### Booster function




See General safety instructions.

The Booster function allows you to heat a pan at maximum power for a limited amount of time. It can be used to bring a large amount of water to the boil rapidly.

After switching on the hob and having selected a zone:

1. Swipe your finger from the far left to the far right of the scroll bar.

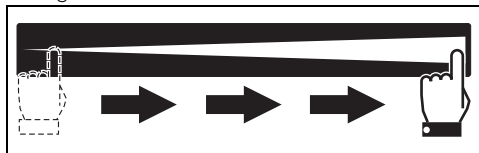

The Booster function can also be activated by pressing the right end of the scroll bar once.

2. The Booster function will be activated and the **P** symbol appears on the cooking zone display.



The Booster function remains active for a maximum of 5 minutes, after which the power level of the zone returns to 9.

To deactivate the Booster function, simply decrease the power level of the cooking zone or switch off the appliance.

### Double Booster Function



See General safety instructions.

The Double Booster function allows more power to be supplied compared to the Booster function.

After having activated the Booster function for a cooking zone, press the far right of the scroll bar again. The symbols **|||** and **P** will be displayed in sequence to indicate that the Double Booster function is on.

To deactivate the function, simply select any other power level or switch off the appliance.




## Bridge function (on some zones only)





This function automatically divides the power equally between both zones that are in use.

This function allows you to operate two cooking zones (front and rear) at the same time when using pans such as fish kettles or long pans.



After switching on the hob:

1. Place two small pans or one long pan on the vertically connected zones.
2. The displays of the cooking zones involved indicate .
3. The flashing  and  symbols appear at the side of the displays. These symbols indicate that the Bridge function can be activated.



After having arranged the pans (when switching on or with the hob already on), if you wish to use two zones independently, wait 5 seconds until the  and  symbols disappear.


To activate the Bridge function:

1. Touch the scroll bars of the relevant zones at the same time. The  and  symbols stop flashing.
2. Once the function has been activated, only the left hand side zone display remains active.
3. Use the left-hand side scroll bar to set the required cooking power for both zones.




It is not possible to activate the Double Booster function for the cooking zones on which the Bridge function is active.


If a large, oval or oblong pan is being used, make sure that it is placed in the centre of the cooking zone.

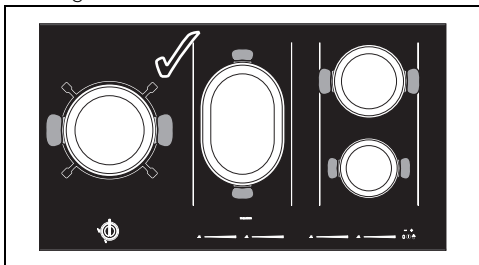

## Correct pan position

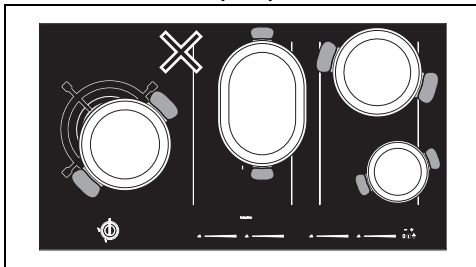

## INCORRECT pan position

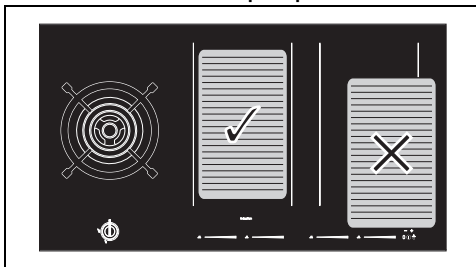

## Examples of griddle position

## Additional functions







 

### Independent minute minder timer



A maximum of 1 hour and 59 minutes can be set.






This function is used to set a timer that will emit a sound at the end of the set time. It does not stop the operation of the cooking zones but informs the user when the set minutes have elapsed.

After having switched on the hob, without having activated a cooking zone:

1. Press the  and  buttons at the same time. The  icon will appear between them.
2. The timer display shows .
3. Use the  and  buttons to select the required time; hold the buttons down to advance more quickly.
4. After a few seconds, the timer will start the countdown and the dot between the first and second digit will start to flash.
5. When the time elapses, a series of beeps will sound. Press the  or  button to deactivate the buzzer.

## Modifying and deactivating the minute minder timer

To modify or deactivate the timer during the countdown:

1. Press the  button to activate the hob (if it is off or in stand-by).
2. Press the  and  buttons together.
3. Use the  and  buttons to modify the countdown or reset the timer. The timer has to be turned off in order to reset it.

 
## Increasing and decreasing the minute minder timer (touch by touch)

	-	+
from 0 to 5 minutes	10 sec.	1 minute
from 5 to 9 minutes	30 sec.	1 minute
9 minutes and upwards	1 minute	1 minute

## Increasing and decreasing the minute minder timer (fast advance).

	-	+
from 0 to 10 minutes	1 minute	1 minute
from 10 min. to 1 hour	5 minutes	5 minutes
from 1 hour to 1 hour and 59 minutes	5 minutes	5 minutes




With a time of 10 minutes or more, the  icon appears below the timer display.





## Timed cooking




A maximum of 1 hour and 59 minutes can be set.

This function is used to program the automatic switch-off of each cooking zone at the end of a period of time set by the user.



1. Place a pan on a cooking zone and select a power level.
2. Press the  and  buttons at the same time. The  icon appears next to the cooking zone display.


3. Use the  and  buttons to select the required time; press and hold to advance more quickly.
4. Timed cooking will start a few seconds after the last selection.
5. When the time elapses, a series of beeps will sound. Press the  or  button to deactivate the buzzer.



- This function can be activated on multiple cooking zones at the same time.
- When the timer of another cooking zone is activated, the  icon of the previously selected zone will dim slightly.

## Modifying or deactivating timed cooking

To modify or reset timed cooking, simply follow the same instructions for modifying or resetting the minute minder timer. If several timed cooking functions have been set, press the  and  buttons at the same time to move between the timers of each zone and modify them one by one.

Each selected timer is indicated by the  icon at full brightness, while the other icons are partially dimmed.



An independent timer can always be set during one or several timed cooking functions.


## Rapid heating



This function is not available for power the Warming, Booster and Double Booster functions.

This function heats a cooking zone to the maximum and allows it to reach the heat corresponding to the selected power level more quickly.

After selecting a cooking zone:




1. Press and hold the scroll bar at the required power level (1 to 9) for at least 3 seconds.
2. The  symbol appears on the display of the zone alternating with the selected power level.
3. After the heating time has elapsed, the cooking zone reverts to the previously selected power level.

This function can be deactivated by selecting and a different power level or by switching the appliance off.

### Pause function (on some models only)

This function allows you to pause the operation of all the cooking zones.



To activate the Pause function:

1. With at least one cooking zone active, press the  and  buttons at the same time.
2.  appears on the displays of all the cooking zones.



The Pause function can be maintained for a maximum of 10 minutes, after which the appliance switches off.

To deactivate the Pause function:

1. Press the  and  buttons together. An animation appears on the rear right zone scroll bar.
2. Move your finger from left to right on the scroll bar.
3. The Pause function has now been deactivated and the previously set functions are restored.



The cooking time limitation, the residual heat indicators and the Controls Lock function remain enabled during the Pause function.





### Recall Function (on some models only)



This function can only be used if at least one cooking zone was active at the time of the unintentional switch-off.

This is used to restore some functions that have already been started after the appliance has been switched off unintentionally.

In this case, carry out the following procedure within 6 seconds:

1. Switch on the appliance.
  - The LEDs above the  and  buttons start to flash.
2. Press the  and  buttons at the same time to restore the functions that were previously active.

The Recall function only allows the following functions to be restored:

1. Functions and power levels of the cooking zones.

2. Timed cooking.
3. Bridge Function.
4. Rapid heating.
5. Booster and Double Booster Functions.
6. Controls lock.



Any functions not listed will not be restored.


## Special functions



### Warming Function




This function allows you to keep cooked food warm or to keep water on the boil.

To activate the Warming function, first turn on the hob, then:

1. Place a pan on a cooking zone.
2. Press the  button to activate the function.

The  symbol appears on the display of the selected cooking zone and the  icon will appear next to the scroll bar.


To turn off the Warming function, simply press the  button of the relative zone again.



### Grill Function



This function is used to activate the Bridge function automatically for the right zones only. It is used when using a griddle or cooking with long pans.

To activate the Grill function:


1. Place a griddle or a long pan on the right zones.
2. Press the  button. The LED above it will flash.

The  symbol appears on the front zone display and the  symbol appears on the rear zone display. The electronics will automatically set the power level to 9 (preheating phase).



After 3 minutes of operation, the power will be lowered to level 7 and the LED above the Grill function button becomes steady.

Use the scroll bar to modify the power level at any time.

Press the  button to deactivate the Grill




function.

## Auto-Vent 2.0 function (on some models only)




- This function allows you to control the speed of the hood extractor fan via a wireless connection.
- The hood must be designed to use the Auto-Vent 2.0 function.
- The connection is always one way, from the hob to the hood. It is not possible to control the hob via the hood.

The Auto-Vent 2.0 function is disabled by default, but can be enabled from the user menu. This function has an automatic and a manual mode:

- Automatic mode adjusts the hood extractor fan speed according to the total power of the appliance (see "User menu - option U2).
- Manual mode allows you to adjust the extractor fan speed by pressing the  button.

After switching on the hob, to activate manual mode:

1. Press the  button.
2. Each subsequent press of the button increases the hood fan speed according to a cyclic sequence with 5 levels of adjustment, from 0 (off) to 4 (maximum speed).

To go back to automatic mode, the appliance has to be switched off and on again.







Refer to the hood manual for more detailed information.






## User menu

The user menu allows you to modify some operating characteristics of the appliance. There are 4 options available. Each option is marked with the letter "U" together with a

progressive number on the timer display.

Option	Description
	Power limitation (kW) - Modification restricted to the installer
	Activation and deactivation of the Auto-Vent 2.0 function (on some models only)
	Auto-Vent 2.0 configuration in automatic mode (on some models only)
	Option restricted

## Accessing the user menu


1. If the hob is off, switch it on using the  button.
2. Press  again within 3 seconds to switch it off; the  icon starts to flash.
3. Press the  and  buttons at the same time until the graph bars appear above the scroll bars of the right zones.
4. Press the centre of both scroll bars at the same time to complete the access procedure.

## User options

Once you have accessed the user menu, the first option that appears is the power limitation option (option U0), which should only be modified by the installer (see "Power limitation procedure").

Use the  and  buttons to move between the options.

To select the values for each option, press the left half of the scroll bar to scroll backwards and the right half to scroll forwards.

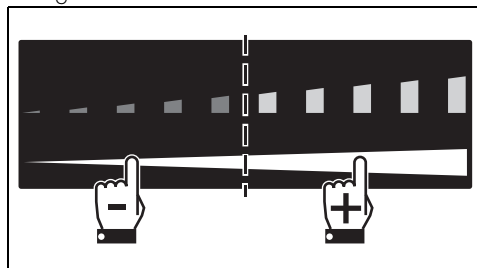

Option U1 (on some models only) allows you to activate or deactivate the Auto-Vent 2.0 function:

- 0: function off.
- 1: function on.

Option U2 (on some models only) allows you to

configure the Auto-Vent 2.0 function in automatic mode. 8 values can be selected. The following table shows a summary of the possible

settings:

Hardness level	Hood lighting	Hood fan speed		
		Delicate cooking	Medium cooking	Intense cooking
0	Off		Off	
1	On		Off	
2 - 4 - 6	On	Off	speed 1	speed 2
3 - 5 - 7	On	speed 1	Speed 2	Speed 3

Refer to the table below to select the most suitable value according to the power limitation of the appliance:

Hardness level	Power limitation
2 - 3	up to 4 kW
4 - 5	from 4 to 5 kW
6 - 7	5 kW upwards





If the appliance is set to a lower power level lower than the one indicated in the table above, it may not be possible to select some of the fan speeds.




For models that are not provided with a wireless connection, options U1 and U2 in the user menu will be visible, but not accessible.

### Exiting the user menu

There are two ways to exit from the user menu:

- 1 Press the  and  buttons at the same time for at least two seconds. All modifications will be saved and the hob will be switched off. It will then have to be turned back on.

Or

- 2 Press the  button for at least two seconds. Changes will not be saved and the hob will restart, but it will still be powered.

### Safety features



See General safety instructions.

### Limiting the cooking duration

The appliance has an automatic device that limits the duration of use.




If the cooking settings for a pan are not changed, the maximum operation time for each

zone depends on the power level selected. Heating is switched off when the device for limiting the duration of use is activated.

Power level	Maximum cooking duration in hours
Warming	2
1	9
2	7
3	5 ½
4	4 ½
5	3 ½
6	3
7	2 ½
8	2
9	1 ½
Booster / DBooster	10 minutes

### Residual heat indicators

After the cooking zone has been switched off, a symbol appears on each display to indicate whether the zone is still hot and indicates the approximate temperature:

Symbol	Temperature
	> 60°C
	> 80°C
	> 100°C

### Protection from overheating


If the hob is used on full power for a long period, the electronics will have trouble cooling down if the room temperature is high.

When certain safety thresholds are reached, on or more cooking zones are deactivated. At the

end, if the internal temperature is very high, the appliance is switched off automatically.

### Controls lock (on some models only)







This feature is designed to lock all the hob controls during operation, except for the  button.

This is useful when cleaning the appliance and to prevent functions being modified by mistake.

To activate the controls lock function, at least one cooking zone has to be active:

- press the  and  buttons at the same time for at least one second.

The Controls lock is active and the  symbol is shown for each cooking zone.

To deactivate the controls lock, press the  and  buttons at the same time for at least one second; the  symbols disappear.

### Controls lock (child safety)






This function prevents the appliance from being switched on unintentionally, for example by children.

To activate the controls lock function, the appliance must be switched on, the cooking zones must not be active and no timer must be

enabled:

- Press the  and  buttons at the same time for at least 3 seconds.

The  symbol will appear on the displays of all the cooking zones and on the timer display.

To disable child lock, press buttons  and  at the same time for at least 3 seconds.

### Error notifications

If the appliance malfunctions or operates incorrectly, the associated error code appears on the display.

The error codes always begin with the letter "E" or "Er" followed by a series of digits (e.g. "Er47-30").

Errors coded as:

- "E02"
- "E2"
- "Er21"

Indicate that the appliance or part of it is overheating. If this occurs, you should switch off the appliance immediately, remove all pans and let it cool down.

If these errors persist or if other errors appear, make a note of the code and contact Technical Support.

## CLEANING AND MAINTENANCE

### Cleaning the hob

#### Cooking hob pan support grids

Remove the pan support grids and clean them in lukewarm water and non-abrasive detergent. Make sure to remove any encrustations. Dry them thoroughly and return them to the hob.



The continuous contact between the pan supports and the flame can cause modifications to the enamel over time in those parts exposed to heat. This is a completely natural phenomenon which has no effect on the operation of this component.

#### Flame-spreader crown and burner caps


For easier cleaning, the flame-spreader crowns and the burner caps can be removed. Wash them in hot water and non-abrasive detergent.

Carefully remove any encrustation, then wait until they are perfectly dry. Replace the flame-spreader crowns, making sure that they are correctly positioned in their housings with their respective burner caps.

#### Igniters and thermocouples

For correct operation the igniters and thermocouples must always be perfectly clean. Check them frequently and clean them with a damp cloth if necessary. Remove any dry

residues with a wooden toothpick or a needle.

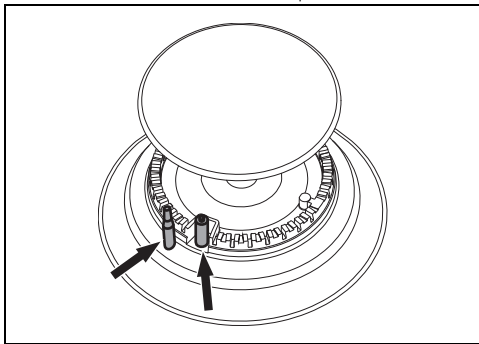

## Cleaning the glass ceramic hob



See General safety instructions.

### Cleaning the surfaces

To keep the surfaces in good condition, they should be cleaned regularly after use. Let them cool first.

### Ordinary daily cleaning

Always and only use specific products that do not contain abrasives or chlorine-based acids. Pour the product onto a damp cloth and wipe the surface, rinse thoroughly and dry with a soft cloth or a microfibre cloth.



In case of stubborn dirt, clean when cold using a damp kitchen sponge and neutral detergent; then dry with a microfibre cloth.

### Weekly cleaning

Clean and maintain the hob once a week using an ordinary glass ceramic cleaning product. Always follow the manufacturer's instructions. The silicon in these products creates a protective, water-repellent membrane which also resists dirt. All marks stay on the membrane and can therefore be removed easily. After cleaning, dry the surface with a clean cloth. Make sure that there is no detergent left on the cooking surface as it might undergo an aggressive reaction when heated up and could modify the structure of the cooking surface.

### Food stains or residues

Light coloured marks from pans with aluminium bases can be easily cleaned off with a cloth moistened in vinegar. Remove any burnt-on residues after cooking; then rinse with water and

dry thoroughly with a clean cloth. Dirt, which may have fallen on the hob while cleaning lettuce or potatoes, can scratch the hob when moving pans. Consequently, remove any dirt from the cooking surface immediately. Changes in colour do not affect the operation and stability of the glass. These are not alterations to the material of the hob but just residues which have not been removed and have then carbonised. Shiny surfaces can form due to the bases of pans, especially aluminium ones, rubbing on the surface, and due to the use of unsuitable detergents. They are difficult to remove using conventional cleaning products. It may be necessary to repeat the cleaning process several times. Use of corrosive detergents or rubbing of pan bases can wear away the decoration on the hob over time and contribute to the formation of stains.



We recommend the use of cleaning products distributed by the manufacturer.



After cleaning, dry the appliance thoroughly to prevent any water or detergent from interfering with its operation or creating unsightly marks.

## What to do if...

The hob does not work:

- Make sure that the hob is connected and that the main switch is turned on.
- Make sure that there is no power failure.
- Make sure that the fuse has not blown. In this case replace the fuse.
- Make sure that the circuit breaker of the residential electrical system has not tripped. In this case, reset the circuit breaker.

The cooking results are unsatisfactory:

- Make sure that the cooking temperature is not too high or too low.
- Make sure that the hob is properly ventilated and that the air inlets are unobstructed.
- Use cookware that is certified and tested for induction cooking.

The hob smokes:

- Let the hob cool down and clean it once cooking is complete.
- Make sure that the food has not spilled out of the pan and use a larger cooking vessel, if needed.

The fuses blow or the circuit breaker of the residential electrical system trips repeatedly.

- Call Technical Support or an electrician.

There are cracks or fissures in the hob:

- Turn off the appliance immediately, disconnect the power supply and contact Technical Support.

## INSTALLATION



The appliance must be installed by a qualified technician and according to the regulations in force.

### Gas connection




See General safety instructions.

Connection to the gas mains can be made using a continuous wall steel hose in compliance with the guidelines established by the standards in force. To use other types of gas, see the chapter "Adaptation to different types of gas". The appliance's gas connector has a 1/2" external thread (ISO 228-1).

#### Connection with a steel hose

Make the connection to the gas mains using a continuous wall steel hose whose specifications comply with the applicable standard.

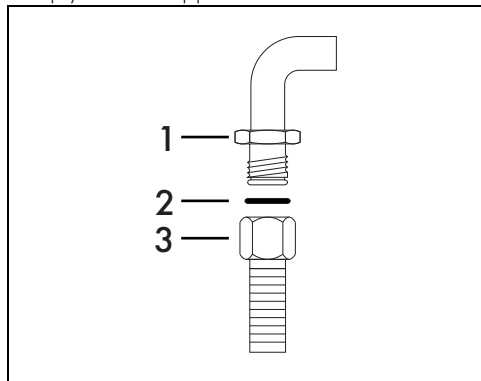


Carefully screw the connector 3 to the gas connector 1 of the appliance, placing the seal 2 between them.

#### Connection with a steel hose with bayonet fitting

Carry out the connection to the gas mains using a steel hose with bayonet fitting compliant with


B.S. 669.

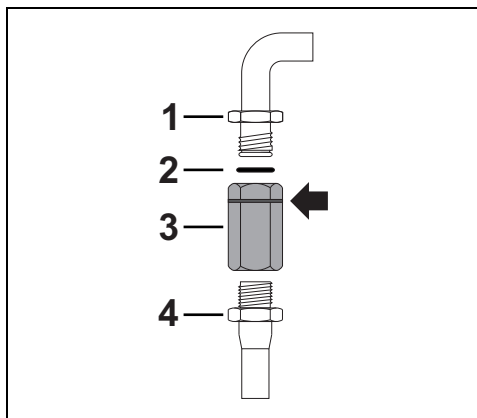

Apply insulating material to the thread of the gas hose connector 4 and screw the adapter 3 onto it. Screw the assembly onto the movable connector 1 of the appliance, inserting the seal provided 2 between them.

#### Connection with a steel hose with conical fitting


Make the connection to the gas mains using a continuous wall steel hose whose specifications comply with the applicable standard.

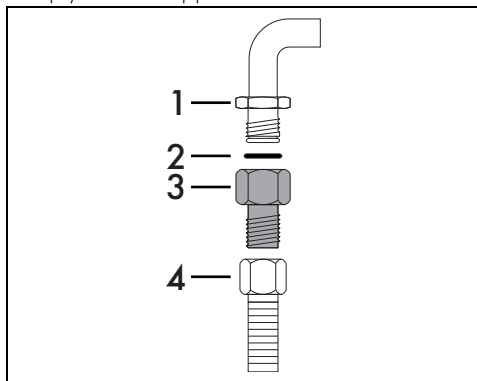

Carefully screw the hose connector 3 to the appliance's gas connector 1 (1/2" thread ISO 228-1), placing the seal 2, provided, between them. Apply insulating material to the thread of connector 3 and then screw the steel hose 4

onto the connector 3.

### Connection to LPG

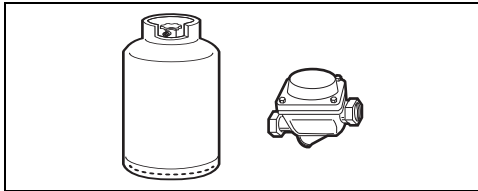

Use a pressure regulator and make the connection on the gas cylinder following the guidelines set out in the standards in force.

The supply pressure must comply with the values indicated in the "Burner and nozzle characteristics table".

### Room ventilation

The appliance should be installed in rooms that have a permanent air supply in accordance with the standards in force. The room where the appliance is installed must have enough air flow for the regular combustion of gas and the necessary air change in the room itself. The air vents, protected by grilles, must be the right size to comply with current regulations and positioned so that no part of them is obstructed, not even partially.


The room must be kept adequately ventilated in order to eliminate the heat and humidity produced by cooking: In particular, after prolonged use, you are recommended to open a window or to increase the speed of any fans.

### Extraction of the combustion products

The combustion products may be extracted by means of hoods connected to a natural draught chimney whose efficiency is certain or via forced extraction. An efficient extraction system requires precision planning by a specialist qualified in this area and must comply with the positions and clearances indicated by the applicable standards.

When the job is complete, the installer must

issue a certificate of conformity.

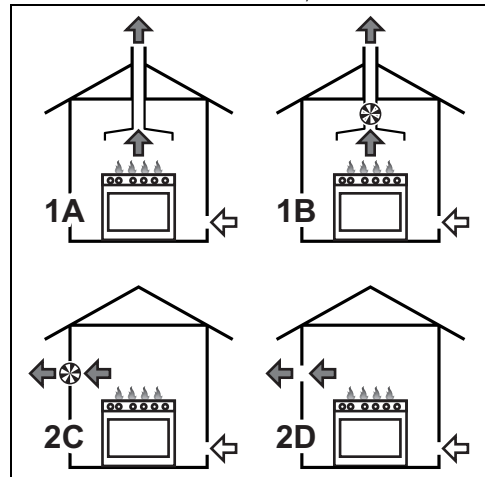

- 1 Extraction using a hood
- 2 Extraction without a hood
- A Extraction with a single natural draught chimney
- B Extraction with a single chimney with extractor fan
- C Extraction directly outdoors with wall- or window-mounted extractor fan
- D Extraction directly outdoors through wall



Air



Combustion products



Extractor fan

### Adaptation to different types of gas

If other types of gas are to be used, the nozzles must be replaced and the primary air must be adjusted. The top of the hob has to be removed in order to replace the nozzles and adjust the burners.



In order to be able to replace the nozzles, the appliance must be removed from the built-in unit.

### Removing the hob top


1. Pull the knobs and the knob bezels (where present) upwards to remove them. Pay attention to the spring between the knob and the bezel.
2. Remove the pan support grids from the hob.

3. Remove the flame-spreader crowns and relative burner caps.
4. Remove the screws that secure the hob and the relative plates in correspondence with each burner.
5. Remove the seals in correspondence with the igniters and thermocouples that are located under the plates that were previously removed.




If there is an Ultra-rapid burner, the nut that secures the thermocouple to the hob should be unscrewed (CH8).

6. Unscrew the screws that fasten the hob to the burner casing (the figure shows the 90 cm model as an example).

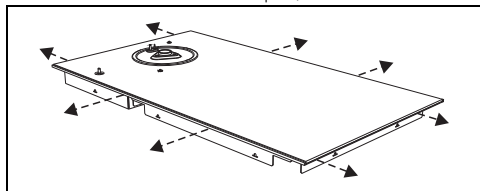

7. Remove the hob.

### Replacing nozzles

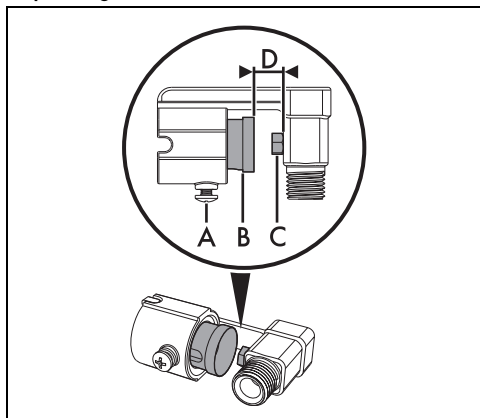

1. Loosen the screw A and push the air regulator B as far as it will go.
2. Use a spanner to remove the nozzles C and install the new ones for the required gas supply, following the indications given in the relevant table (see "Gas types and countries" or "Burner and nozzle characteristics tables").




The nozzle tightening torque must be no more than 3 Nm.

3. Adjust the air flow by moving the air regulator B to obtain the distance D given in the corresponding table (see "Gas types and countries" or "Burner and nozzle characteristics tables").
4. After adjusting each burner, reassemble the appliance correctly.

### Adjusting the minimum setting for natural or town gas

1. Light the burner and turn it to the minimum position.
2. Remove the gas tap knob and turn the adjustment screw next to the gas cock spindle (depending on the model) until the correct minimum flame is achieved.

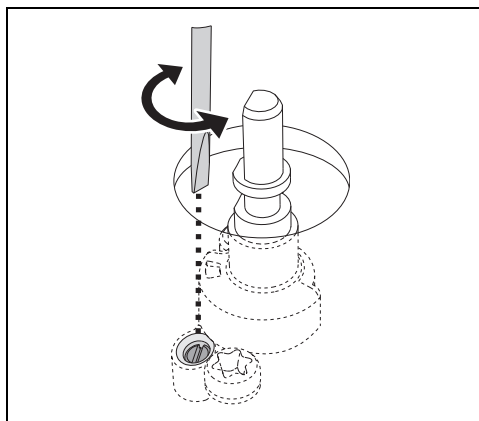

3. Refit the knob and verify that the burner flame is stable.
4. Turn the knob rapidly from the maximum to the minimum setting: The flame should not go out.
5. Repeat the operation on all the gas taps.

### Adjusting the minimum setting for LPG

Tighten the screw located at the side of the cock spindle clockwise all the way.



Following adjustment to a gas other than the one originally set in the factory, replace the gas setting label on the appliance with the one corresponding to the new gas. The label is inserted inside the nozzle pack (where present).

### Lubricating the gas cocks

Over time the gas cocks may become difficult to turn and get blocked. Clean them internally and

replace the lubrication grease.



Lubrication of the gas cocks should be performed by a specialised technician.

## Gas types and Countries

Gas types		IT	GB IE	FR BE	ES	PT	RU	SE DK	FI NO	PL	HU
<b>1 Natural Gas G20</b>											
G20	20 mbar	•	•		•	•	•	•	•	•	
G20/25	20/25 mbar			•							
<b>2 Natural Gas G20</b>											
G20	25 mbar										•
<b>3 Natural Gas G25.1</b>											
G25.1	25 mbar										•
<b>4 Natural Gas G2.350</b>											
G2.350	13 mbar									•	
<b>5 LPG G30/31</b>											
G30/31	28-30/37 mbar	•	•	•	•	•	•				
G30/31	30/30 mbar							•	•		•
<b>6 LPG G30/31</b>											
G30/31	37 mbar									•	
<b>7 Town Gas G110</b>											
G110	8 mbar	•						•			

It is possible to identify the available gas types based on the country the appliance is to be installed in. Refer to the heading number to identify the correct values in the "Burner and nozzle characteristics tables".

## Burner and nozzle characteristics tables

<b>1 Natural Gas G20 - 20 mbar</b>		<b>AUX</b>	<b>R</b>	<b>UR-3c</b>	<b>UR</b>
Rated heating capacity (kW)		1.10	3.10	3.30	6.0
Nozzle diameter (1/100 mm)		76	126	130	175
Reduced flow rate (W)		400	900	1600	1800
Primary air (mm)		1	1	0.5	1
<b>2 Natural Gas G20 - 25 mbar</b>		<b>AUX</b>	<b>R</b>	<b>UR-3c</b>	<b>UR</b>
Rated heating capacity (kW)		1.10	3.10	3.30	6.0
Nozzle diameter (1/100 mm)		73	120	123	165
Reduced flow rate (W)		400	900	1600	1800
Primary air (mm)		1	1	1	0.5
<b>3 Natural Gas G25.1 - 25 mbar</b>		<b>AUX</b>	<b>R</b>	<b>UR-3c</b>	<b>UR</b>
Rated heating capacity (kW)		1.10	3.10	3.30	6.0
Nozzle diameter (1/100 mm)		76	135	140	190
Reduced flow rate (W)		400	900	1600	1800
Primary air (mm)		1	1	1	0.5
<b>4 Natural Gas G2.350 - 13 mbar</b>		<b>AUX</b>	<b>R</b>	<b>UR-3c</b>	<b>UR</b>
Rated heating capacity (kW)		1.10	3.10	3.30	6.0
Nozzle diameter (1/100 mm)		100	175	180	280
Reduced flow rate (W)		400	900	1600	1800
Primary air (mm)		1	1	2	3



5 LPG G30/31 - 30/37 mbar	AUX	R	UR-3c	UR
Rated heating capacity (kW)	1.10	3.10	3.30	6.0
Nozzle diameter (1/100 mm)	48	85	87	115
Reduced flow rate (W)	400	1100	1800	1800
Primary air (mm)	1.5	8	1.5	12
Rated flow rate G30 (g/h)	80	225	240	436
Rated flow rate G31 (g/h)	79	221	236	429
6 LPG G30/31 - 37 mbar	AUX	R	UR-3c	UR
Rated heating capacity (kW)	1.10	3.10	3.30	6.0
Nozzle diameter (1/100 mm)	48	80	82	110
Reduced flow rate (W)	450	1100	2000	1800
Primary air (mm)	1.5	10	2	12
Rated flow rate G30 (g/h)	80	225	240	436
Rated flow rate G31 (g/h)	79	221	236	429
7 Town gas G110 - 8 mbar	AUX	R	UR-3c	UR
Rated heating capacity (kW)	1.10	3.10	3.10	3.80
Nozzle diameter (1/100 mm)	132	250	250	310
Reduced flow rate (W)	400	900	1400	1400
Primary air (mm)	1	1	1.5	1.5

The nozzles not provided are available at Authorised Service Centres.

## Electrical connection



See General safety instructions.

### General information

Check the mains characteristics against the data indicated on the plate.

The identification plate bearing the technical data, serial number and brand name is visibly positioned on the appliance.

Do not remove this plate for any reason.

The appliance must be connected to ground using a wire that is at least 20 mm longer than the other wires.

 
The appliance can work in the following modes:

### 65 cm models (A) and 75 cm models (B)

#### 220-240 V 1N~

3 x 1.5 mm<sup>2</sup>

three-core cable




### 90 cm models (C)

#### 220-240 V / 380-415 V 2N~

6 x 1.5 mm<sup>2</sup>

 
six-core cable



#### 220-240 V

3 x 6 mm<sup>2</sup>

 
three-core cable



#### 220-240 V 3~

4 x 6 mm<sup>2</sup>

 four-core cable



The values indicated refer to the cross-section of the internal conductor.



The aforementioned power cables are sized taking into account the coincidence factor (in compliance with standard EN 60335-2-6).



Use the supplied jumper for each connection, if any

### Fixed connection

Fit the power line with an all-pole circuit breaker with a contact separation distance sufficient to provide complete disconnection in category III overvoltage conditions, pursuant to installation

regulations.

**For the Australian/New Zealand market:**

The circuit breaker incorporated in the fixed connection must comply with AS/NZS 3000.

**Power limitation procedure**



- This procedure is restricted to the installer.
- The appliance is factory set to maximum power.

In order to modify the maximum power absorbed by the appliance, you have to access the user menu (see “User menu”). The power limitation option, as well as the first that is proposed, is marked with the code **110**.

The front and rear right zone displays indicate the numbers associated with the factory set power (expressed in kW):



**7.4** (7.4 kW). Use the scroll bar on the right to modify the power: press the left part to decrease it and the right part to increase it.

The Eco-Logic Advance function increases or decreases the power level in steps of 0.1 kW at each touch.

To exit from the user menu, see the “User menu” chapter.

**Section cut from the countertop**

**Safety instructions for positioning and installation**




See General safety instructions.

- Installation can be carried out on various materials such as masonry, metal, solid wood or plastic laminated wood as long as they are heat resistant (>90°C).
- Veneers, adhesives or plastic coatings on adjacent furniture should be temperature-resistant (>90°C), otherwise they might warp over time.
- If the piece of furniture does not have the required recess opening, either it will have to be cut or masonry work carried out by a competent technician.
- The minimum clearance between exhaust hoods and the cooking surface must be at least the distance indicated in the exhaust hood installation instructions.
- The minimum clearances must also be

respected for the edges of the hob on the back as indicated in the assembly instructions.


- If the appliance is to be installed above an oven, the oven must be fitted with a cooling fan.

**Appliance overall dimensions (mm)**

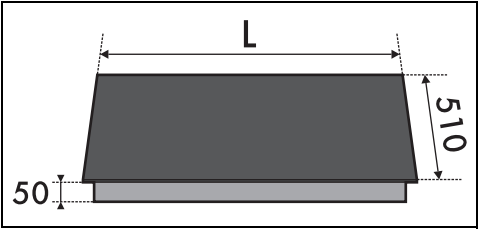

	L
Models A 35 cm	350
Models B 65 cm	650
Models C 90 cm	900

**Built-in cabinet dimensions (mm)**

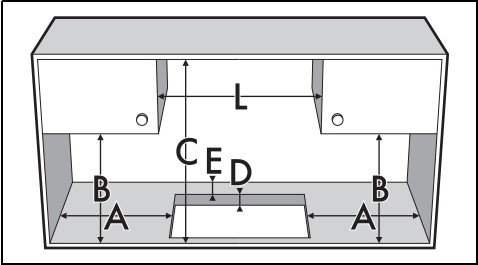



A	min. 200
B	min. 460
C	min. 750
D	40 - 60
E	min. 50
	min. 650 - models A 65 cm
L	min. 750 - models B 75 cm
	min. 900 - models C 90 cm

**Hob seal**


To prevent leakage of liquid between the frame of the hob and the countertop, place the adhesive seal provided along the entire outer

edge of the hob before assembly.

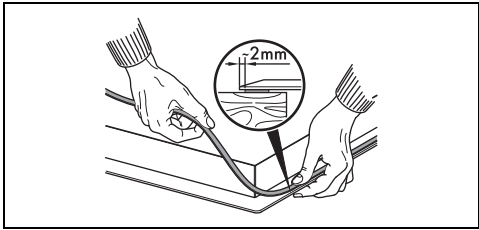

 Do not use silicone to secure the hob. This would make it impossible to remove the hob without damaging it.

**Semi-flush mounting (mm)**

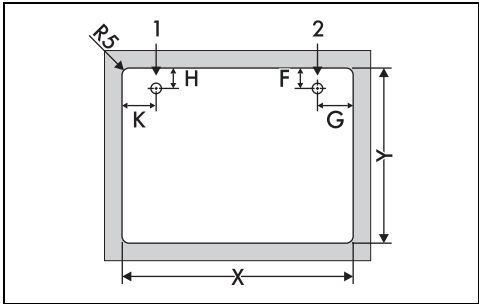


	X	Y	F	G	H	K
Mod. A 65 cm	555 - 560	482 - 486	69	85	35	93
Mod. B 75 cm	719 - 724	482 - 486	69	53	35	66
Mod. C 90 cm	844 - 848	482 - 486	70	112	35	75
1	Gas connection					
2	Electrical connection					

**Mounting**

**Over built-in oven unit**

The clearance between the hob and the kitchen units or other built-in appliances must be enough to ensure sufficient ventilation and air discharge. If installed above an oven, a space must be left between the bottom of the hob and the top of


the appliance installed below.

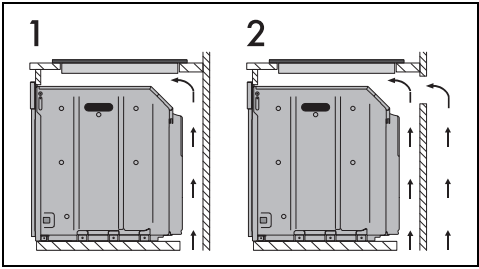


- 1 Opens on bottom
- 2 Opens on bottom and back

**On an empty kitchen**

If there are other pieces of furniture under the hob, a double-layer wooden base must be installed at least 20 mm from the bottom of the hob to avoid any accidental contact. It must only be possible to remove the double-layer base using suitable equipment.

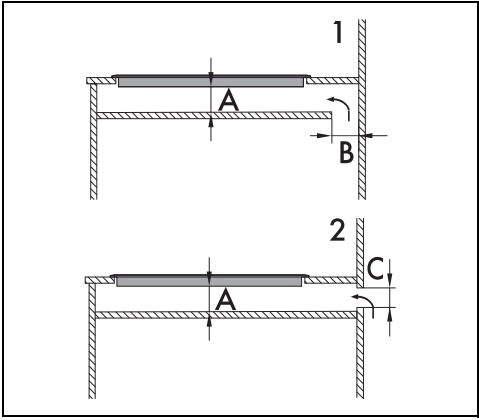


- 1 Opens on bottom
- 2 Opens on back
- A min. 20 mm - max. 50 mm
- B max. 50 mm
- C max. 50 mm

 Failure to install the double-layer wooden base exposes the user to possible accidental contact with sharp or hot parts.

**Fastening to the built-in cabinet**

To ensure the hob is fixed and centred as accurately as possible, the clips provided must be positioned as described below:

1. Fit the clips by gently pressing them horizontally into the appropriate space.
2. Then turn them upwards to fix them in place.

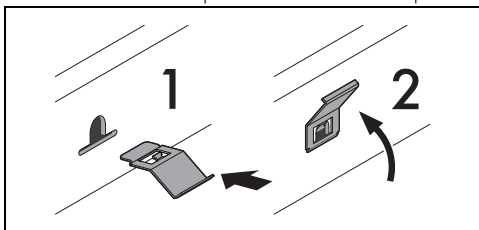

## Instructions for the installer

- If you use a plug to connect to the power supply, the plug must be accessible after installation.
- Do not bend or trap the power cable.
- The appliance must be installed according to the installation diagrams.
- Do not try to unscrew or force the threaded elbow of the fitting. You may damage this part of the appliance, which may void the manufacturer's warranty.
- Use soap and water to check for gas leaks on all connections. DO NOT use naked flames to search for leaks.
- Turn on all the burners separately and at then all together to make sure that the gas valve, burner and ignition are working properly.
- Turn the burner knobs to the minimum position and check that the flame is stable for each individual burner and all the burners together.
- If the appliance does not work correctly after having carried out all the checks, contact your local Authorised Service Centre.
- Once the appliance has been installed, please explain to the user how to use it correctly.