

PX364LMB
PX375LMB
PX375MB

MANUALE ISTRUZIONI
PIANO DI COTTURA A GAS

INSTRUCTION MANUAL
GAS COOKING HOB

MANUEL D'UTILISATION
PLAN DE CUISSON À GAZ

GEBRAUCHSANWEISUNG
GASKOCHFELD

GEBRUIKSAANWIJZING
GASKOOKPLAT

MANUAL DE USO
ENCIMERA DE COCCIÓN A GAS

MANUAL DE UTILIZAÇÃO
PLACA DE COZINHA A GÁS

РУКОВОДСТВО ПО ЭКСПЛУАТАЦИИ
ХОЛОДИЛЬНИК

INSTRUKCJA UŻYTKOWNIKA
PŁYTA KUCHENNA GAZOWA

BRUKSANVISNING
GASHÄLL

BRUGERVEJLEDNING
KOGEPLEDE TIL GAS

KÄYTTÖOPAS
KAASUKEITTOTASO

BRUKSANVISNINGEN
GASSTOPP

IT
EN
FR
DE
NL
ES
PT
RU
PL
SV
DA
FI
NO

ATTENZIONE: LEGGERE QUESTO MANUALE D'USO PRIMA DI UTILIZZARE L'APPARECCHIO

WARNING: READ THIS INSTRUCTION MANUAL BEFORE USING THE APPLIANCE

ATTENTION : LISEZ CE MANUEL D'UTILISATION AVANT D'UTILISER L'APPAREIL

ACHTUNG: DIESE GEBRAUCHSANWEISUNG VOR DER VERWENDUNG DES GERÄTES LESEN.

OPGELET: LEES DE GEBRUIKSAANWIJZING DOOR ALVORENS HET APPARAAT TE GEBRUIKEN

ATENCIÓN: LÉASE ESTE MANUAL DE USO ANTES DE UTILIZAR EL APARATO

ATENÇÃO: LEIA ESTE MANUAL DE UTILIZAÇÃO ANTES DE UTILIZAR O APARELHO

ВНИМАНИЕ: ПРОЧИТАЙТЕ ЭТО РУКОВОДСТВО ПЕРЕД ИСПОЛЬЗОВАНИЕМ ПРИБОРА

UWAGA: PRZED UŻYCIEM URZĄDZENIA PRZECZYTAĆ NINIEJSZĄ INSTRUKCJĘ OBSŁUGI

VARNING: LÄS DENNA BRUKSANVISNING INNAN NI ANVÄNDER APPARATEN

ADVARSEL: LÆS DENNE MANUAL OMHYGGELIGT, INDEN DU TAGER APPARATET I BRUG

VAROITUS: LUE TÄMÄ OHJEKIRJA ENNEN LAITTEEN KÄYTTÖÄ

OBS: LES DENNE BRUKSANVISNINGEN FØR DU BRUKER PRODUKTET

PRECAUTIONS	23
General safety instructions	23
Installation	26
Appliance purpose	27
This user manual	27
Manufacturer's liability	28
Identification plate	28
Disposal	28
Energy efficiency information	28
To save energy	28
How to read the user manual	28
DESCRIPTION	29
General description	29
USE	30
Precautions	30

Using the hob	30
CLEANING AND MAINTENANCE	31
Cleaning the hob	31
Cleaning the surfaces	31
What to do if...	32
INSTALLATION	32
Gas connection	32
Gas types and Countries	36
Burner and nozzle characteristics tables	36
Electrical connection	37
Section cut from the countertop	38
Mounting	39
Fastening to the built-in cabinet	39
Instructions for the installer	40

We advise you to read this manual carefully, which contains all the instructions for maintaining the appliance's aesthetic and functional qualities. For further information on the product: www.smeg.com

These instructions apply only to the destination countries listed on the appliance's data plate.

This is a class 3 built-in hob.

PRECAUTIONS

General safety instructions

Risk of personal injury

- **CAUTION:** During use the appliance and its accessible parts become very hot. Keep children well away from the appliance.
- Protect hands with heat resistant gloves during use.
- Never try to put out a fire or flames with water: Turn off the appliance and smother the flames with a fire blanket or other appropriate cover.
- This appliance may only be used by children aged 8 years and over, and by people of reduced physical, sensory or mental capacity, or lacking in experience in the use of electrical appliances, provided that they are supervised or have been given instructions on the safe use of the appliance and of the hazards associated with it.
- Children must not play with the appliance.
- Keep children under the age of eight at a safe distance unless they are constantly supervised.
- Keep children under the age of 8 away from the appliance when it is in use.
- Cleaning and maintenance must not be carried out by unsupervised children.

- Make sure that the flame-spreader crowns are correctly positioned in their housings with their respective burner caps.
- The cooking process must always be kept under control. A short cooking process must be continuously monitored.
- **CAUTION:** Cooking foods containing fat and/or oil without monitoring them can be dangerous and can cause a fire.
- Fats and oils can catch fire if they overheat. Do not leave the appliance unattended while preparing foods containing oils or fats. If fats or oils catch fire, never put water on them. Place the lid on the saucepan and turn off the burner.
- Do not place metal objects, such as dishes or cutlery, on the surface of the hob during cooking as they may overheat.
- **WARNING:** leaving food unattended when cooking using fat or oil can be dangerous and can cause a fire. **DO NOT** attempt to extinguish a fire with water. Turn off the appliance and smother the flames, for example with a lid or a blanket.
- Do not cook foods in closed tins or containers or plastic containers.
- Do not insert pointed metal objects (cutlery or utensils) into the slots in the appliance.
- Do not use or store flammable materials near the appliance or directly underneath the hob.
- Switch off the appliance immediately after use.
- Do not pull the cable to unplug the appliance (if present).
- **DO NOT USE AEROSOLS IN THE VICINITY OF THIS APPLIANCE WHILST IT IS IN USE.**
- **DO NOT MODIFY THIS APPLIANCE.**
- Always wear personal protective equipment (PPE) before carrying out any work on the appliance (installation, maintenance, positioning or moving).
- Do not clean the appliance if it is still hot or in operation.
- Before performing any work on the appliance, switch off the power supply.
- Do not try to repair the appliance yourself or without the assistance of a qualified technician.
- If the power cable becomes damaged, contact technical support immediately to arrange for it to be replaced in order to avoid possible hazards.
- **CAUTION:** A gas cooking appliance produces heat, humidity and combustion products in the room where it is installed. Make sure there is

- good ventilation, especially when the appliance is in use: keep the natural ventilation openings open or install a mechanical ventilation device.
- Intensive and prolonged use of the appliance may require additional ventilation, for example opening a window or more effective ventilation; for example by increasing the power of any mechanical suction devices.
 - This appliance is not designed to be installed or operated with aftermarket lids or covers.

Risk of damaging the appliance

- Do not sit on the appliance.
 - Do not use the appliance as a support surface.
 - Do not obstruct ventilation openings and heat dispersal slots.
 - Do not use the hob if the pyrolytic cycle is taking place inside any oven installed below.
 - Do not use steam jets to clean the appliance.
 - Never leave the appliance unattended during cooking operations where fats or oils could be released, as these could then heat up and catch fire. Be very careful.
 - Fire hazard: Never leave objects on the cooking surfaces.
- DO NOT FOR ANY REASON USE THE APPLIANCE AS A SPACE HEATER.
 - Cooking vessels or griddle plates should be placed inside the perimeter of the hob.
 - All pans must have smooth, flat bottoms.
 - If any liquid does boil over or spill, remove the excess from the hob.
 - Take care not to spill acid substances such as lemon juice or vinegar on the hob.
 - Do not spill sugar or sweet mixtures on the hob during cooking.
 - Do not place materials or substances that could melt or catch fire (paper, plastic or aluminium foil) on the appliance while it is in use.
 - Place the cookware directly onto the grids above the burners.
 - Do not put empty pans or frying pans on burners that are lit.
 - Do not use rough or abrasive materials or sharp metal scrapers.
 - Do not use cleaning products containing chlorine, ammonia or bleach on parts made of steel or that have metallic surface finishes (e.g. anodizing, nickel- or chromium-plating).
 - Do not wash removable parts such as the hob pan support grids, flame-spreader crowns

and burner caps in the dishwasher.

- This appliance is not designed to operate with external timers or with remote-control systems.

Installation

• **THIS APPLIANCE MUST NOT BE INSTALLED IN BOATS OR CARAVANS.**

- This appliance must not be installed on a dishwasher.
- Position the appliance into the cabinet cut-out with the help of a second person.
- Before installation, make sure that the local distribution conditions (type and pressure of the gas) and the regulation of the appliance are compatible.
- This appliance is not connected to a system for extracting combustion products. It should be installed and connected in compliance with current installation regulations. Pay particular attention to the requirements regarding ventilation.
- The settings for this appliance are shown on the gas settings label.
- Have the gas connection performed by authorised personnel.
- Have the electrical connection performed by authorised technical personnel.
- Installation using a hose must

be carried out so that the length of the hose does not exceed 2 metres when fully extended for steel hoses and 1.5 metres for rubber hoses.

- The gas connection hoses must not come into contact with moving parts of the built-in module (for example a drawer) and must not be routed through a space that could cause it to be pinched.
- If required, use a pressure regulator that complies with current regulations.
- After carrying out any operation, check that the tightening torque of gas connections is between 10 Nm and 15 Nm.
- At the end of the installation, check for any leaks with a soapy solution, never with a flame.
- Check that the carcass has the required openings.
- Check that the carcass material is heat resistant.
- Installation and servicing should be carried out by qualified personnel in accordance with current standards.
- The appliance must be connected to earth in compliance with electrical system safety standards.
- Use cables that can withstand temperatures of at least 90°C.
- Run the power cable in the rear

part of the unit. Make sure that it does not come into contact with the lower part of the hob or a built-in oven below it.

- Be careful when connecting additional electrical appliances. Connection cables must not come into contact with hot cooking zones.
- The tightening torque of the screws of the terminal supply wires must be 1.5 - 2 Nm.
- The power cable must only be installed or replaced by a qualified technician.
- If the power cable becomes damaged, contact technical support immediately to arrange for it to be replaced in order to avoid possible hazards.
- Always use any necessary/required personal protective equipment (PPE) before performing any work on the appliance (installation, maintenance, positioning or movement).
- Before performing any work on the appliance, switch off the power supply.
- Allow the appliance to be disconnected after installation, via an accessible plug or a switch in the case of a fixed connection.
- Fit the power line with an all-pole circuit breaker with a contact separation distance sufficient to provide complete

disconnection in category III overvoltage conditions, pursuant to installation regulations.

- You should make sure that the appliance is working correctly (rotation of knobs, positioning of the pan supports etc.) only once it has been installed and secured to the unit.
- This appliance can be used up to a maximum altitude of 2,000 metres above sea level.

Appliance purpose

This appliance is intended for cooking food in the home environment. Every other use is considered inappropriate. It cannot be used:

- in employee kitchens, shops, offices and other working environments.
- in farms/farmhouses.
- by guests in hotels, motels and residential environments.
- In bed and breakfast accommodation.

This user manual

- This user manual is an integral part of the appliance and must therefore be kept in its entirety and within the user's reach for the whole working life of the appliance.
- Read this user manual carefully before using the appliance.
- The explanations in this manual include images, which describe all that regularly appears on the display. However, it should be kept in mind that the appliance may be equipped with an updated version of the system, and as such, all that appears on the display may differ from those in the manual.

Manufacturer's liability

The manufacturer declines all liability for damage to persons or property caused by:

- use of the appliance other than that specified;
- failure to comply with the instructions in the user manual;
- tampering with any part of the appliance;
- use of non-original spare parts.

Identification plate

The identification plate bears the technical data, serial number and brand name of the appliance. Do not remove the identification plate for any reason.

Disposal



This appliance conforms to the WEEE European directive (2012/19/EU) and must be disposed of separately from other waste at the end of its service life.

The appliance does not contain substances in quantities sufficient to be considered hazardous to health and the environment, in accordance with current European directives.



Power voltage Danger of electrocution

- Disconnect the mains power supply.
- Unplug the appliance.

To dispose of the appliance:

- Cut the power cable and remove it.
- Deliver the appliance to the appropriate recycling centre for electrical and electronic equipment waste, or return it to the retailer when purchasing an equivalent product, on a one for one basis.

Our appliances are packaged in non-polluting and recyclable materials.

- Deliver the packing materials to the appropriate recycling centre.



Plastic packaging Danger of suffocation

- Do not leave the packaging or any part of it unattended.
- Do not let children play with the plastic bags.

Energy efficiency information

The information according to the European ecodesign directive can be found in a separate document together with the product instructions. This information can be found in the "Product information sheet" that can be downloaded from the page for the specific product on the website.

To save energy

- The diameter of the base of the pan must not extend beyond the lines printed on the glass ceramic surface.
- Pans must not be placed outside the perimeter of the hob or on the display.
- When buying a pan, check whether the diameter indicated is that of the base or the top of the pan, as the top is almost always larger than the base.
- When preparing dishes with long cooking times, you can save time and energy by using a pressure cooker, which also helps to retain vitamins contained in the food.
- Make sure that the pressure cooker contains enough liquid as, if there is not enough and it overheats, this may cause damage to both the pressure cooker and the cooking zone.
- If possible, always cover pans with a suitable lid.
- Choose a pan suitable for the quantity of food to be cooked. A large, half-empty saucepan leads to a waste of energy.



Under certain circumstances, if the hob and the oven are used at the same time, the maximum power limit of the electrical system might be exceeded.

How to read the user manual

This user manual uses the following reading conventions:





Warning/ Caution



Information/ Advice

DESCRIPTION

General description

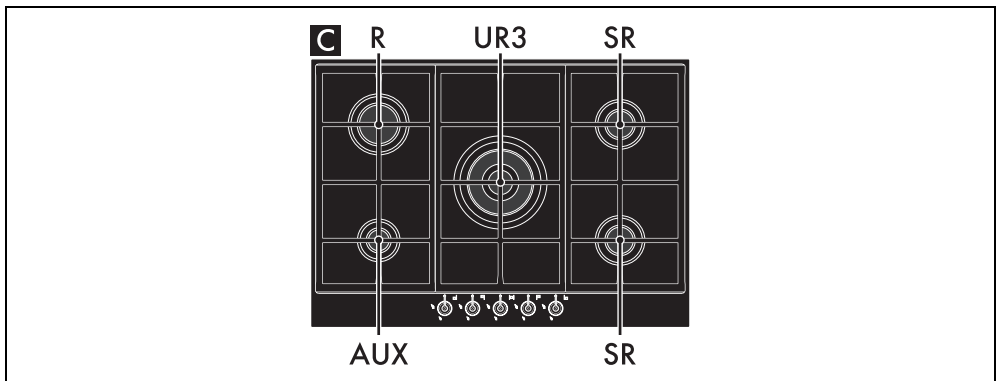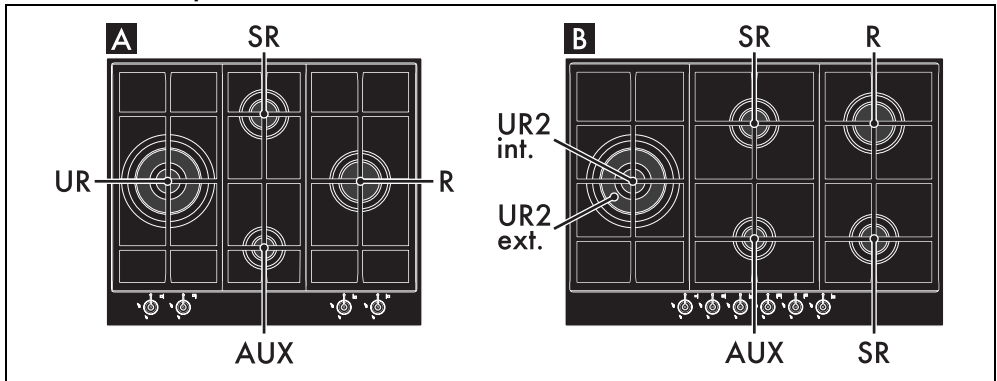




A = 60 cm models.








B = 75 cm models with side ultra-rapid burner.

C = 75 cm models with central ultra-rapid burner.





- AUX = Auxiliary Burner
- SR = Semi-rapid burner
- R = Rapid Burner
- UR = Ultra-Rapid Burner
- UR2 int. = Internal double-crown Ultra-Rapid burner
- UR2 ext. = External double-crown Ultra-Rapid burner
- UR3 = Triple crown Ultra-Rapid burner

Gas cooking zone

-  Front left cooking zone
-  Rear left cooking zone
-  Rear right cooking zone

-  Front right cooking zone
-  Central zone
-  Left central zone / UR2 ext.
-  Left central zone / UR2 int.
-  Right central zone
-  Rear central zone
-  Front central zone

Burner knobs

For lighting and adjusting the hob burners. Press and turn the knobs anti-clockwise to  in order to light the relative burners. Turn the knobs to the zone between the maximum  and minimum  setting to adjust the flame. Return the knobs to the  position to turn off the burners.

USE

Precautions



See General safety instructions.

A gas leak can cause an explosion.

If you smell gas or there are faults in the gas system:

- Immediately turn off the gas supply or close the valve on the gas cylinder.
- Extinguish all naked flames and cigarettes.
- Do not turn on power switches or appliances and do not remove plugs from power sockets. Do not use phones or mobile phones inside the building.
- Open the window in order to ventilate the room.
- Call customer assistance services or your gas supplier.

Malfunctions

Any of the following indicate a malfunction and you should contact a service centre.

- The burners do not ignite properly.
- It is difficult to keep the burners lit.
- The burners go out when the appliance is in use.
- It is difficult to turn the gas cocks.


Practical tips for using the hob

For better burner efficiency and to minimise gas consumption, use pans with lids and of suitable size for the burner, so that the flames do not reach up the sides of the pan. Once the contents come to the boil, turn down the flame far enough to ensure that the liquid does not boil over.


Burner	Pan diameter
AUX	12 - 18 cm
SR	14 - 24 cm
R	20 - 26 cm
UR - UR2 - UR3	20 - 30 cm

Using the hob


All the appliance's control and monitoring devices are located together on the front panel. The burner controlled by each knob is shown next to the knob. The appliance is equipped with an electronic ignition device. Simply press

the knob and turn it anti-clockwise to the maximum flame symbol, until the burner ignites. If the burner does not light in the first 15 seconds, turn the knob to  and wait 60 seconds before trying again. After lighting, keep the knob pressed in for a few seconds to allow the thermocouple to heat up. The burner may go out when the knob is released: In this case, the thermocouple has not heated up sufficiently. Wait a few moments and repeat the operation. Keep the knob pressed in longer.



In case of an accidental switching off, a safety device will be tripped, cutting off the gas supply, even if the gas cock is open. Return the knob to  and wait at least 60 seconds before lighting it again.

Correct positioning of the flame-spreader crowns and burner caps

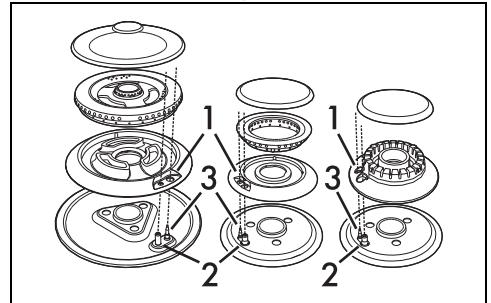


Before lighting the hob burners, make sure that the flame-spreader crowns are correctly positioned in their housings with their respective burner caps. Make sure that the holes 1 in the flame-spreader crowns are aligned with the igniters 3 and thermocouples 2. Also ensure that the flame-spreader crowns are correctly engaged in the burner holes.

Correct positioning of the pan supports

Place the lateral pan supports on the hob (1), making sure that the front lugs are facing


towards the knobs.

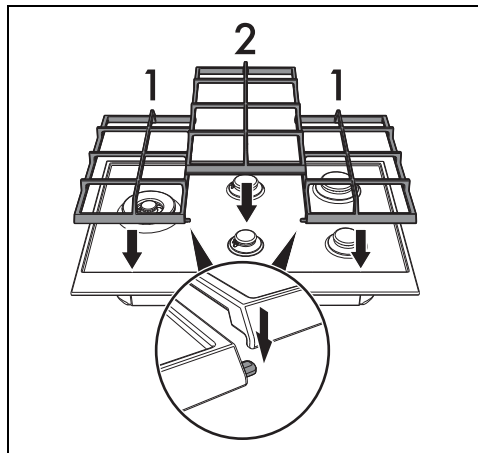

Insert the central pan support (2) by slotting the recesses onto the lugs of the lateral pan supports.

The word "FRONT" is marked under the front of each pan support. The supports should be positioned so that it is facing towards the front of the appliance.

Precautions when using the griddle

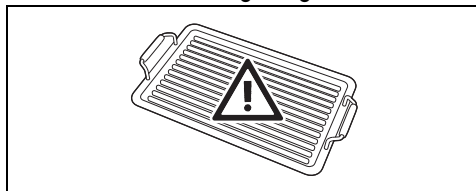

A few precautions are necessary if you wish to use a griddle:

- The griddle must not extend beyond the edge of the hob.
- Do not place the griddle over more than one burner at the same time.
- The griddle can be pre-heated on the burner at maximum power for no more than 10 minutes.
- Make sure that the burner flame does not extend beyond the edge of the griddle.
- Keep a distance of at least 160 mm between the griddle and the side and/or rear wall, especially if it is placed on an Ultra-Rapid burner.
- Never use the griddle for more than 40 minutes.

CLEANING AND MAINTENANCE

Cleaning the hob

Cooking hob pan support grids

Remove the pan support grids and clean them in lukewarm water and non-abrasive detergent. Make sure to remove any encrustations. Dry them thoroughly and return them to the hob.




The continuous contact between the pan supports and the flame can cause modifications to the enamel over time in those parts exposed to heat. This is a completely natural phenomenon which has no effect on the operation of this component.

Flame-spreader crown and burner caps

For easier cleaning, the flame-spreader crowns and the burner caps can be removed. Wash them in hot water and non-abrasive detergent. Carefully remove any encrustation, then wait until they are perfectly dry. Replace the flame-spreader crowns, making sure that they are correctly positioned in their housings with their respective burner caps.

Igniters and thermocouples

For correct operation the igniters and thermocouples must always be perfectly clean. Check them frequently and clean them with a damp cloth if necessary. Remove any dry residues with a wooden toothpick or a needle.

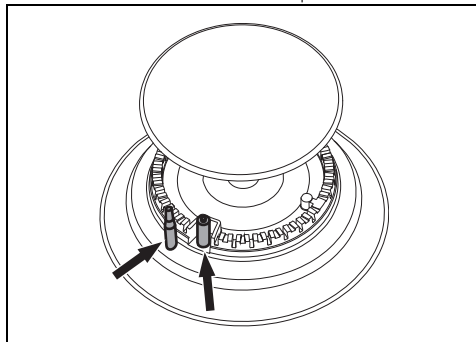

Cleaning the surfaces

To keep the surfaces in good condition, they should be cleaned regularly after use. Let them cool first.

Ordinary daily cleaning

Always and only use specific products that do not contain abrasives or chlorine-based acids. Pour the product onto a damp cloth and wipe the surface, rinse thoroughly and dry with a soft cloth or a microfibre cloth.

Food stains or residues

Do not use steel sponges and sharp scrapers as they will damage the surface. Use normal, non-abrasive products and a wooden or plastic tool, if necessary. Rinse thoroughly and dry with a soft cloth or a microfibre cloth.

What to do if...

The hob does not work:

- Make sure that the hob is connected and that the main switch is turned on.
- Make sure that there is no power failure.
- Make sure that the fuse has not blown. In this case replace the fuse.
- Make sure that the circuit breaker of the residential electrical system has not tripped. In this case, reset the circuit breaker.

The cooking results are unsatisfactory:

- Make sure that the cooking temperature is not too high or too low.
- Make sure that the hob is properly ventilated and that the air inlets are unobstructed.
- Use cookware that is certified and tested for induction cooking.

The hob smokes:

- Let the hob cool down and clean it once cooking is complete.
- Make sure that the food has not spilled out of the pan and use a larger cooking vessel, if needed.

The fuses blow or the circuit breaker of the residential electrical system trips repeatedly.

- Call Technical Support or an electrician.

There are cracks or fissures in the hob:

- Turn off the appliance immediately, disconnect the power supply and contact Technical Support.

INSTALLATION



The appliance must be installed by a qualified technician and according to the regulations in force.

Gas connection




See General safety instructions.

Connection to the gas mains can be made using a continuous wall steel hose in compliance with the guidelines established by the standards in force. To use other types of gas, see the chapter "Adaptation to different types of gas". The appliance's gas connector has a 1/2" external thread (ISO 228-1).

Connection with a steel hose

Make the connection to the gas mains using a continuous wall steel hose whose specifications


comply with the applicable standard.

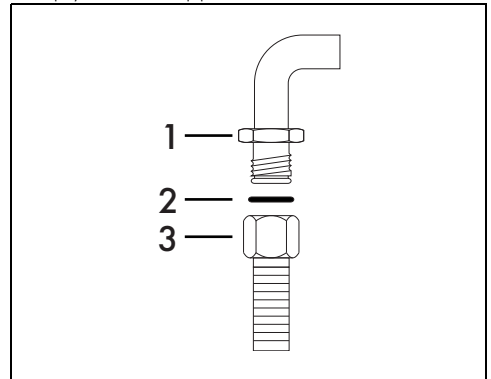

Carefully screw the connector 3 to the gas connector 1 of the appliance, placing the seal 2 between them.

Connection with a steel hose with bayonet fitting


Carry out the connection to the gas mains using a steel hose with bayonet fitting compliant with

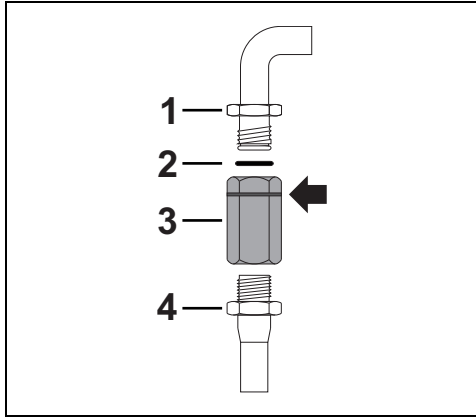

Apply insulating material to the thread of the gas hose connector 4 and screw the adapter 3 onto it. Screw the assembly onto the movable connector 1 of the appliance, inserting the seal provided 2 between them.


Connection with a steel hose with conical fitting

Make the connection to the gas mains using a continuous wall steel hose whose specifications comply with the applicable standard.

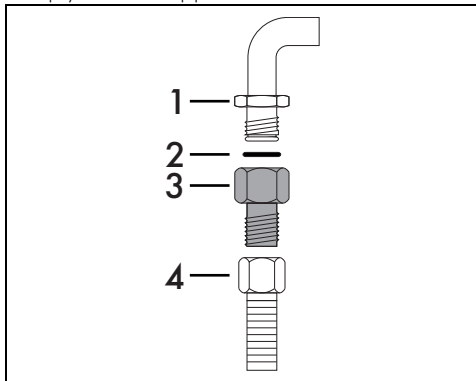

Carefully screw the hose connector 3 to the appliance's gas connector 1 (1/2" thread ISO 228-1), placing the seal 2, provided, between them. Apply insulating material to the thread of connector 3 and then screw the steel hose 4 onto the connector 3.

Connection to LPG

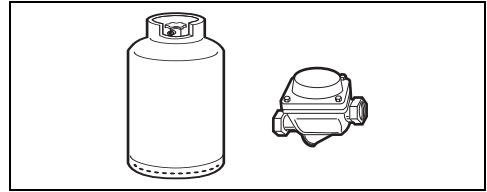

Use a pressure regulator and make the connection on the gas cylinder following the guidelines set out in the standards in force. The supply pressure must comply with the values indicated in the "Burner and nozzle characteristics table".

Room ventilation

The appliance should be installed in rooms that have a permanent air supply in accordance with the standards in force. The room where the appliance is installed must have enough air flow for the regular combustion of gas and the necessary air change in the room itself. The air vents, protected by grilles, must be the right size to comply with current regulations and positioned so that no part of them is obstructed, not even partially.


The room must be kept adequately ventilated in order to eliminate the heat and humidity produced by cooking: In particular, after prolonged use, you are recommended to open a window or to increase the speed of any fans.

Extraction of the combustion products

The combustion products may be extracted by means of hoods connected to a natural draught chimney whose efficiency is certain or via forced extraction. An efficient extraction system requires precision planning by a specialist qualified in this area and must comply with the positions and clearances indicated by the applicable standards.

When the job is complete, the installer must

issue a certificate of conformity.

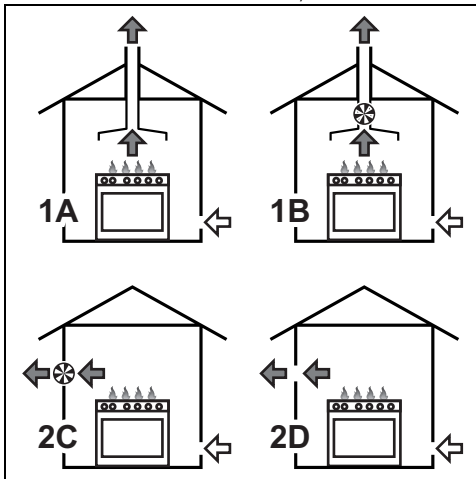

- 1 Extraction using a hood
- 2 Extraction without a hood
- A Extraction with a single natural draught chimney
- B Extraction with a single chimney with extractor fan
- C Extraction directly outdoors with wall- or window-mounted extractor fan
- D Extraction directly outdoors through wall



Air



 
 
Combustion products



Extractor fan

Adaptation to different types of gas


If other types of gas are to be used, the nozzles must be replaced and the primary air must be adjusted. The top of the hob has to be removed in order to replace the nozzles and adjust the burners.




Removing the hob top

1. Disconnect the appliance from the electrical and gas supplies.


2. Pull the knobs upwards to remove them.
3. Remove the pan support grids from the hob.
4. Remove the burner caps, flame-spreader crowns and relative supports from under each burner.
5. Remove the appliance from the cabinet.
6. Remove the reinforcing bracket by unscrewing the relative screw. The bracket is located at the back of the appliance. NB: some models are fitted with two brackets.

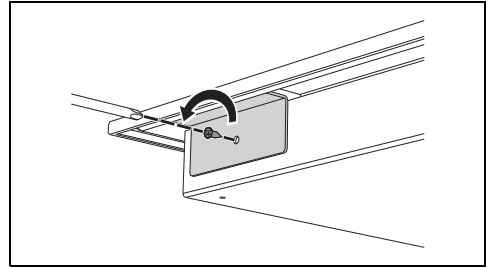


7. Unscrew the fixing screws and remove the plates for each burner.

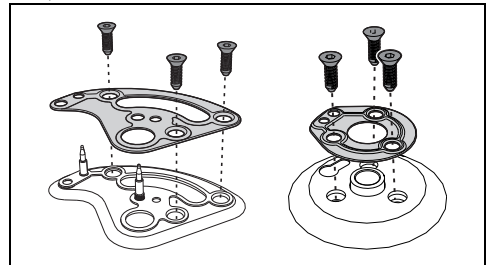

8. Remove the seals under the plates.

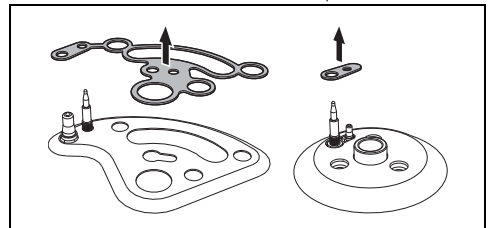

9. Remove the hob.

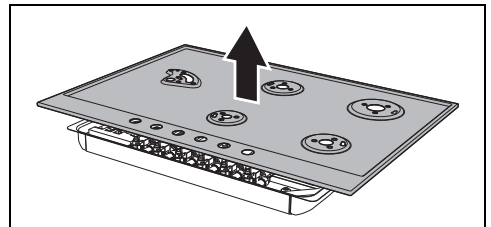


Replacing nozzles


The following should be carried out for each

burner.


1. Loosen the burner support fixing screw.

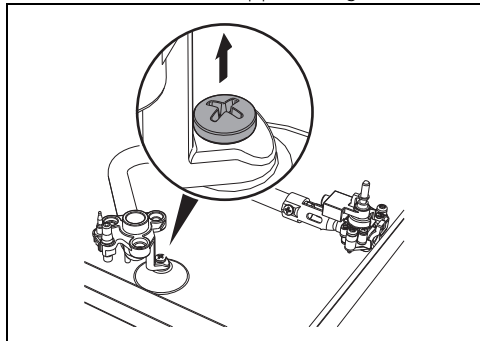

2. Remove the burner support and the relative gas pipe.
3. Lift the lever of the gas tap micro switch (1) and remove it (2).

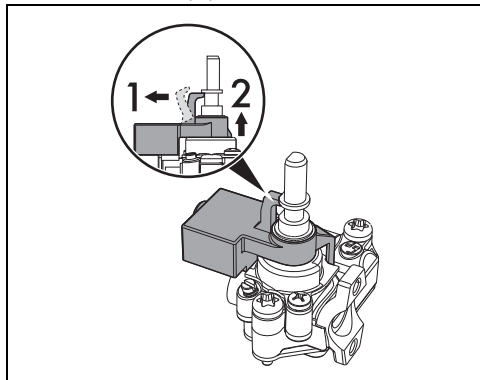

4. Using a 7 mm wrench, remove the nozzle and replace it with one suitable for the new type of gas, following the instructions in the relative tables (see "Types of gas and countries").

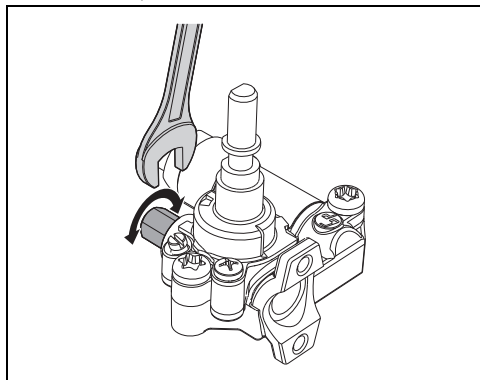


The nozzle tightening torque must be no more than 3 Nm.

Primary air adjustment

After replacing the nozzle, proceed as follows:


1. Loosen the screw A. Adjust the air flow by moving the air regulator B to obtain the distance C given in the relative table (see "Burner and nozzle characteristics tables" - "Primary air (mm)").

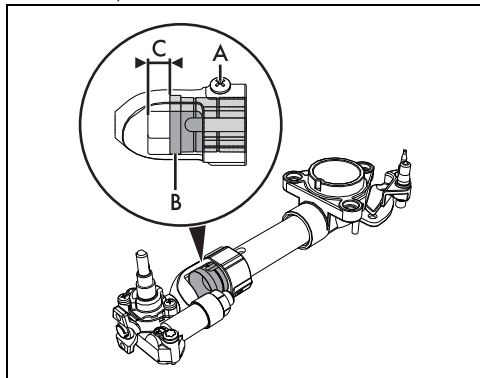

2. After adjusting each burner, reassemble the appliance correctly.

Adjusting the minimum setting for natural or town gas

1. Light the burner and turn it to the minimum position.
2. Remove the gas tap knob and turn the adjustment screw next to the gas cock spindle (depending on the model) until the correct minimum flame is achieved.

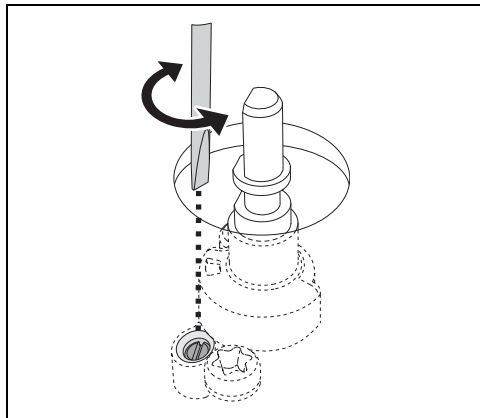

3. Refit the knob and verify that the burner flame is stable.

- Turn the knob rapidly from the maximum to the minimum setting: The flame should not go out.
- Repeat the operation on all the gas taps.

Adjusting the minimum setting for LPG

Tighten the screw located at the side of the cock spindle clockwise all the way.

Lubricating the gas cocks

Over time the gas cocks may become difficult to turn and get blocked. Clean them internally and replace the lubrication grease.



Lubrication of the gas cocks should be performed by a specialised technician.



Following adjustment to a gas other than the one originally set in the factory, replace the gas setting label on the appliance with the one corresponding to the new gas. The label is inserted inside the nozzle pack (where present).

Gas types and Countries

Gas types	IT	GB IE	FR BE	ES	PT	RU	SE DK	FI NO	PL	HU
1 Natural Gas G20										
G20 20 mbar	•	•		•	•	•	•	•	•	
G20/25 20/25 mbar			•							
2 Natural Gas G20										
G20 25 mbar										•
3 Natural Gas G25.1										
G25.1 25 mbar										•
4 Natural Gas G2.350										
G2.350 13 mbar									•	
5 LPG G30/31										
G30/31 28-30/37 mbar	•	•	•	•	•	•				
G30/31 30/30 mbar							•	•		•
6 LPG G30/31										
G30/31 37 mbar									•	
7 Town Gas G110										
G110 8 mbar	•						•			

It is possible to identify the available gas types based on the country the appliance is to be installed in. Refer to the heading number to identify the correct values in the "Burner and nozzle characteristics tables".

Burner and nozzle characteristics tables

1 Natural Gas G20 - 20 mbar	AUX	SR	R	UR	UR2 int.	UR2 ext.	UR3
Rated heating capacity (kW)	1.10	1.80	2.60	3.50	1.10	3.10	4.0
Nozzle diameter (1/100 mm)	73	95	115	132	73	123	140
Primary air (mm)	1	1.5	1	1	1.5	1	1
Reduced flow rate (W)	400	500	750	1600	400	1400	1800
2 Natural Gas G20 - 25 mbar	AUX	SR	R	UR	UR2 int.	UR2 ext.	UR3
Rated heating capacity (kW)	1.10	1.80	2.60	3.50	1.10	3.10	4.0
Nozzle diameter (1/100 mm)	73	87	110	126	73	120	132
Primary air (mm)	1	1	1	1.5	1.5	1.5	1
Reduced flow rate (W)	400	500	750	1600	400	1400	1800

3 Natural Gas G25.1 - 25 mbar	AUX	SR	R	UR	UR2 int.	UR2 ext.	UR3
Rated heating capacity (kW)	1.10	1.80	2.60	3.50	1.0	3.20	4.0
Nozzle diameter (1/100 mm)	76	98	123	145	76	135	150
Primary air (mm)	1	1	0.5	1.5	1	1	1
Reduced flow rate (W)	400	500	750	1600	400	1400	1800
4 Natural Gas G2.350 - 13 mbar	AUX	SR	R	UR	UR2 int.	UR2 ext.	UR3
Rated heating capacity (kW)	1.10	1.80	2.60	3.50	1.10	3.10	4.0
Nozzle diameter (1/100 mm)	100	126	160	190	100	175	200
Primary air (mm)	1	1	1	1.5	1.5	1.5	1.5
Reduced flow rate (W)	400	500	750	1600	400	1400	1800
5 LPG G30/31 - 30/37 mbar	AUX	SR	R	UR	UR2 int.	UR2 ext.	UR3
Rated heating capacity (kW)	1.10	1.80	2.60	3.50	1.10	3.10	4.0
Nozzle diameter (1/100 mm)	48	62	76	87	48	85	95
Primary air (mm)	1.5	1.5	1.5	2	1.5	10	3
Reduced flow rate (W)	400	500	750	1600	400	1400	1800
Rated flow rate G30 (g/h)	80	131	189	254	80	225	291
Rated flow rate G31 (g/h)	79	129	186	250	79	221	286
6 LPG G30/31 - 37 mbar	AUX	SR	R	UR	UR2 int.	UR2 ext.	UR3
Rated heating capacity (kW)	1.10	1.80	2.60	3.50	0.90	3.20	4.0
Nozzle diameter (1/100 mm)	48	60	73	82	45	80	89
Primary air (mm)	1.5	1.5	1.5	2	2	5	3
Reduced flow rate (W)	450	500	800	1600	450	1400	1850
Rated flow rate G30 (g/h)	80	131	189	254	65	233	291
Rated flow rate G31 (g/h)	79	129	186	250	64	229	286
7 Town gas G110 – 8 mbar	AUX	SR	R	UR	UR2 int.	UR2 ext.	UR3
Rated heating capacity (kW)	1.10	1.80	2.60	3.50	1.10	3.10	4.0
Nozzle diameter (1/100 mm)	132	165	210	270	132	240	290
Primary air (mm)	0.5	1	0.5	1	1	1	1.5
Reduced flow rate (W)	400	500	750	1400	400	1400	1400

The nozzles not provided are available at Authorised Service Centres.

Electrical connection



See General safety instructions.

General information

Check the mains characteristics against the data indicated on the plate.


The identification plate bearing the technical data, serial number and brand name is visibly positioned on the appliance.


Do not remove this plate for any reason.

The appliance must be connected to ground using a wire that is at least 20 mm longer than the other wires.

The appliance can work in the following modes:

- 220-240 V 1N~

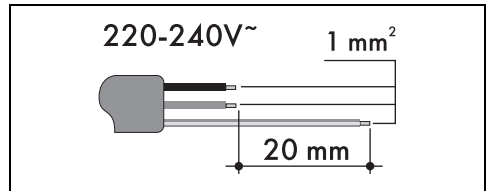



The values indicated refer to the cross-section of the internal conductor.



The aforementioned power cables are sized taking into account the coincidence factor (in compliance with standard EN 60335-2-6).

Fixed connection

Fit the power line with an all-pole circuit breaker with a contact separation distance sufficient to provide complete disconnection in category III overvoltage conditions, pursuant to installation regulations.

For the Australian/New Zealand market:

The circuit breaker incorporated in the fixed connection must comply with AS/NZS 3000.

Connection with plug and socket

Make sure that the plug and socket are of the same type.

Avoid using adapters, gang sockets or shunts as these could cause overheating and a risk of burns.

Section cut from the countertop


Safety instructions for positioning and installation



See General safety instructions.


- Installation can be carried out on various materials such as masonry, metal, solid wood or plastic laminated wood as long as they are heat resistant ($>90^{\circ}\text{C}$).
- Veneers, adhesives or plastic coatings on adjacent furniture should be temperature-resistant ($>90^{\circ}\text{C}$), otherwise they might warp over time.
- If the piece of furniture does not have the required recess opening, either it will have to be cut or masonry work carried out by a competent technician.
- The minimum clearance between exhaust hoods and the cooking surface must be at least the distance indicated in the exhaust hood installation instructions.
- The minimum clearances must also be respected for the edges of the hob on the back as indicated in the assembly instructions.
- If the appliance is to be installed above an oven, the oven must be fitted with a cooling fan.

Appliance overall dimensions (mm)

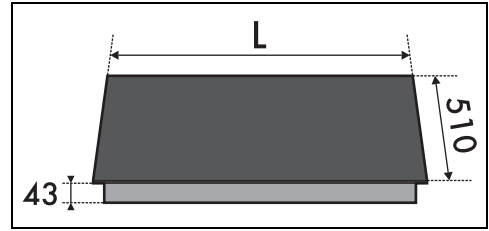

	L
Models A	60 cm
Models B and C	75 cm


Built-in cabinet dimensions (mm)

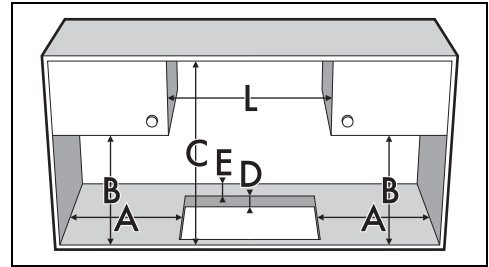

A	min. 150
B	min. 460
C	min. 750
D	20 - 40
E	min. 50
L	min. 600 - models A 60 cm
	min. 750 - models B and C 75 cm


Hob seal

To prevent leakage of liquid between the frame of the hob and the countertop, place the adhesive seal provided along the entire outer edge of the hob before assembly.

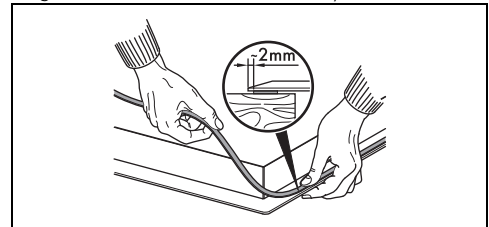

Do not use silicone to secure the hob. This would make it impossible to remove the hob without damaging it.

Semi-flush mounting (mm)

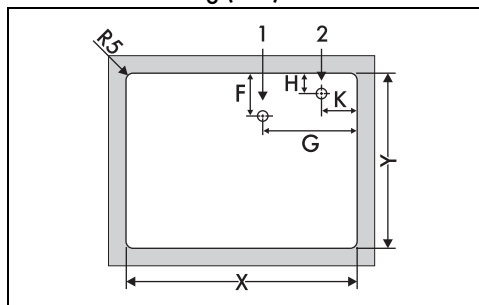

	X	Y	F	G	H	K
Mod. A 60 cm	555 - 560	478 - 482	67	215	53	43
Mod. B 75 cm	655 - 660	478 - 482	67.5	267.5	37	55
Mod. C 75 cm	555 - 560	478 - 482	67.5	270.5	37	100


1 Electrical connection

2 Gas connection

Mounting

Over built-in oven unit

The clearance between the hob and the kitchen units or other built-in appliances must be enough to ensure sufficient ventilation and air discharge. If installed above an oven, a space must be left between the bottom of the hob and the top of the appliance installed below.

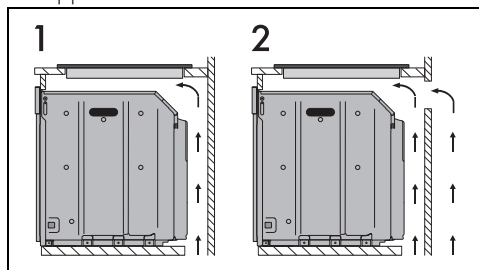


1 Opens on bottom

2 Opens on bottom and back

On an empty kitchen

If there are other pieces of furniture under the hob, a double-layer wooden base must be installed at least 20 mm from the bottom of the hob to avoid any accidental contact. It must

only be possible to remove the double-layer base using suitable equipment.

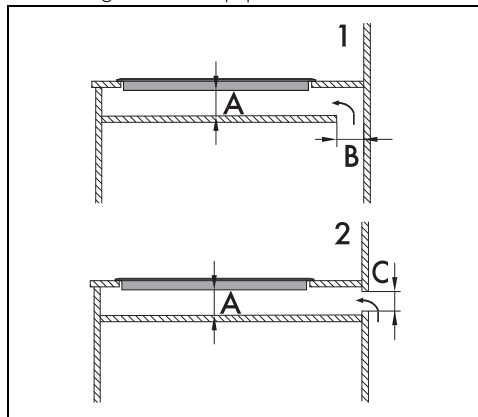

1 Opens on bottom

2 Opens on back

A min. 20 mm - max. 50 mm

B max. 50 mm


C max. 50 mm




Failure to install the double-layer wooden base exposes the user to possible accidental contact with sharp or hot parts.

Fastening to the built-in cabinet


To ensure that the hob is fixed and centred correctly on the built-in cabinet, the mounting brackets provided must be screwed on in correspondence with the holes in the bottom casing.

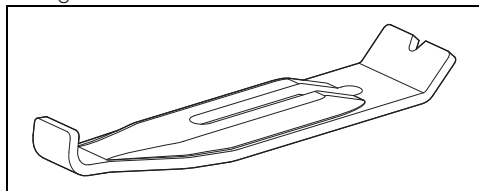


- Models A 60 cm:

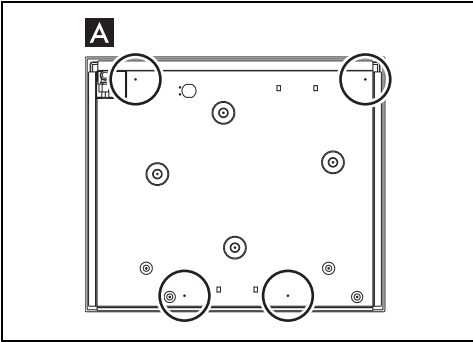


- Models B 75 cm:

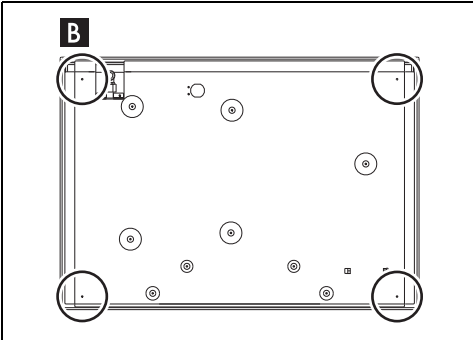

- Models C 75 cm:

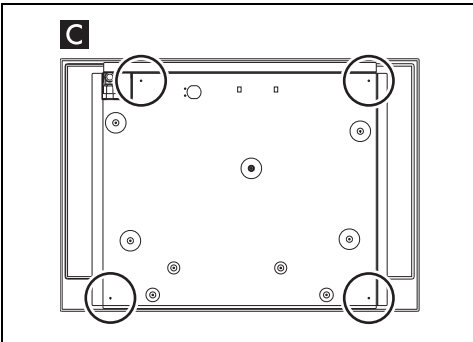

Screw the mounting brackets into the holes shown to fasten the hob correctly to the built-in structure.

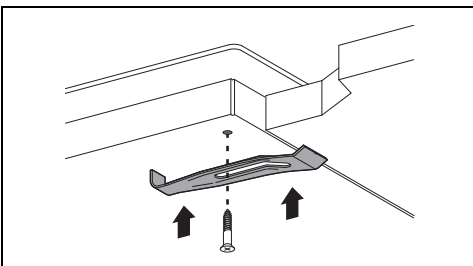

Instructions for the installer

- If you use a plug to connect to the power supply, the plug must be accessible after installation.
- Do not bend or trap the power cable.
- The appliance must be installed according to the installation diagrams.
- Do not try to unscrew or force the threaded elbow of the fitting. You may damage this part of the appliance, which may void the manufacturer's warranty.
- Use soap and water to check for gas leaks on all connections. **DO NOT** use naked flames to search for leaks.
- Turn on all the burners separately and then all together to make sure that the gas valve, burner and ignition are working properly.
- Turn the burner knobs to the minimum position and check that the flame is stable for each individual burner and all the burners together.
- If the appliance does not work correctly after having carried out all the checks, contact your local Authorised Service Centre.
- Once the appliance has been installed, please explain to the user how to use it correctly.

Il costruttore si riserva di apportare senza preavviso tutte le modifiche che riterrà utili al miglioramento dei propri prodotti. Le illustrazioni e le descrizioni contenute in questo manuale non sono quindi impegnative ed hanno solo valore indicativo.

The manufacturer reserves the right to make any changes deemed useful for improvement of its products without prior notice. The illustrations and descriptions contained in this manual are therefore not binding and are merely indicative.

Le fabricant se réserve la faculté d'apporter, sans préavis, toutes les modifications qu'il jugera utiles pour l'amélioration de ses produits. Les illustrations et les descriptions figurant dans ce manuel ne sont pas contraignantes et n'ont qu'une valeur indicative.

Der Hersteller behält sich vor, ohne vorherige Benachrichtigung alle Änderungen vorzunehmen, die er zur Verbesserung seiner Produkte für nützlich erachtet. Die in diesem Handbuch enthaltenen Illustrationen und Beschreibungen sind daher unverbindlich und dienen nur zur Veranschaulichung.

De fabrikant behoudt zich het recht voor zonder waarschuwing alle wijzigingen aan te brengen die hij nodig acht om zijn producten te verbeteren. De afbeeldingen en de beschrijvingen die aanwezig zijn in deze handleiding zijn niet bindend, en hebben enkel een aanduidende waarde.

El fabricante se reserva el derecho a aportar sin aviso previo todas las modificaciones que considere útiles para la mejora de sus propios productos. Las ilustraciones y las descripciones contenidas en este manual no comprometen, por tanto, al fabricante y tienen un valor meramente indicativo.

O fabricante reserva-se o direito de efetuar, sem aviso prévio, qualquer modificação que vise o melhoramento dos respetivos produtos. As ilustrações e descrições contidas neste manual, não são, por isso, vinculativas e possuem apenas valor indicativo.

Производитель оставляет за собой право вносить без предупреждения все изменения, которые посчитает полезными для улучшения собственной продукции. Рисунки и описания, содержащиеся в данном Руководстве по эксплуатации, не имеют обязательств и имеют ознакомительный характер.

Producent zastrzega sobie prawo do nanoszenia, bez uprzedniego powiadomienia, wszelkich zmian, które uzna za stosowne w celu ulepszenia swoich produktów. Rysunki i opisy zawarte w niniejszej instrukcji nie są zobowiązujące i mają charakter przykładowy.

Tillverkaren förbehåller sig rätten att genomföra alla de ändringar som anses nödvändiga för att förbättra de egna produkterna utan att meddela detta i förväg. De illustrationer och beskrivningar som finns i aktuell manual är därmed inte bindande utan endast indikativa.

Fabrikanten forbeholder sig retten til, uden varsel, at udføre alle de ændringer, der vurderes nyttige for at forbedre egne produkter. Tegningerne og beskrivelserne i denne manual er derfor kun vejledende og ikke bindende.

Valmistaja pidättää itsellään oikeuden tehdä ohjeisiin mielestään tarpeellisia muutoksia ilman ennakkoilmoitusta. Tässä oppaassa olevat kuvat ja piirroset eivät näin ollen ole sitovia, vaan ne annetaan vain viitteellisessä mielessä.

Produsenten forbeholder seg rett til endringer på sine produkter grunnet tekniske fremskritt, uten forutgående varsel. Illustrasjonene og beskrivelsene i denne bruksanvisningen er derfor ikke bindende og skal kun betraktes som retningsgivende.

تحتفظ جهة التصنيع بحقها في إجراء أية تغييرات تعتبر مفيدة لتحسين منتجاتها دون إخطار مسبق. وبالتالي فإن الرسومات والأوصاف الواردة في هذا الدليل ليست ملزمة وإنما هي لغرض التوضيح فقط.

Spazio per targhetta caratteristiche
Space for rating plate
Espace pour la plaque signalétique
Platz für Typenschild
Plaats voor typeplaatje
Espacio para la placa de características
Espaço para a chapa de características
Место для таблички с характеристиками
Miejsce na tabliczkę znamionową
Utrymme för Identifikationsdekalen
Plads til typeskilt
Tila arvokilvelle
Plas for typeskilt
مساحة مخصصة للوحة التصنيف

SMEG S.p.A.

Via Leonardo Da Vinci, 4

42016 San Girolamo di Guastalla (RE)

ITALY

www.smeg.com

B240306

91477A540/B